


INSTALLATION

The line diagrams below show two suggested installation options. The first (Figure 1) uses an eductor loop with ambient or compressed air, while the second (Figure 2) uses regulated compressed air without an eductor loop. Table 1 below the diagrams shows suggested line sizes for each pump size. These line sizes are general guidelines only; the customer must select and/or verify the line sizes needed for each application.

NOTE: The pump must be installed with flooded suction.

Figure 1. Suggested Installation WITH an eductor loop

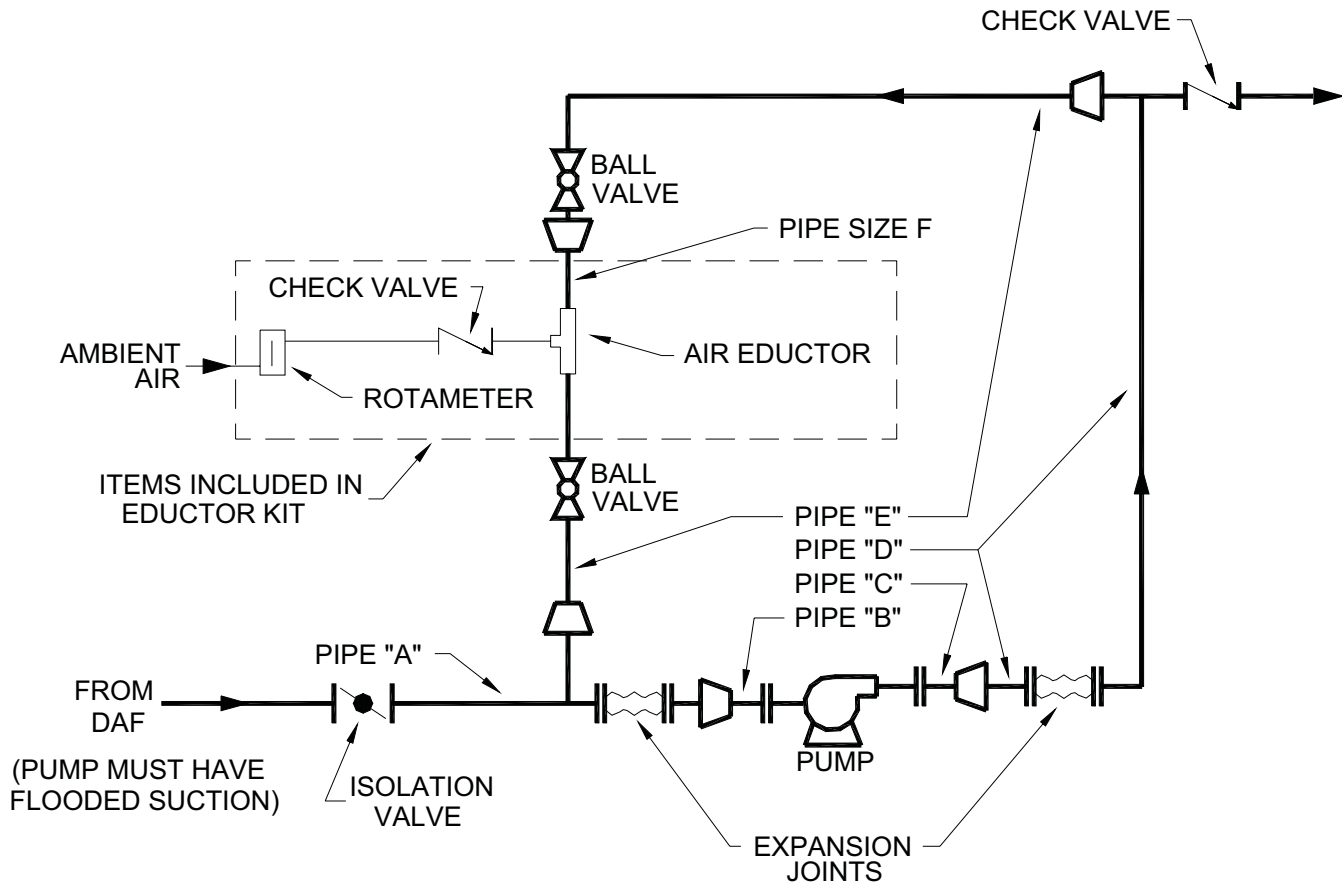

INSTALLATION DIAGRAM - AIR INJECTION WITH AIR EDUCTOR