

Chapter 20 OLSEN FURNACE

MANUFACTURER/DISTRIBUTOR:

WOLSELEY Inc.

4200, Hickmore

St-Laurent, QC, H4T 1K2

Phone: (514) 344-9378

Fax : (514) 344-9341

20.1 OLSEN FURNACE HML80CNX2

Fuel fired furnace

Olsen
Heating & Cooling Products

oil furnaces

SHOP DRAWING

Reviewed by: Samuel Charbonneau

Date: 14 Juin, 2016

Reviewed



Reviewed as noted



Resubmit



Out for approval

SIFEC NORTH INC.



Lowboy

BCL, BFL, BML, BMLV
60,000 – 224,000 BTU



Highboy

HML, HMLV, HTL, HTLV
60,000 – 140,000 BTU



Multiposition

WML, WMLV, MPL
60,000 – 123,000 BTU




keeping families warm for more than 60 years

Higher AFUE translates into significantly lower fuel bills

(AFUE = Annual Fuel Utilization Efficiency)

If your furnace is 25 years old or older, chances are that it is only 55% or 65% efficient. Refer to the chart at right to see the savings you could realize by installing an Olsen today.

Higher AFUE = More heat for every dollar spent. AFUE works much like the miles-per-gallon rating on a car – the higher the rating, the lower the fuel costs. Installing a higher AFUE furnace can also equal cash back – energy-efficiency rebates or incentives may be available from the government or utility in your area.

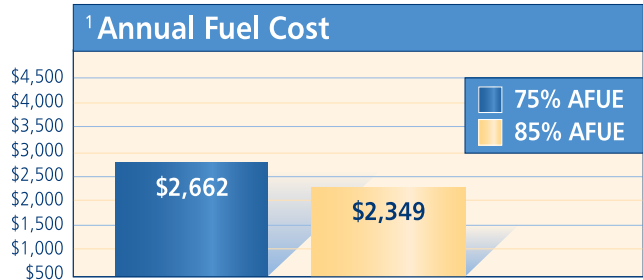

Superior heat exchanger design delivers higher AFUE!

Double pass heat exchanger – Constructed of heavy-gauge metal, the Olsen high-efficiency heat exchanger has a large surface area to maximize heat transfer into your home. The two paths create added flue gas turbulence, which increases efficiency.

Dual clean outs – Easily-accessible dual clean outs allow for quick and efficient routine maintenance of the heat exchanger.



Cabinet vestibule protects burner and controls while reducing noise



Virtually all Olsen furnaces come standard with a vestibule or it is available as an option. The vestibule protects the controls and burner from accidental contact and reduces the operational noise of the furnace.

¹ This chart depicts potential energy costs. Data used for this example was 80,000 BTU heat load, 6000 Degree Days F per annum, fuel cost @ \$3 per gallon or \$0.79 per litre. Actual costs may vary, depending on your local weather patterns and fuel rates, lifestyle and the air infiltration integrity of your building envelope. This chart is for demonstration purposes only and does not constitute a guarantee of performance for any product.

oil furnace selection guide

FURNACE MODEL

FEATURES	LOWBOY				HIGHBOY				MULTIPOSITION		
	BML	BMLV	BCL	BFL	HML	HMLV	HTL	HTLV	WML	WMLV	MPL
Burner											
Beckett burner	•	•	•	•	•	•	•	•	•	•	•
Beckett NX burner											
Riello burner	•	•	•	•	•	•	•	•	•	•	•
Clean cut oil pump & flame retention burner head	•	•	•	•	•	•	•	•	•	•	•
Heat Exchanger											
Two-pass heavy gauge exchanger	•	•	•	•	•	•	•	•	•	•	•
Ceramic fibre combustion chamber	•	•	•	•	•	•	•	•	•	•	•
Foil-faced cabinet insulation	•	•	•	•	•	•	•	•	•	•	•
Air Flow Management											
Single-speed belt drive motor	•		•	•							
Multiple-speed direct drive PSC motor	•		•	•	•		•		•		•
Variable-speed direct drive ECM		•				•		•		•	
5-ton cooling model available			•	•			•	•			
Noise Reduction											
Ceramic fibre combustion chamber	•	•	•	•	•	•	•	•	•	•	•
Dynamically balanced blower assembly	•	•	•	•	•	•	•	•	•	•	•
Variable speed blower motor		•				•		•		•	
Installation & Maintenance											
Chimney vent	•	•	•	•	•	•	•	•	•	•	•
Direct side wall vent	•	•	•	•	•	•			•	•	•
Upflow	•	•	•	•	•	•	•	•			
Downflow/horizontal									•	•	•
Breech	Rear	Rear	Rear	Front	Front	Front	Front	Front	Front	Front	Front
Dual clean-out ports	•	•	•	•	•	•	•	•	•	•	•
Warranty											
*5-year parts warranty	•	•	•	•	•	•	•	•	•	•	•
*Limited lifetime heat exchanger warranty	•	•	•	•	•	•	•	•	•	•	•

*As per the limitations set out in the warranty.

ECR's home comfort products are designed to provide years of **trouble-free** operation


The "Comfort Plus" Extended Warranty program complements ECR's Standard Product Warranty by providing labour coverage and additional years of parts coverage depending on the plan purchased. If you sell your home, the "Comfort Plus" warranty can be transferred to the purchaser, adding to the value of your home. Ask your installer for details on the "Comfort Plus" Extended Warranty program.



Variable speed (ECM) technology uses less electricity

One of the
quietest sounds
around the home!

Washing machine
Refrigerator
Ultra
Comfort
95V
Whisper
db

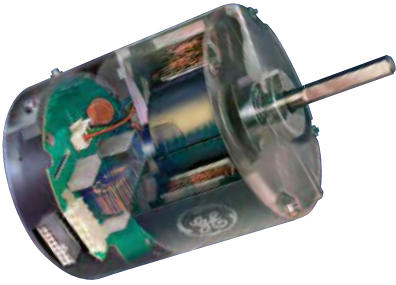

ECM (Electronically Commutated Motor) = Lower operating costs. At full load the ECM motor is 20% more efficient than a conventional motor. On continuous fan speed, the ECM motor consumes 60-80 watts compared to 400 watts for a conventional motor.

Soft start and stop = Less noise and increased overall comfort. The variable speed motor ramps up gradually until it reaches the required air flow and ramps down slowly before shutdown. The operation is so quiet you will rarely notice when your furnace turns on and off.

In heating mode, the initial rush of cold air and noise created by conventional motors is eliminated. Reduced temperature swings and gradual heat gain increase the overall comfort delivered by the system.

In cooling mode, the motor speed is reduced during the first several minutes of operation. This increases the system's ability to remove maximum humidity from the airflow, increasing comfort in your home.


DIRECT VENT SIDEWALL



Direct Sidewall Venting is an effective alternate method of venting combustion products through an outside wall of the house, rather than up a traditional chimney. This method utilizes the burner to efficiently exhaust products of combustion from the heating equipment.

FEATURES AND BENEFITS

- Direct Sidewall Vent allows for overall increase in installed appliance efficiency.
- The Olsen Direct Sidewall Vent kit has been designed for flexibility in installation. All vent-to-appliance adapters are included.
- Every Direct Sidewall Vent installation requires an Olsen Vent Terminal in addition to the venting kit described above. The Olsen Vent Terminal utilizes a two-pipe combustion air/exhaust gas configuration. Because outside air is used for combustion, the system provides greater efficiency and safety in new, tightly sealed houses.
- Only one wall opening is required for concentric vent.
- The burner provides the necessary pressure for adequate venting of flue products – no additional motors or controls are required.

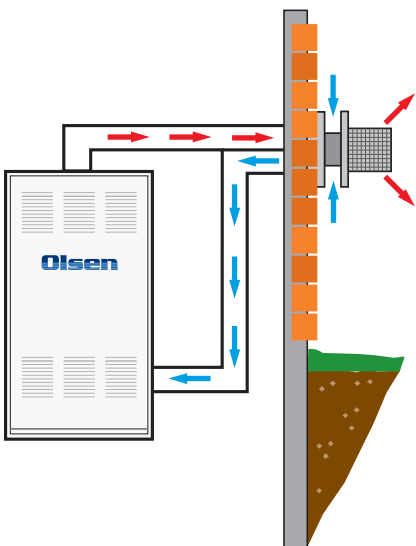

oil furnace specifications

PERFORMANCE

Description Glossary

B2U = direct sidewall vent Beckett; RBU = direct sidewall vent Riello; RF = Riello burner;
 NX = Beckett NX burner; .5 = air conditioning ready; .2 = heating only; DD = direct drive;
 SS = belt drive; TS = 5-ton model; ECM = variable speed motor

	Model	Vent	AFUE %	Nozzle Factory Standard	**Firing Rate USGPH	Output BTU/h	***Optional Output (000) BTU/h	Burner Model	Blower	Max CFM @ 0.5 WC
Lowboy										
CHIMNEY VENT	BML 80B .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	76,500	59-98	Beckett AF	PSC Direct Drive	1462
	BML 80B .2 1/2 SS	Chimney	83	0.65 / 80°A	0.65	76,500	59-98	Beckett AF	* Belt Drive	*
	BML 80B RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	76,500	59-87	Riello 40F3	PSC Direct Drive	1462
	BCL 100S RF .5 1/2 DD	Chimney	85.5	0.75 / 60°W	0.85	101,000	79-117	Riello 40F3	PSC Direct Drive	1585
	BCL 120S .5 1/2 DD TS	Chimney	85	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	PSC Direct Drive	1585
	BCL 120S .2 1/3 SS	Chimney	85	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	* Belt Drive	*
	BCL 120ST .5 1.0 DD	Chimney	85	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	PSC Direct Drive	2016
	BCL 145S .5 1/2 DD TS	Chimney	83.5	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	PSC Direct Drive	1585
	BCL 145S .2 1/2 SS	Chimney	83.5	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	* Belt Drive	*
	BCL 145ST .5 1.0 DD	Chimney	83.5	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	PSC Direct Drive	2016
	BCL 190 .25 COMPLETE	Chimney	78	1.65 / 70°B	1.65	188,000	166-188	Beckett AF	* Belt Drive	*
	BCL 190/225 .5 COMPLETE	Chimney	78	1.75 / 70°B	1.75	224,000	196-224	Beckett AF	* Belt Drive	*
	BFL 100 RF .5 1/2 DD	Chimney	85	0.75 / 60°W	0.85	101,000	79-117	Riello 40F3	PSC Direct Drive	1585
	BFL 120 .5 1/2 DD TS	Chimney	83	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	PSC Direct Drive	2016
	BFL 120 .2 1/3 SS	Chimney	83	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	* Belt Drive	*
	BFL 120T .5 1.0 DD	Chimney	83	1.00 / 80°A	1.00	117,000	79-117	Beckett AF	PSC Direct Drive	2016
	BFL 145 .2 1/2 DD	Chimney	83	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	PSC Direct Drive	1585
	BFL 145 .2 1/2 SS	Chimney	83	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	* Belt Drive	*
	BFL 145T .5 1.0 DD	Chimney	83	1.20 / 60°A	1.20	143,000	130-143	Beckett AF	PSC Direct Drive	2016
DIRECT VENT	BML 80B B2U .5 1/2 DD	Direct	83.5	0.60 / 60°A	0.65	76,500	59-87	Beckett AF II 85	PSC Direct Drive	1462
	BML 80B RBU .5 1/2 DD	Direct	85	0.60 / 60°W	0.65	76,500	59-87	Riello 40BF3	PSC Direct Drive	1462
	BCL 100S B2U .2 1/2 DD	Direct	85	0.85 / 80°A	0.85	101,000	79-117	Beckett AF II 150	PSC Direct Drive	1585
	BFL 100 B2U .2 1/2 DD	Direct	84	0.85 / 80°A	0.85	101,000	79-117	Beckett AF II 150	PSC Direct Drive	1585
ECM VARIABLE SPEED	BMLV 80B .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	76,500	59-98	Beckett AF	ECM Direct Drive	1380
	BMLV 80B RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	76,500	59-98	Riello 40F3	ECM Direct Drive	1380
	BMLV 80B B2U .5 1/2 DD	Direct	83.5	0.60 / 60°A	0.65	76,500	59-87	Beckett AF II 85	ECM Direct Drive	1380
	BMLV 80B RBU .5 1/2 DD	Direct	85	0.60 / 60°W	0.65	76,500	59-87	Riello 40BF3	ECM Direct Drive	1380
Highboy										
CHIMNEY VENT	HML 80C .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	75,000	59-95	Beckett AF	PSC Direct Drive	1476
	HML 80C RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	75,000	59-86	Riello 40F3	PSC Direct Drive	1476
	HTL 115DRF 1/2 DD	Chimney	85	0.85 / 60°W	0.95	114,600	90-115	Riello 40F3	PSC Direct Drive	1440
	HTL 120D 1/2 DD	Chimney	83	1.00 / 60°W	1.00	117,600	89-117	Beckett AF	PSC Direct Drive	1440
	HTL 140DT 3/4 DD	Chimney	83	1.20 / 60°W	1.20	139,400	129-140	Beckett AF	PSC Direct Drive	1924
DIRECT VENT	HML 80C B2U .5 1/2 DD	Direct	83.5	0.60 / 60°A	0.65	75,000	63-86	Beckett AF II 85	PSC Direct Drive	1476
	HML 80C RBU .5 DD	Direct	85	0.60 / 60°W	0.65	75,000	59-86	Riello BF3	PSC Direct Drive	1476
ECM VARIABLE SPEED	HMLV 80C .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	75,000	59-95	Beckett AF	ECM Direct Drive	1380
	HMLV 80C RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	75,000	59-86	Riello 40F3	ECM Direct Drive	1380
	HTLV 115DRF 1/2HP ECM	Chimney	85	0.85 / 60°W	0.95	114,600	90-115	Riello 40F3	ECM Direct Drive	1380
	HMLV 80C B2U .5 1/2 DD	Direct	83.5	0.60 / 60°A	0.65	75,000	63-86	Beckett AF II 85	ECM Direct Drive	1380
	HMLV 80C RBU .5 DD	Direct	85	0.60 / 60°W	0.65	75,000	59-86	Riello BF3	ECM Direct Drive	1380

* Unit shipped as heating only. Field modifications and additional controls required for air conditioning.

** Additional firing rates available. See installation and operation manual for details.

*** Firing range available. Burner nozzle change required in the field. AFUE will change when the firing rate is changed. Go to www.olsenhvac.com for additional AFUE data.

oil furnace specifications

PERFORMANCE

	Model	Vent	AFUE %	Nozzle Factory Standard	** Firing Rate USGPH	Output BTU/h	*** Optional Output (000) BTU/h	Burner Model	Blower	Max CFM @ 0.5 WC
Multiposition										
CHIMNEY VENT	WML 80C .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	75,000	58-86	Beckett AF	PSC Direct Drive	1291
	WML 80C RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	75,000	59-86	Riello 40F3	PSC Direct Drive	1291
	MPL 120B .5 3/4 DD	Chimney	82	1.00 / 60°A	1.00	112,000	86-123	Beckett AF	PSC Direct Drive	1331
	MPL 120B RF .5 DD 40F5	Chimney	84	0.85 / 70°A	1.00	112,000	86-123	Riello 40F5	PSC Direct Drive	1331
DIRECT VENT	WML 80C B2U .5 1/2 DD	Direct	83	0.65 / 60°A	0.65	75,000	63-86	Beckett AF II 85	PSC Direct Drive	1291
	WML 80C RBV .5 DD	Direct	85	0.60 / 60°W	0.65	75,000	59-86	Riello BF3	PSC Direct Drive	1291
	MPL 120B B2U .5 3/4 DD	Direct	83	0.85 / 70°A	1.00	112,000	85-112	Beckett AF	PSC Direct Drive	1331
ECM VARIABLE SPEED	WMLV 80C .5 1/2 DD	Chimney	83	0.65 / 80°A	0.65	75,000	58-86	Beckett AF	ECM Direct Drive	1291
	WMLV 80C RF .5 1/2 DD	Chimney	85	0.60 / 60°W	0.65	75,000	59-86	Riello 40F3	ECM Direct Drive	1291
	WMLV 80C B2U .5 1/2 DD	Direct	83	0.65 / 60°A	0.65	75,000	63-86	Beckett AF II 85	ECM Direct Drive	1291
	WMLV 80C RBV .5 DD	Direct	85	0.60 / 60°W	0.65	75,000	59-86	Riello BF3	ECM Direct Drive	1291

** Additional firing rates available. See installation and operation manual for details.

*** Firing range available. Burner nozzle change required in the field. AFUE will change when the firing rate is changed. Go to www.olsenhvac.com for additional AFUE data.

DIMENSIONS All measurements in inches

Model	CABINET			PLENUM OPENING		Flue Dia.	Shipping Weight (lbs.)
	Width	Depth	Height	Supply Air	Return Air		
Lowboy							
BML/BMLV	22	51 1/2	32	20 1/2 x 19	20 1/2 x 18 5/8	5	240
BCL/BFL	22	51 1/2	41	20 1/2 x 18 5/8	20 1/2 x 18 5/8	6	280
BCL 190/225	26	49	56	24 x 22	24 x 22	7	390
Highboy							
HML/HMLV	22	31	49 5/8	20 1/2 x 20	14 x 22	5	250
HTL/HTLV	22	31	58	20 1/2 x 20	14 x 22	6	270
Multiposition							
WML/WMLV	22	22 1/8	55 1/4	18 x 18	18 x 18	5	265
MPL	22 1/4	22 1/4	62	20 1/2 x 20 1/2	18 x 18	6	292



Ask your installer about
our central air conditioners
and heat pumps!

All product specifications reflect available information at the time of printing. ECR reserves the right to revise or modify products without notice.

YOUR ASSURANCE OF QUALITY

Olsen furnaces are designed, tested, and assembled to ensure that you get the very best in home heating comfort and value. Each furnace meets or exceeds all recognized safety, performance efficiency standards.



2210 Dwyer Avenue, Utica NY 13504-4729
Phone: (315) 797-1310 • Fax: (866) 432-7329
e-mail: info@ecrinternational.com
web site: www.ecrinternational.com

Fuel fired furnace

Olsen
Heating & Cooling Products

oil furnaces

keeping families warm for more than 60 years



Reliable, Efficient Home Heating:

- Variable Speed Technology
- Easy Installation & Maintenance
- Optional Cooling Up to 5 Tons

Lowboy

BCL, BFL, BML, BMLV
59,000 - 237,000 BTU

Highboy

HML, HMLV, HTL, HTLV
59,000 - 113,000 BTU

Multiposition

WML, WMLV, MPL
59,000 - 128,000 BTU



**Shop Drawings
Contractor Approval**
Approved by: M.A.G., G. F.
Date: Mar 03, 2015
Page 362 of 2421
SIFCO NORTH INC

Olsen Home Heating Economics 101

Fuel fired furnace


An oil furnace uses two energy sources, oil to produce heat and electricity to power the fan motor but there's more to consider than just that.

FEATURE:	BENEFIT:	ADDITIONAL BENEFITS:
OIL COSTS		
Higher Olsen AFUE Ratings (Annual Fuel Utilization Efficiency)	= Lower Fuel Costs	+ Bonus Cash Back (Through energy efficiency rebates).*
ELECTRICITY COSTS		
Olsen Variable Speed Technology An oil furnace with an ECM (Electronically Commutated Motor) can reduce electricity consumption up to †80%.	= Lower Electric Costs	+ Bonus Cash Back (Through energy efficiency rebates).*
OTHER COSTS AND CONSIDERATIONS		
DIRECT VENT SIDEWALL Olsen Direct Sidewall Venting As homes age, the chimney can become costly to maintain or repair.	- Eliminates Chimney Costs + Increases Combustion Efficiency	Requires only one wall opening, an Olsen Direct Sidewall Vent Kit (includes all connections from the furnace) and an Olsen concentric vent. (The Olsen vent terminal utilizes a two-pipe combustion air/exhaust gas configuration. Outside air is used for combustion resulting in greater efficiency and safety. The burner provides the necessary pressure for venting of flue products – no additional motors or controls are needed).
Superior Heat Exchanger Design	+ Delivers Higher AFUE	Double Pass Heat Exchanger (Heavy-gauge construction and large surface area maximize heat transfer) Dual Clean Outs (Provide easy access for quick, efficient routine maintenance)
Service & Maintenance Equipped for easy service and maintenance.	= Lower Costs of Good Design	Features like the slide out blower tray on high-boy models provide technicians easy access to critical components. Full length rails eliminate annoying/time consuming remounting of blower and motor housings, saving time and money on service.
Quiet Operation	= Better Quality Comfort	Most high-boy and low-boy Olsen furnaces come standard with a vestibule which provides sound attenuation, reducing operating noise. The vestibule also provides added protection for the burner.
Warranty & Peace of Mind Olsen furnaces are designed to provide years of trouble-free operation.	+ Limited Lifetime Warranty (Heat Exchanger), 5 Years Parts	


*(Check with your local government agencies and/or utilities regarding the availability of rebates and incentives).
†Individual savings may vary.




Calculate Your Savings

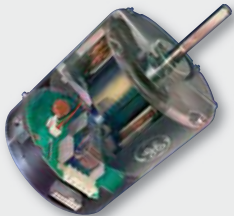


ECM Fan Motor

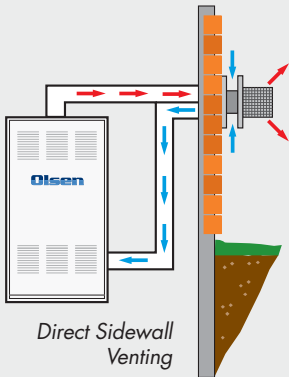

Direct Sidewall Venting

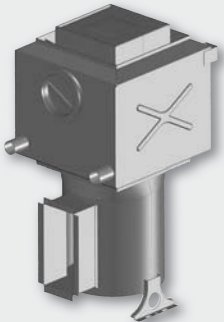

Superior Heat Exchanger

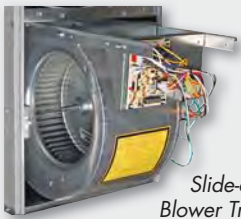

Slide-out Blower Tray

LOWBOY MODELS

BREECH	FURNACE DIMENSIONS (INCHES)			MODEL	FIRING RATE GPH	INPUT/ OUTPUT MBH¹	AFUE EFFICIENCY % RATING				
							CHIMNEY VENT			DIRECT VENT	
	HEIGHT	WIDTH	DEPTH				BECKETT	BECKETT NX	RIELLO F	BECKETT AFII	RIELLO BF
REAR FLUE MODEL	41	22	51½	BCL90S2	0.75	105/90	85.5%				
				BCL90S2							
				BCL90S2							
				BCL90ST2							
				BCL100S2	0.85	119/100	83.2%				
				BCL100S2							
				BCL100S2							
				BCL100ST2							
				BCL120S2	1.00	140/118	84.4%				
				BCL120S2							
				BCL120S2							
				BCL120ST2							
				BCL130S2	1.10	154/130	84.5%				
				BCL130S2							
				BCL130ST2							
				BCL145S2	1.20	168/141	84.0%				
				BCL145S2							
				BCL145ST2							
	56	26	49	BCL170-2	1.50	210/177	83.3%				
				BCL190	1.65	231/194	83.7% T				
				BCL200	1.75	245/205	83.7% T				
				BCL225	2.00	280/237	84.6% T				
	41	22	51½	BCL90SRF2	0.75	105/91	Chimney Vented	87.2%			
				BCL100SRF2	0.85	119/102	with Riello F	86.2%			
				BCL100SB2U2	0.75	105/91	87.1%				
				BCL100SB2U2	0.85	119/102	Direct Vented with Beckett AF II	86.0%			
				BCL120SB2U2	1.00	140/119	85.1%				
FRONT FLUE MODEL	41	22	51½	BFL90-2	0.75	105/88	83.8%				
				BFL90-2							
				BFL90-2							
				BFL90T2							
				BFL100-2	0.85	119/100	83.6%				
				BFL100-2							
				BFL100-2							
				BFL100T2							
				BFL120-2	1.00	140/114	83.0%				
				BFL120-2							
				BFL120-2							
				BFL120T2							
				BFL130-2	1.00	154/128	82.4%				
				BFL130-2							
				BFL130T2							
				BFL145-2	1.20	168/140	82.5%				
				BFL145-2							
				BFL145ST2							
				BFL145NX2	1.20	168/139	83.1%				
				BFL145NX2							
				BFL145TNX2							
				BFL90RF-2	0.75	105/90	Chimney Vented	85.6%			
				BFL100RF2	0.85	119/102	with Riello F	85.3%			
				BFL90B2U2	0.75	105/90					86.4%
				BFL100B2U2	0.85	119/101	Direct Vented with Beckett AF II				85.4%
				BFL120B2U2	1.00	140/117					83.7%

Fuel fired furnace

87.1%
86.0%
85.1%

SHOP DRAWING

This review is solely for the verification of general design quality and does not alleviate the responsibility of the contractor for insuring that all specification, space and installation requirements are met.

Reviewed By: M.M. Reviewed ☒

Date: 22 June 2016 Reviewed as noted ☐

Resubmit ☐

CHARELLI ENGINEERING LTD.

AVAILABLE MOTOR DRIVES			AC RANGE IN TONS BASED ON 400 CFM PER TON AIR FLOW @ 0.50" W.C. (CFM RANGE)	COOLING COILS SELECTION			
ECM (V) VARIABLE FAN SPEED	PSC DIRECT DRIVE	PSC BELT DRIVE					
		1/3 HP		BCL 90 to 145 Cased Cooling Coils 2 ton CC24A3G-220R-066 2.5 ton CC30C3G-220R-066 3 ton CC36B3G-220R-066 3.5 ton CC42C3G-220R-066 4 ton CC48B3G-220R-066 5 ton CC60D3G-260R-066			
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/3 HP					
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/3 HP					
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		3/4 HP					
		3/4 HP					
		1 HP					
		1 HP					
			3 to 4 tons (1300 - 1550) 3 to 5 tons (1600 - 2200)	BCL 170 to 225 Cased Cooling Coil 3 to 4 ton N/A 5 ton CC60D3G-260R-066			
	1/2 HP		3 to 4 tons (1000 - 1600)			BCL 90 to 120 Cased Cooling Coils 2 ton CC24A3G-220R-066 3 ton CC36B3G-220R-066 3.5 ton CC42C3G-220R-066	
		1/3 HP					
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 -1600) 3 to 5 tons (1300 - 2000)				
		1/3 HP		BFL Cased Cooling Coils 2 ton CC24A3G-220R-066 2.5 ton CC30C3G-220R-066 3 ton CC36B3G-220R-066 3.5 ton CC42C3G-220R-066 4 ton CC48B3G-220R-066 5 ton CC60D3G-260R-066			
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/3 HP					
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/3 HP					
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/2 HP					
	1/2 HP 1 HP		3 to 4 tons (1000 - 1600) 3 to 5 tons (1300 - 2000)				
		1/2 HP					
	1/2 HP 1 HP		3 to 5 tons (1300 - 2000)				
	1/2 HP		3 to 4 tons (1000 -1600)				

Common Features:

All Olsen Oil Furnaces:

- **Heat Exchanger** – Proven heat exchanger design featuring 100% welded construction for maximum performance. Large accessible clean out ports.
- **Radiator** – “Wrap-around” style for maximum heat transfer.
- **Insulation** – Spun glass and aluminum foil for “hand-cool” cabinet.
- **Burner** – Equipped with industry leading Beckett or Riello oil burners which include oil solenoid valve, PSC motor and solid state controls. Factory assembled, wired and tested. Ready to connect to fuel line.
- **Barometric Draft Control** – Included with all chimney vent models.
- **Blower** – Direct drive or belt drive type. Permanently lubricated, resilient mounted.
- **Blower Assembly** – Entire unit can be easily removed for servicing.
- **Filter Racks & Washable Air Filters** – Included with all models.
- **Alternate firing rates** to fit a wide variety of applications (alternate nozzles are field supplied).



Made in North America,
Dunkirk, NY Plant.

Additional Features:

Fuel fired furnace

BCL/BCL-S/BFL Lowboy Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models. Three-speed is standard with 1 HP direct drive models. Single speed with adjustable motor pulley is standard with belt drive models.
- **Controls** – (UTEC) Electronic fan timer is standard on all 1/3 HP and 1/2 HP models. (Honeywell or White Rodgers) Fan and limit control is standard on all 3/4 HP and 1 HP models.
- **Air conditioning** – Fan timer control is AC ready. Prewired fan center relay is standard on fan and limit equipped models with 1 HP direct drive blower.
- **Direct Vent Models** – Include Beckett AFII-150 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

BML/BMLV Compact Lowboy Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor (BML Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models. Single speed with adjustable motor pulley is standard with belt drive models.
- **ECM Variable Speed Blower Motor (BMLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 or Riello 40BF3 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

HML/HMLV/HTL/HTLV Highboy Upflow Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor (HML/HTL Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models.
- **ECM Variable Speed Blower Motor (HMLV/HTLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 or Riello 40BF3 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

WML/WMLV/MPL Highboy Downflow/Horizontal Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. WML/WMLV models may be factory equipped with vestibule compartment to enclose burner & controls. Vestibule compartment for WML/WMLV also available as an after-market kit for non-factory equipped units.
- **PSC Blower Motor (WML/MPL Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP (WML) and 3/4 HP (MPL) direct drive models.
- **ECM Variable Speed Blower Motor (WMLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 (WML/WMLV) or Beckett AFII-150 (MPL) or Riello 40BF3 (WML) oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

model is to be as specified on the plan.
Highboy.

Olsen
Heating & Cooling Products

Olsen Oil-Fired Furnace

SHOP DRAWING

Reviewed by: Samuel Charbonneau

Date: 07 juillet 2016

Reviewed



Reviewed as noted



Resubmit



Out for approval

SIFEC NORTH INC.

oil furnaces

keeping families warm for more than 60 years



**Reliable, Efficient
Home Heating:**

- Variable Speed Technology
- Easy Installation & Maintenance
- Optional Cooling Up to 5 Tons

Lowboy

BCL, BFL, BML, BMLV
59,000 - 237,000 BTU

Highboy

HML, HMLV, HTL, HTLV
59,000 - 113,000 BTU

Multiposition

WML, WMLV, MPL
59,000 - 128,000 BTU



Olsen Home Heating Economics 101

Olsen Oil-Fired Furnace


An oil furnace uses two energy sources, oil to produce heat and electricity to power the fan motor but there's more to consider than just that.

FEATURE:	BENEFIT:	ADDITIONAL BENEFITS:
OIL COSTS		
Higher Olsen AFUE Ratings (Annual Fuel Utilization Efficiency)	= Lower Fuel Costs	+ Bonus Cash Back (Through energy efficiency rebates).*
ELECTRICITY COSTS		
Olsen Variable Speed Technology An oil furnace with an ECM (Electronically Commutated Motor) can reduce electricity consumption up to †80%.	= Lower Electric Costs	+ Bonus Cash Back (Through energy efficiency rebates).*
OTHER COSTS AND CONSIDERATIONS		
DIRECT VENT SIDEWALL Olsen Direct Sidewall Venting As homes age, the chimney can become costly to maintain or repair.	- Eliminates Chimney Costs + Increases Combustion Efficiency	Requires only one wall opening, an Olsen Direct Sidewall Vent Kit (includes all connections from the furnace) and an Olsen concentric vent. (The Olsen vent terminal utilizes a two-pipe combustion air/exhaust gas configuration. Outside air is used for combustion resulting in greater efficiency and safety. The burner provides the necessary pressure for venting of flue products – no additional motors or controls are needed).
Superior Heat Exchanger Design	+ Delivers Higher AFUE	Double Pass Heat Exchanger (Heavy-gauge construction and large surface area maximize heat transfer) Dual Clean Outs (Provide easy access for quick, efficient routine maintenance)
Service & Maintenance Equipped for easy service and maintenance.	= Lower Costs of Good Design	Features like the slide out blower tray on high-boy models provide technicians easy access to critical components. Full length rails eliminate annoying/time consuming remounting of blower and motor housings, saving time and money on service.
Quiet Operation	= Better Quality Comfort	Most high-boy and low-boy Olsen furnaces come standard with a vestibule which provides sound attenuation, reducing operating noise. The vestibule also provides added protection for the burner.
Warranty & Peace of Mind Olsen furnaces are designed to provide years of trouble-free operation.	+ Limited Lifetime Warranty (Heat Exchanger), 5 Years Parts	


*(Check with your local government agencies and/or utilities regarding the availability of rebates and incentives).
†Individual savings may vary.




Calculate Your Savings

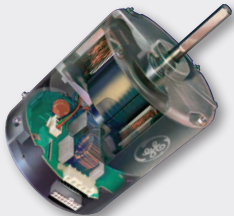

ECM Fan Motor

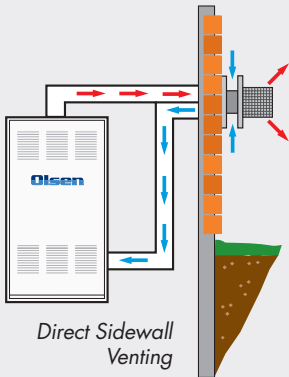

Direct Sidewall Venting

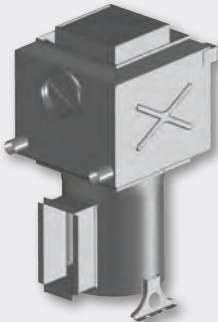

Superior Heat Exchanger



Slide-out Blower Tray

Olsen Oil-Fired Furnace

0.85	219/98	83.4%
SHOP DRAWING		
0.50	70/60	86.3%
This review is solely for the verification of general design quality and does not relieve the responsibility of the contractor with Balfour Beatty that all specification, space and installation requirements are met.		
0.65	91/77	84.2%
0.75	105/87	83.2%
0.55	77/65	<div>Reviewed By: <u> M.M. </u></div> <div>Reviewed <input checked="" type="checkbox"/></div> <div>Reviewed as noted <input type="checkbox"/></div> <div>Date: <u> 8 July 2016 </u></div> <div>Resubmit <input type="checkbox"/></div>
0.65	91/77	Direct Vented with Beckett AF II
0.75	105/88	
CHIARELLI ENGINEERING LTD.		

7


AVAILABLE MOTOR DRIVES			AC RANGE IN TONS BASED ON 400 CFM PER TON AIR FLOW @ 0.50" W.C. (CFM RANGE)	COOLING COILS SELECTION
ECM (V) VARIABLE FAN SPEED	PSC DIRECT DRIVE	PSC BELT DRIVE		
(V) 1/2 HP ECM motor 600 – 1200 cfm @ 0.5" w.c.	1/2 HP		2 to 3.5 Tons (690-1500)	HML& HMLV Cased Cooling Coils 2 ton CC24A3G-220R-066 2.5 ton CC30C3G-220R-066 3 ton CC36B3G-220R-066 3.5 ton CC42C3G-220R-066
(V) 1/2 HP ECM motor 600 – 1200 cfm @ 0.5" w.c.	1/2 HP		2 to 3.5 Tons (650-1400)	HTL & HTLV Cased Cooling Coils 2 ton CC24A3G-220R-066 2.5 ton CC30C3G-220R-066 3 ton CC36B3G-220R-066 3.5 ton CC42C3G-220R-066

Ratings and specifications are subject to change without notice.

Common Features:

All Olsen Oil Furnaces:

- **Heat Exchanger** – Proven heat exchanger design featuring 100% welded construction for maximum performance. Large accessible clean out ports.
- **Radiator** – “Wrap-around” style for maximum heat transfer.
- **Insulation** – Spun glass and aluminum foil for “hand-cool” cabinet.
- **Burner** – Equipped with industry leading Beckett or Riello oil burners which include oil solenoid valve, PSC motor and solid state controls. Factory assembled, wired and tested. Ready to connect to fuel line.
- **Barometric Draft Control** – Included with all chimney vent models.
- **Blower** – Direct drive or belt drive type. Permanently lubricated, resilient mounted.
- **Blower Assembly** – Entire unit can be easily removed for servicing.
- **Filter Racks & Washable Air Filters** – Included with all models.
- **Alternate firing rates** to fit a wide variety of applications (alternate nozzles are field supplied).

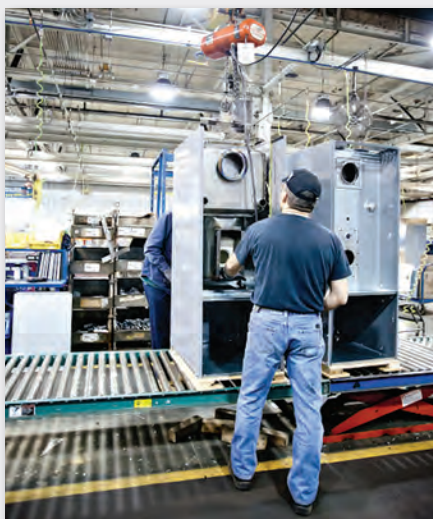

Made in North America,
Dunkirk, NY Plant.

Additional Features:

Olsen Oil-Fired Furnace

BCL/BCL-S/BFL Lowboy Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models. Three-speed is standard with 1 HP direct drive models. Single speed with adjustable motor pulley is standard with belt drive models.
- **Controls** – (UTEC) Electronic fan timer is standard on all 1/3 HP and 1/2 HP models. (Honeywell or White Rodgers) Fan and limit control is standard on all 3/4 HP and 1 HP models.
- **Air conditioning** – Fan timer control is AC ready. Prewired fan center relay is standard on fan and limit equipped models with 1 HP direct drive blower.
- **Direct Vent Models** – Include Beckett AFII-150 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

BML/BMLV Compact Lowboy Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor (BML Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models. Single speed with adjustable motor pulley is standard with belt drive models.
- **ECM Variable Speed Blower Motor (BMLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 or Riello 40BF3 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

HML/HMLV/HTL/HTLV Highboy Upflow Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. Access door easily removed to access enclosed burner & controls.
- **PSC Blower Motor (HML/HTL Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP direct drive models.
- **ECM Variable Speed Blower Motor (HMLV/HTLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 or Riello 40BF3 oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

WML/WMLV/MPL Highboy Downflow/Horizontal Models

- **Cabinet construction** – 22 gauge steel cabinet ensures strength and quiet operation. WML/WMLV models may be factory equipped with vestibule compartment to enclose burner & controls. Vestibule compartment for WML/WMLV also available as an after-market kit for non-factory equipped units.
- **PSC Blower Motor (WML/MPL Models)** – Designed for heavy duty continuous operation. Thermally protected. Four-speed is standard with 1/2 HP (WML) and 3/4 HP (MPL) direct drive models.
- **ECM Variable Speed Blower Motor (WMLV Models)** – Maximizes air conditioner efficiencies, reduces electrical operating costs and enhances comfort with programmed ramp up and ramp down operation. Available on 1/2 HP direct drive models.
- **Controls** – (UTEC) Electronic fan timer control is standard on all models.
- **Air conditioning** – Fan timer control is AC ready.
- **Direct Vent Models** – Include Beckett AFII-85 (WML/WMLV) or Beckett AFII-150 (MPL) or Riello 40BF3 (WML) oil burner with pressure switch system for proving airflow, intake air collar and vent adapter. Vent pipe kits sold separately.

Olsen Oil-Fired Furnace



ECR International

2201 Dwyer Ave., Utica, NY 13504

Phone: (315) 797-1310 or

(800) 325-5479

Fax: (315) 724-9319

Web: www.olsenhvac.com

In Canada:

Contact ECR Master Representative:

Morden National Sales

Phone: 519-627-0791

Fax: 866-835-6667

Olsen
Heating & Cooling Products

Airco
Heating & Cooling Products

HML
(Up-Flow Model)

HMLV
(Up-Flow Model with ECM)
Series C
Oil Fired Warm Air Furnaces

INSTALLATION, OPERATION & MAINTENANCE MANUAL

SHOP DRAWING

This review is solely for the verification of general design quality and does not alleviate the responsibility of the contractor for insuring that all specification, space and installation requirements are met.

Reviewed By: M.M. Reviewed ☒
Reviewed as noted ☐
Date: 8 July 2016 Resubmit ☐

CHIARELLI ENGINEERING LTD.




An ISO 9001-2008 Certified Company



ECR International

2210 Dwyer Avenue, Utica NY 13501
web site: www.ecrinternational.com

Dimensions

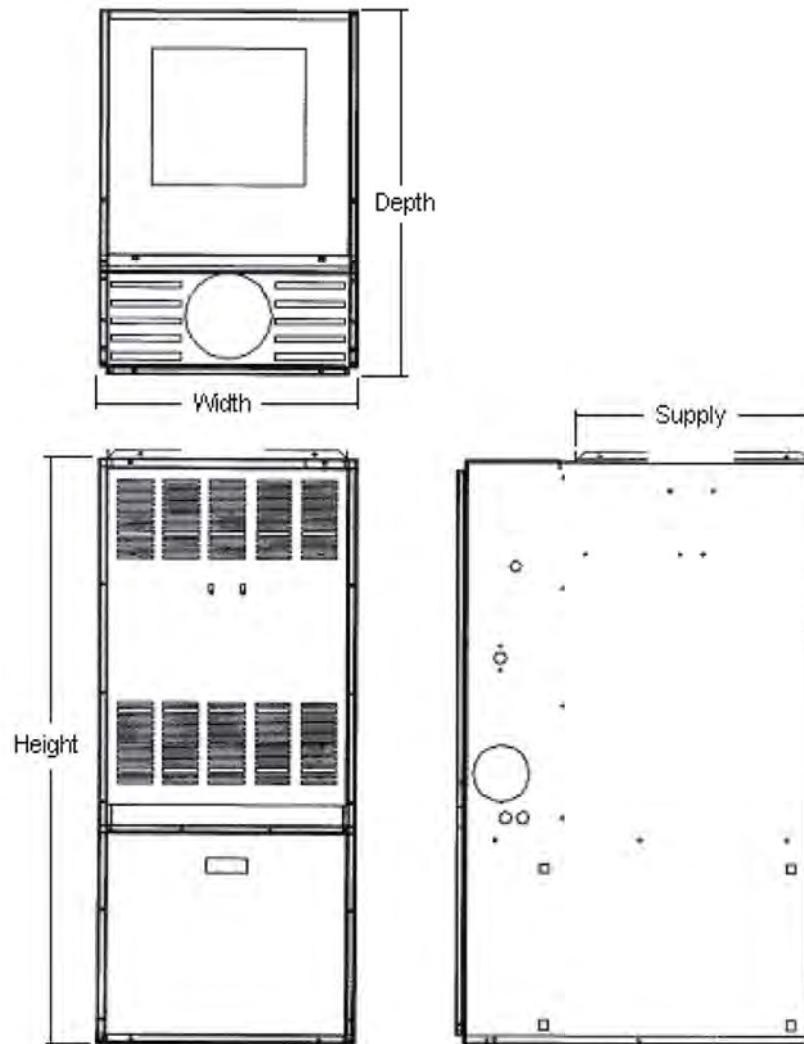

Furnace Model	Cabinet			Plenum Openings			Flue Diameter	Filter		Shipping Weight (LB)
	Width	Depth	Height	Supply	Return			Type	Size	
					Side	Bottom				
HML HMLV	22"	30¾"	49⅝"	20½"W x 20"D	14" x 22"	14" x 22"	5"	Permanent	16" x 25" x 1"	210 LB
	55.9 cm	78.1 cm	126.7 cm	52 cm x 52.8 cm	35.6 cm x 55.9 cm	35.6 cm x 55.9 cm	12.7 cm		40.6 cm x 63.5 cm x 2.5 cm	95.3 Kg

1. General	4
2. Safety Symbols	4
3. Introduction Models HML And HMLV	4
4. Heat Loss	4
5. Locating the Unit - [See Figure 1 and Table 1]	5
6. Furnace Used In Conjunction With Air Conditioning	5
7. Combustion Air	6
8. Chimney Venting	6
9. Barometric Damper Control	7
10. Optional Side Wall Venting	7
11a. Fan Timer Board And Limit Control (HML) See Figure 3, page 15	7
11b. Fan Timer Board And Limit Control (HMLV) See Figure 4, page 15	7
12. Electrical Connections	7
13. Humidifier	8
14. Piping Installation	8
15. Oil Filter	8
16. Oil Burner Nozzles	8
17. Oil Burner Adjustment	8
18. Burner Electrodes	8
19. Burner Primary (Safety) Control	9
20. Combustion Chamber	9
21a. Circulating Air Blower (HML)	9
22. Maintenance And Service	10
21b. Circulating Air Blower (HMLV)	10
23. Operating Instructions (HML)	11
24. Operating Instructions (HMLV)	11
Appendix A - Check out and Adjustments	12
A.1 Oil Burner Air Adjustment	14
A.2 Burner Electrodes	14
A.3 Start Up	14
A.4 Special Instructions For Units Equipped With Riello Burners	15
A.5 Final Check Out	15
Appendix B - Wiring Diagrams	19
Chimney Vent Furnace Wiring Diagram HML/HMLV	19
Direct Vent Furnace Wiring Diagram HML/HMLV	20
Appendix C - Sequence of Operation and Troubleshooting	21
C.1 Troubleshooting	22
C.2 Preliminary Steps:	22
C.3 Check Oil Primary Control	22
Appendix D - Homeowner's Reference Table	26
Parts Listing: Chimney Vent Models HML80(C2,CRF2, CNX2) and HMLV80(C2,CRF2, CNX2)	27
Parts Listing: Chimney Vent Models HML80(C2,CRF2,CNX2) and HMLV80(C2,CRF2,CNX2)	28
Parts Listing: Direct Vent Models HML80(CB2U2,CRBU2) and HMLV80(CB2U2,CRBU2)	28
Parts Diagram HML and HMLV	29

Check our website frequently for updates: www.ecrinternational.com

Information and specifications outlined in this manual in effect at the time of printing of this manual. Manufacturer reserves the right to discontinue, change specifications or system design at any time without notice and without incurring any obligation, whatsoever.

1. General

Furnace installation shall be completed by qualified agency. See glossary for additional information.

WARNING

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this manual and understand all requirements before beginning installation.

WARNING

Fire, burn, asphyxiation hazard. Do not use gasoline, crank case oil, or any oil containing gasoline. Failure to follow these instructions could result in death or serious injury.

2. Safety Symbols

Become familiar with symbols identifying potential hazards.



This is the safety alert symbol. Symbol alerts you to potential personal injury hazards. Obey all safety messages following this symbol to avoid possible injury or death.

DANGER

Indicates a hazardous situation which, if not avoided, WILL result in death or serious injury

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

Used to address practices not related to personal injury.

3. Introduction Models HML And HMLV

Models HML and HMLV are oil fired forced air up-flow furnaces with an output capacity range of 59,000 btu/hr. To 96,000 btu/hr.

- HML models are equipped with 1/2 HP PSC 4 speed blower motor.
- HMLV models are equipped with 1/2 HP ECM variable speed blower motor.

Furnace models are either factory equipped for chimney venting or factory equipped for direct venting.

Chimney vent models and direct vent models are not field convertible. Direct vent installation instructions are included with the direct vent models.

Installation shall conform to requirements of authority having jurisdiction or in absence of such requirements:

- Canada - CAN/CSA - B139, Installation Code for Oil-Burning Equipment.
- United States - National Electrical Code, NFPA31, Standard for the Installation of Oil-Burning Equipment.

Models are CSA listed, (NRTL/C) for use with No. 1 (Stove) and No. 2 (Furnace) Oil.

Refer to tables in Appendix A for performance data.

4. Heat Loss

Maximum hourly heat loss for each heated space shall be calculated in accordance with the procedures described in the manuals of:

- Canada - The Heating, Refrigeration and Air Conditioning Institute of Canada (HRAI), or by other means prescribed, or approved by the local authority having jurisdiction.
- United States - Manual J. titled, "Load Calculation" published by the Air Conditioning Contractors of America, describes a suitable procedure for calculating maximum hourly heat loss.

5. Locating the Unit - [See Figure 1 and Table 1]

- Locate furnace so flue connection to chimney is short, direct and consists of as few elbows as possible.
- Centralize furnace location with respect to supply and return air ductwork. Central location minimizes trunk duct sizing.
- All models may be installed on combustible floors.


6. Furnace Used In Conjunction With Air Conditioning

- Install furnace in parallel with or upstream from evaporator coil to avoid condensation in heat exchanger.
- When installed in parallel, prevent chilled air from entering furnace by use of dampers or air controlling.
- Manually operated dampers must have a control to prevent operation of either system unless dampers are in full heat or full cool position.
- Air heated by the furnace shall not pass through evaporator coil unless coil is specifically approved for such service.
- Check and adjust blower speed to compensate for pressure drop caused by evaporator coil.

Table 1: Minimum Installation Clearances

Location	Clearance to Combustibles
	HML and HMLV
	Up flow
Top	1" (26 mm)
Bottom	0"
S/A Plenum	1" (26 mm)
Rear	1" (26 mm)
Sides	1" (26 mm)
Front	1" ** (26 mm)
Flue Pipe	9" * (229 mm)
Enclosure	Closet
* 18 in. (458 mm) USA	
** 24 in. (610 mm) Service Clearance	

Figure 1 - Heat Exchanger Support Screw Location

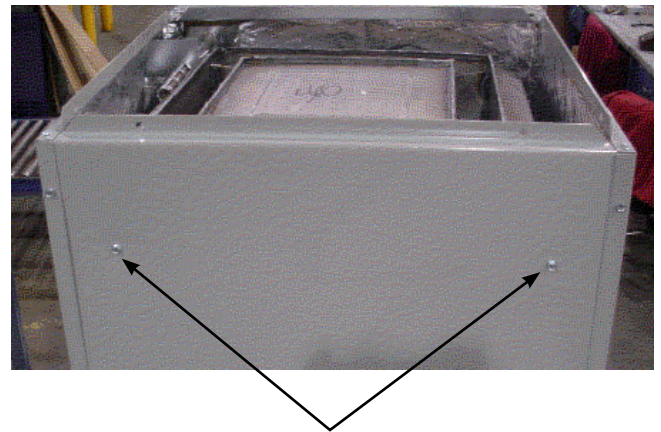

Heat Exchanger Support Screws

- Remove heat exchanger support screws before final placement of the furnace.
- Preferable if furnace rear panel is inaccessible after installation.
- Screws must be removed if heat exchanger is to be removed from the cabinet.

7. Combustion Air

- Furnace installed in a closet or utility room, provide two openings connecting to well-ventilated space (full basement, living room or other room opening, not a bedroom or bathroom).
 - One opening shall be located above level of upper vent opening.
 - One opening below combustion air inlet opening in front of furnace.

Each opening shall have a minimum free area of 1½ square inches per 1,000 Btu/h of total input rating of all appliances installed in the room.
- For furnaces located in buildings of unusually tight construction, such as those with high quality weather stripping, caulking, windows and doors, or storm sashed windows, or where basement windows are well sealed, a permanent opening communicating with a well ventilated attic or with the outdoors shall be provided, using a duct if necessary. The duct opening shall have a free area of 1½ square inches per 1,000 Btu/h of total input rating of all appliances to be installed.
- Furnace installed in a full basement, infiltration is normally adequate to provide air for combustion and draft operation.
- Furnace rooms under 65m³ (700 ft³) should automatically be treated as confined space.

8. Chimney Venting

- Flue pipe should be as short as possible with horizontal pipes sloping upward toward the chimney at a rate of one-quarter inch per foot.
- Flue pipe should not be smaller in cross sectional area than flue collar on the furnace.
- Flue pipe should connect to chimney so the flue pipe extends into, and terminates flush with the inside surface of chimney liner. Seal the joint between pipe and lining.
- Chimney outlet should be at least two feet above highest point of peaked roof.
- All unused chimney openings should be closed.
- Chimneys must conform to local, provincial or state codes, or in the absence of local regulations, to the requirements of the National Building Code.

NOTICE

This furnace is approved for use with Type L vent or equivalent.

⚠ WARNING

Asphyxiation hazard. Chimney vented versions of furnace must be connected to flue having sufficient draft at all times. Failure to follow these instructions could result in death or serious injury.

Manufacturer recommends overfire draft of -0.02 in. w.c. See figure 2.

Flue pipe must not pass through any floor or ceiling, may pass through a wall where suitable fire protection provisions have been installed.

- Refer to CAN/CSA B-139 for rules governing the installation of oil burning equipment.
- United States, refer to NFPA 31 for regulations governing the installation of oil burning equipment.

See appendix A for burner set-up.

Figure 2 - Check Over-Fire Draft



Over-fire draft access port.

9. Barometric Damper Control

Barometric damper control, also known as draft regulator, is used on conventional chimney venting only. Control automatically maintains constant negative pressure. Ensures proper pressures are not exceeded. If chimney does not develop sufficient draft, draft control does not function properly.

- Install draft regulator in same room or enclosure as furnace. Draft regulator should not interfere with combustion air supplied to the burner.
- Locate control near furnace flue outlet.
- Install per instructions supplied with regulator.
- Set overfire draft, measured at oil burner mounting plate over-fire draft access port, to -0.02 in. w.c. See Figure 2 page 6.

10. Optional Side Wall Venting

Certain HML and HMLV furnace models are manufactured as sidewall vented units. Refer to Direct Venting Instructions, P/N 240006979 included with Vent Kit for details.

Sidewall Venting (*Direct Venting*) requires use of specific oil burners; Beckett AFII, or Riello 40BF.

Refer to Appendix A, Tables A2, and A4.

11a. Fan Timer Board And Limit Control (HML) See Figure 3, page 15.

Electronic Fan Timer integrates control of burner and circulator fan operations. Control is central wiring point for most of furnace electrical components.

- United Technologies 1158-120 (HML) has an adjustable fan on time set by selecting dipswitch combination displayed in Chart 1. Fan on delay can be set at 30, 60, 90 or 120 seconds. Provides a delay between burner ignition and blower start-up to eliminate excessive flow of cold air when blower comes on.
- United Technologies 1158-120 (HML) has an adjustable fan off time of 2, 3, 4 or 6 minutes as displayed in Chart 1. Fan off delay time starts when burner motor is de-energized at end of call for heat. Blower shutdown is delayed to remove any residual heat from heat exchanger.
- Electronic fan timer board works in conjunction with snap disc limit controls, performing a safety function, and breaks power to oil burner primary control, shutting off burner if furnace over-heats.
- Limit control is thermally operated and automatically resets. Limit control is factory installed, pre-set and is not adjustable.
- If limit control opens with United Technologies 1158-120 (HML) electronic fan control, circulating fan will energize. When limit closes, fan off timer begins. At the end of fan off time cycle burner is energized, initiating normal burner cycle.

Chart 1- United Technologies 1158-120 (HML)

Dip Switch Position				Blower Delay Times	
1	2	3	4	On Seconds	Off Minutes
Off	Off			30	
On	Off			60	
Off	On			90	
On	On			120	
		Off	Off		2
		On	Off		3
		Off	On		4
		On	On		6

11b. Fan Timer Board And Limit Control (HMLV) [See Figure 4, page 15]

United Technologies 1168-1 ECM (HMLV) tap board has an adjustable fan on/off delay and airflow settings that must be adjusted in accordance with furnace input rating (nozzle size). Refer to Table A-9, page 17 for ECM blower set-up.

12. Electrical Connections

- Furnace is listed by Canadian Standards Association under NRTL (North American) Standard.
- All field wiring shall conform to CAN/CSA C22.1 Canadian Electrical Code, Part 1, and by local codes, where they prevail.
- United States, wiring shall conform to National Fire Protection Association NFPA-70, National Electrical Code, and with local codes and regulations.
- Wire furnace to separate dedicated circuit in main electrical panel.
- Suitably located circuit breaker can be used as service switch, separate service switch is advisable.
- Service switch is necessary if circuit breaker is close to the furnace, or furnace is located between circuit breaker and entry to furnace room.
- Clearly mark service switch. Install in accessible area between furnace and furnace room entry. Locate so as to reduce possibility it can be mistaken as light switch or similar device.
- Power requirement for HML and HMLV models is: 120 VAC, 1 Ø, 60 Hz., 12A.
- Accessory equipment such as electronic air cleaners and humidifiers may be included on furnace circuit.
- Accessories requiring 120 VAC power sources such as electronic air cleaners and humidifier transformers may be powered from electronic fan timer board where provisions have been made for connections, but should have their own controls.
- Do not use direct drive motor connections as a power source, there is risk of damaging accessories.

- Thermostat wiring connections are shown in wiring diagrams in Appendix B. Some micro-electronic thermostats require additional controls and wiring. Refer to thermostat manufacturer's instructions.
- Locate thermostat approximately 5 feet above floor, on inside wall, and where thermostat is exposed to average room temperatures. Avoid locations where thermostat is exposed to cold drafts, heat from nearby lamps and appliances, exposure to sunlight, heat from inside wall stacks, etc.
- Adjust thermostat heat anticipator to amperage draw of heating control circuit as measured at "R" and "W" terminals of thermostat. Do not measure current with thermostat connected to the circuit. Measure amperage by connecting ammeter between two wires which connect to thermostat "R" and "W" terminals.

13. Humidifier

- Humidifier is optional accessory available through most heating supplies outlets.
- Follow humidifier manufacturer's installation instructions
- Protect furnace heat exchanger from water or water droplets from humidifier.
- Do not use direct drive motor connections as source of power for 120 VAC humidifiers and humidifier transformers.

14. Piping Installation

- Install fuel system in accordance with requirements of CAN/CSA B-139, and local regulations.
- United States installation shall conform to NFPA No. 31 and local codes and authorities.
- Use only approved fuel oil tanks, piping, fittings and oil filter.
- Install oil filter as close to burner as possible.
- Refer to instructions and illustrations in oil burner and oil pump instructions shipped with the furnace.

15. Oil Filter

Install oil filter between fuel oil storage tank and oil burner. When using oil burner nozzle smaller than 0.65 U.S. Gallons Per Hour, install additional 7 to 10 micron filter as close as possible to oil burner.

16. Oil Burner Nozzles

Furnaces are certified for multiple firing rates. Furnace may be fired at ideal rate for wide range of structures by manipulating oil burner nozzle, flame retention head, and temperature rise. Refer to Table A-1 thru A-5, and furnace rating plate to determine proper combinations.

17. Oil Burner Adjustment

- Adjust burner air supply to maintain fuel to air ratio to obtain ideal combustion conditions.
- Lack of air causes "soft" and "sooty" flames, resulting in soot build-up throughout heat exchanger passages.
- Excess combustion air causes bright roaring fire and high stack temperatures resulting in poor fuel efficiency.
- HML and HMLV operate most efficiently with No. 1 smoke spot on Bacharach Scale. Dust will eventually build up on air moving components of oil burner assembly resulting in decreased air supply with potential soot build up in flue gas passageways of heat exchanger. Soot behaves as insulator and impairs good heat transfer. Stack temperature increases, and efficiency decreases. To avoid this problem, adjust the air supply to provide no more than trace smoke spot on Bacharach Scale.
- See Venting Instructions included in Vent Kits for set-up details for sidewall vented furnaces.

NOTICE

Set up sidewall vented models to deliver zero (0) smoke.

NOTICE

Before operating furnace check burner alignment with combustion chamber. End cone of air tube must be centred to accommodating ring of combustion chamber. Adjust as necessary.

18. Burner Electrodes

Correct positioning of electrode tips with respect to each other, fuel oil nozzle, and burners is essential for smooth light ups and proper operation.

Refer to oil burner instructions provided with furnace and Appendix A Section A.2 in this manual for electrode specifications.

NOTICE

Do not tamper with furnace controls they are sensitive. If problems persist, call your service contractor.

19. Burner Primary (Safety) Control

Furnace is equipped with primary combustion control, also referred to as burner relay or burner protector relay, which uses a cad cell located in burner housing, to monitor and control combustion.

Dust or combustion residuals can build up on lens of cad cell impairing its response to flame. Check cad cell for cleanliness and proper alignment if primary control frequently shuts down combustion.

20. Combustion Chamber

Furnace is equipped with cerafelt combustion chamber, held in place by a retaining bracket.

Check the alignment of the combustion chamber and oil burner before firing. It is possible for the combustion chamber to shift if subjected to rough handling during transit.

Inspect combustion chamber for damage or carbon build up whenever oil burner is removed for repairs or routine maintenance.

⚠ WARNING

Fire, burn, asphyxiation hazard. Do not start the burner unless blower access door is secured in place. Failure to follow these instructions could result in death or serious injury.

21a. CIRCULATING AIR BLOWER (HML)

- HML and HMLV furnace models are equipped with direct drive blower systems.
- HML models are equipped with PSC motors.
- HMLV models are equipped with electronically commutated motors (ECM).
- Direct drive blower speed adjustments are not normally required in properly sized extended plenum duct systems. Motor RPM and air CFM delivery will vary automatically to accommodate conditions within usual range of external static pressures typical of residential duct systems.
- Under-sized duct systems may require higher blower speed to obtain system temperature rise.

- Some older duct systems were not designed to provide static pressure. They typically feature special reducing fittings at each branch run and lack block ends on the trunk ducts. These systems may require modification to provide some resistance to the airflow to prevent over-amping of direct drive blower motor. Selecting a lower blower speed may correct this problem.
- Direct drive blower speeds are adjusted by changing "hot" wires to motor winding connections. Refer to wiring diagrams in Appendix B or wiring diagram label affixed to furnace.
- ***Do not move neutral wire (normally white wire) to adjust blower speed.***
- Single blower speed for both heating and cooling modes may be used. Use a "piggy-back connector" accommodating both wires on a single motor tap.
- It is also acceptable to connect selected motor speed with a pigtail joined to both heating and cooling speed wires with a wire nut.
- Safety precaution against accidental disconnection of wires by vibration, secure wire nut and wires with few wraps of electricians tape.
- ***Do not connect power leads between motor speeds. Always connect neutral wire to motor's designated neutral terminal.***
- If joining blower speed wiring is done in furnace junction box, tape off both ends of unused wire.
- ***Do not use blower speed wires as source of power to accessories as electronic air cleaners and humidifier transformers. Unused motor taps auto-generate sufficiently high voltages to damage accessory equipment.***

⚠ WARNING

Electrical shock hazard. Turn OFF electrical power supply at service panel before opening blower access door. Failure to do so could result in death or serious injury.

21b. Circulating Air Blower (HMLV)

HMLV furnace models are equipped with electronically commutated motors (ECM).

Setting Blower Speed and "ON" and "OFF" Timings

Blower speed and on/off time delays are handled by ECM motor programming and are set via dipswitches per Table A-9 on page 17. Heating airflow rate is SW1 and on/off delay is SW4, both are set according to firing rate. Cooling airflow rate is SW2 and if used is set according to installed cooling capacity. SW3 can be used to adjust airflow rate by (+) or (-) 15%. Features of this ECM variable speed motor are that it will deliver a constant airflow within a wide range of external static pressures, and also includes:

- **Soft Start:** ECM will slowly ramp up to required operating speed. In heating cycle allows heat exchanger to reach operating temperature before set heat speed, minimizes noise and increases comfort.
- **Soft Stop:** At end of heating cycle, ECM will slowly ramp down. Allows increased energy efficiency and reduced noise levels.
- **Dehumidification:** Dehumidification feature is programmed into the variable speed motor. At start of each cooling cycle, variable speed motor will run at 82% of rated airflow for 7.5 minutes. After 7.5 minutes has elapsed, motor will increase to 100% of rated airflow. Used to provide dehumidification and improve system efficiency.
- **Continuous Fan Operation:** When thermostat continuous fan (G) switch is on without call for heating or cooling, indoor fan is immediately energized up to 50% of cooling speed. Allows continuous circulation of air between calls for heating or cooling. If call for heat (W) or cool (Y) occurs during continuous fan, blower remains energized.

22. Maintenance And Service

Routine Maintenance By Home Owner

- Arrange for professional servicing of furnace by the service or installation contractor annually.
- Homeowner is to maintain air filter or filters. A dirty filter can cause furnace to over-heat, fail to maintain indoor temperature during cold weather, increase fuel consumption and cause component failure.
- Inspect, clean or replace filter monthly.
- Furnace is supplied with semi-permanent type filter. If filter is damaged, replace with filters of same size and type.
- During monthly filter inspection, inspect general condition of furnace. Watch for signs of oil leaks in vicinity of oil burner, soot forming on any external part of furnace, soot forming around joints in vent pipe, etc. If any of these conditions are present, please advise your service or installation contractor.

Annual Service By Contractor

NOTICE

Combustion chamber (firepot) is fragile. Use care when inspecting and cleaning this area

- Inspect heat exchanger periodically and clean if necessary.

⚠ WARNING

Electrical shock hazard. Turn OFF electrical power supply at service panel before service or maintenance Failure to do so could result in death or serious injury.

- If cleaning is necessary, shut off oil supply, shut off power to the furnace and remove burner.
- Use stiff brush with wire handle, brush off scale and soot from inside drum and flue pipe.
- Clean radiator, remove clean-out cap screws. Remove caps carefully to avoid tearing gaskets.
- Wire brush can be used to loosen dirt and debris on the inside surfaces of radiator. Clean out all accumulated dirt, soot and debris with a wire handled brush and an industrial vacuum cleaner.
- Before replacing clean-out caps, inspect gaskets. If gaskets are broken, remove remnants and replace with new gaskets.
- Blower motor is factory oiled and permanently sealed. **Do not lubricate.** Excess oil causes premature electric motor failure.
- Inspect blower fan. Clean if necessary.
- Oil Burner Maintenance: Follow oil burner manufacturer instructions.
- Change oil burner nozzle and oil filter annually.
- Clean and inspect venting system for signs of deterioration. Replace pitted or perforated vent pipe and fittings.
- Barometric damper should open and close freely.
- Check electrical connections to ensure tight connections. Safety controls such as the high limit controls should be tested for functionality.
- Check fan control to ensure fan on and off delay function continues to start and stop blower fan at optimal settings.

⚠ WARNING

Fire, burn, explosion, asphyxiation hazard.

- Do not start burner when excess oil has accumulated, furnace is full of vapor, or combustion chamber is very hot.
- Do not burn garbage or paper in furnace.
- Do not leave paper or rags around furnace.

Failure to follow these instructions could result in death or serious injury.

23. OPERATING INSTRUCTIONS (HML)

Before Lighting

1. Open all supply and return air registers and grilles.
2. Open all valves in oil pipes.
3. Turn on electric power supply

To Light Unit

1. Set thermostat above room temperature to call for heat. Burner should start. It may be necessary to press RESET button on primary combustion control relay.
2. There is a fan on time delay before circulating fan is energized. United Technologies 1158-120 has adjustable fan on time set by selecting dipswitch combination displayed in Chart 1. Fan on delay can be set at 30, 60, 90 or 120 seconds.
3. Set the thermostat below room temperature. Oil burner stops.
4. Air circulation blower continues to operate until time off setting selected on electronic fan timer control times out. United Technologies 1158-120 has adjustable fan off time of 2, 3, 4 or 6 minutes. Fan timer control adjustments may be altered if air at room registers is high upon blower start up or shutdown.
5. Restore thermostat setting to comfortable temperature.

To Shut Down Unit

1. Set thermostat to lowest possible setting.
2. Set manual switch (if installed) in electrical power supply line to "OFF".

24. Operating Instructions (HMLV)

Before Lighting

1. Open all supply and return air registers and grilles.
2. Open all valves in oil pipes.
3. Turn on electric power supply.

To Light Unit

1. Set thermostat above room temperature to call for heat. Burner should start. It may be necessary to press RESET button on primary combustion control relay.
2. There is a fan on time delay before circulating fan is energized. United Technologies 1168-1 has adjustable fan on/off time delay programmed into ECM motor, and is set by selecting SW4 DIP switch combination displayed in Table A-9 page 17. Adjust Fan on/off delay according to input (nozzle size).
3. Set thermostat below room temperature. Oil burner stops.
4. Air circulation blower continues to operate until blower off delay setting programmed into ECM motor times out.
5. Restore thermostat setting to comfortable temperature.

NOTICE

If furnace is to be shut down for extended period of time, close oil supply valve to burner.

Check out and adjustments

HML and HMLV furnaces may be used with following oil burners.

Beckett AF, Beckett NX and Riello 40F oil burners are for applications using indoor air for combustion only.

Sidewall venting applications utilizing outdoor air for combustion, use Beckett AFII or Riello 40BF (Balanced Flue) oil burners only.

Table A-1 Beckett AF Oil Burner Set-Up

Beckett AF Series Oil Burners (For use with chimney vented units only)							
Furnace Model	Output BTU/Hr	Burner Model	Delavan Nozzle	Pump Pressure	Flow Rate	Head ¹	Static Plate
HML60C2 ² HMLV60C2 ²	59,000	AF76BNHS	0.50 / 80°A	100 PSIG	0.50 USGPH	F3	3- 3/8 in.
HML80C2 HMLV80C2	76,000	AF76BNHS	0.65 / 80°A	100 PSIG	0.65 USGPH	F3	3- 3/8 in.
HML90C2 ³ HMLV90C2 ³	85,000	AF76BNHS	0.75 / 80°A	100 PSIG	0.75 USGPH	F3	3- 3/8 in.
HML100C2 ³ HMLV100C2 ³	96,000	AF76BNHS	0.85 / 70°A	100 PSIG	0.85 USGPH	F3	3- 3/8 in.

¹ Head is shielded by ceramic insulator.

² Low Firing Rate Baffle required when using 0.50-gallon nozzle.

³ These models do not meet U.S. government requirements for minimum efficiency. They are intended for Canada only.

Table A-2 Beckett AFII Oil Burner Set-Up

Beckett AFII Series Oil Burners (For use with sidewall vented units with outdoor combustion air)						
Furnace Model	Output BTU/Hr	Burner Model	Delavan Nozzle	Pump Pressure	Flow Rate	Head
HML60CB2U2 HMLV60CB2U2	65,000	AFII-85	0.50 / 60°A	145 PSIG	0.55 USGPH	FB0
HML80CB2U2 HMLV-80CB2U2	77,000	AFII-85	0.60 / 60°A	115 PSIG	0.65 USGPH	FB3
HML90CB2U2 HMLV90CB2U2	88,000	AFII-85	0.70 / 60°A	115 PSIG	0.75 USGPH	FB3

Table A-3 Riello 40F Series Oil Burner Set-Up

Riello 40F Series Oil Burners (For use with chimney vented units)							
Furnace Model	Output BTU/Hr	Burner Model	Delavan Nozzle	Pump Pressure	Flow Rate	Air Gate	Turbulator Setting
HML60CRF2 HMLV60CRF2	60,000	40F3	0.50 / 60°W	105 PSIG	0.50 USGPH	2.6	1.0
HML80CRF2 HMLV80CRF2	77,000	40F3	0.60 / 60°W	115 PSIG	0.65 USGPH	2.6	1.5
HML90CRF2 HMLV90CRF2	87,000	40F3	0.65 / 60°W	135 PSIG	0.75 USGPH	3.6	2.0

Table A-4 Riello Balanced Flue (40BF) Burner Set-Up

Riello 40BF Balanced Flue Series Oil Burners (For use with sidewall vented units using outdoor combustion air)						
Furnace Model	Output BTU/Hr	Burner Model	Delavan Nozzle	Pump Pressure	Flow Rate	Turbulator Setting
HML60CRBU2 HMLV60CRBU2	61,000	40BF3	0.50 / 60°W	105 PSIG	0.50 USGPH	1.0
HML80CRBU2 HMLV80CRBU2	77,000	40BF3	0.60 / 60°W	115 PSIG	0.65 USGPH	1.5
HML90CRBU2 HMLV90CRBU2	88,000	40BF3	0.65 / 60°W	135 PSIG	0.75 USGPH	2.0

NOTE: Air gate setting may vary for sidewall vented units where air gate must be adjusted to achieve zero smoke.

Table A-5 Beckett NX Oil Burner Set-Up

Beckett NX Series Oil Burners (For use with chimney vented units)							
Furnace Model	Output BTU/Hr	Burner Model	Delavan Nozzle	Pump Pressure	Flow Rate	Retention Head	Air Setting
HML60CNX2 HMLV60CNX2	60,000	NX70LHSS	0.40 / 70°W	150 PSIG	0.50 USGPH	6-Slot	2.00
HML80CNX2 HMLV80CNX2	76,000	NX70LHSS	0.55 / 60°W	140 PSIG	0.65 USGPH	6-Slot	3.50
HML90CNX2 HMLV90CNX2	88,000	NX70LHSS	0.65 / 60°W	140 PSIG	0.75 USGPH	6-Slot	4.00
HML100CNX2 HMLV100CNX2	98,000	NX70LHSS	0.75 / 60°W	140 PSIG	0.85 USGPH	6-Slot	4.25

SHOP DRAWING

This review is solely for the verification of general design quality and does not alleviate the responsibility of the contractor for insuring that all specification, space and installation requirements are met.

Reviewed By: M.M. Reviewed ☒
 Reviewed as noted ☐
 Date: 8 July 2016 Resubmit ☐

A.1 OIL BURNER AIR ADJUSTMENT

Consult oil burner instructions provided in furnace documents envelope for specific information concerning burner adjustments, operation and troubleshooting.

Beckett AF Burner (Chimney Vent)

Adjust air shutter by loosening locking screws. Moving air shutter, and if necessary, bulk air band.

Beckett AFII Burner (Direct Vent)

Adjust burner air supply. Loosen locking screw located on black dial to right of burner. Turn black dial clockwise to increase combustion air and counter-clockwise to decrease combustion air. Re-tighten locking screw after obtaining proper setting.

Beckett NX Burner (Chimney Vent)

Turn adjusting screw to setting 1/2 number higher than proper set point, turn adjusting screw counter clockwise to proper setting.

Riello 40F3 Burner (Chimney Vent)

Combustion air is adjusted by removing burner cover. Loosen screws that secure air adjustment plate. Move adjusting plate to either increase or decrease combustion air. When proper air setting is achieved, retighten fixing screws.

Riello 40BF3 Burner (Direct Vent)

Combustion air can be adjusted with burner cover on. Remove plastic cover on top right hand side of burner cover. With phillips head screw driver, turn adjustment screw clockwise to increase combustion air or counter-clockwise to decrease combustion air. When combustion air is set, re-insert plastic cover.

A.2 Burner Electrodes

Adjustment of electrode tips with respect to each other, nozzle, burner head is very important to ensure smooth start-ups and to permit efficient combustion.

Beckett AF and AFII Burners

- Electrode gap: 5/32 inch.
- Distance above horizontal center-line: 5/16 inch. Older instruction sheets specify 7/16 inch. Current specification is 5/16 inch.
- Distance ahead of nozzle: 1/16 inch.
- "Z" dimension, distance from front of end cone (head) to face of nozzle should be 1-1/8 inches. If ceramic head is used, distance from end cone to nozzle face is increased to 1-3/8 inches.

Beckett NX Burners

- Electrode gap: 5/32 inch
- Distance above horizontal centerline: 1/4 inch
- Distance ahead of nozzle: 3/32 inch
- Check /adjust zero calibration per Beckett NX Oil Burner Manual supplied with furnace.

Riello 40F, & BF Burners

- Electrode gap: 5/32 inch.
- Distance above horizontal center-line: 13/64 inch.
- Distance ahead of nozzle: 5/64 to 7/64 inch.

A.3 Start Up

Use following instructions to set the burner:

1. Shut off electrical power to the furnace.
2. Install oil pressure gauge to pressure port on oil pump. (Refer to oil pump specification sheet included with burner instructions).
3. Restore electrical power to furnace.
4. Start furnace and bleed all air from fuel oil lines.
5. Close purge valve and fire the unit.
6. Allow furnace to warm up to normal operating temperatures. During this time, set pump pressure in accordance with data provided in Appendix A, Table A-1 thru A-4.
7. **Chimney vented units** - Drill 1/4" test port in venting between furnace flue outlet and draft regulator (barometric damper) to take smoke readings.
8. **Sidewall vented units** - Do not drill. Use test port in the supplied appliance connector to take smoke readings.
9. When furnace has reached "steady state" (after approximately 10 minutes). Set combustion air damper to get TRACE of smoke for chimney vented units and ZERO smoke for sidewall vented units.
10. Check system temperature rise. *Temperature rise is the difference between return air temperature measured at a point near return air inlet, and supply air temperature measured near furnace outlet.*
System temperature rise is listed on furnace rating plate. If temperature rise is too high, airflow must be increased. If temperature rise is too low, slow fan down.
11. After air adjustments have been completed, recheck the overfire draft at test port on burner mounting plate shown in Figure 2. Overfire draft should be adjusted to -0.02 inches w.c.
12. Turn burner off. Observe duct thermometer in supply air stream, note temperature blower fan stops. Fan adjustments can be made by moving dipswitch settings on timer control board for fan off delay.

- 13.** Check operation of limit switch.
 - A. Shut off power to furnace.
 - B. Temporarily remove neutral wire from PSC blower motor or remove 5 pin power connector from ECM blower motor. Isolate AC line voltage pins on 5 pin power connector with electrical tape to prevent electric shock hazard.
 - C. Restore electrical power to furnace.
 - D. Set thermostat above room temperature.
 - E. After three or four minutes of burner operation, limit control should turn burner off.
 - F. When limit function test is complete, shut off electrical power to furnace, replace neutral wire to PSC blower motor or 5 pin power connector to ECM blower motor. Restore power.
 - G. Blower fan will start up immediately. Once temperature has dropped and limit control has reset, fan will operate until fan off time is reached.
 - H. Oil burner will resume operation and continue until thermostat is satisfied.
 - I. Restore thermostat setting to comfortable temperature.
- 14.** Set heat anticipator adjustment in thermostat (if so equipped), by removing "R" or "W" wire to thermostat. Read amperage draw between the two wires. Failure to remove one of the wires from thermostat while performing this test could burn out heat anticipator. Set heat anticipator to amperage measured.
- 15.** Run furnace through at least three full cycles before leaving the installation, to ensure all controls are operating properly.
- 16.** Check all joints in any positive pressure venting system for leaks before leaving the installation site

A.4 Special Instructions For Units Equipped With Riello Burners

Riello specifications are listed in Tables A-3 and A-4. Consult Riello Installation Instructions supplied with Burner for specific information concerning burner adjustments, operation, and trouble-shooting.

A.5 Final Check Out

Verify all safety devices and electrical components have been set for normal operation.

Verify all electrical connections are tight and wiring is secure.

Verify homeowner is informed and understands:

Where circuit breaker or fuse is located in main electrical panel.

Where furnace switch is located, and switch "on" and "off" positions if not obvious.

Where oil shut-off valve from oil storage tank is located.

Thermostat operation, and other related accessories.


How to operate manual reset button on primary control, and when not to push the reset button.

How and where to visually inspect venting system for leaks or other problems.

How to inspect, clean and replace air filter, and other homeowner maintenance procedures.

Who to call for emergency service and routine annual service.

**FIGURE 3: UNITED TECHNOLOGIES 1158-120 FAN
TIMER BOARD (HML)**

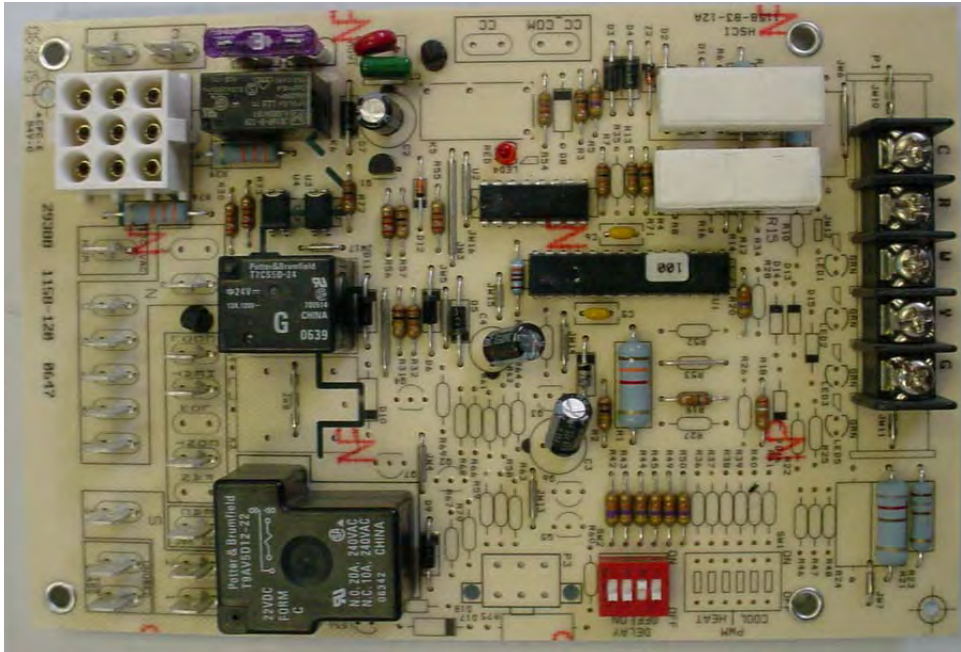

**FIGURE 4: UNITED TECHNOLOGIES 1168-1 ECM
TAP BOARD (HMLV)**

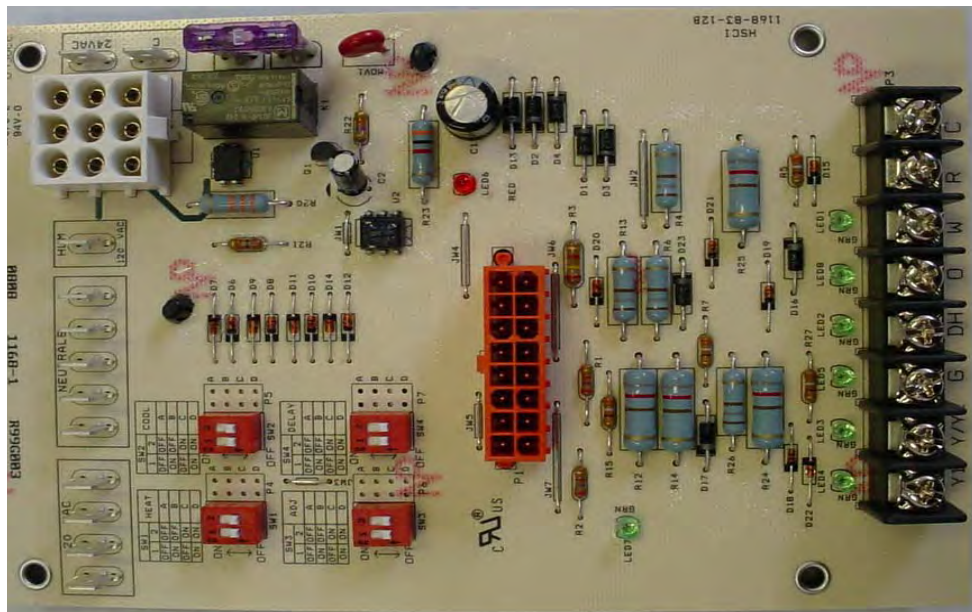


Table A-6 Direct Drive Blower Set-Up PSC Motor

Furnace Model	Blower	Blower Set-Up				Cooling Capacity		
		0.20 in. w.c.		0.50 in. w.c.		Tons	Power	CFM Range
		Speed	Motor	Speed	Motor			
HML-60	100-10T DD	Low	1/2 HP	Med-Low	1/2 HP	3	1/2 HP	690 – 1500
HML-80	100-10T DD	Med-Low	1/2 HP	Med-High	1/2 HP	3	1/2 HP	690 – 1500
HML-90	100-10T DD	Med-High	1/2 HP	High	1/2 HP	3	1/2 HP	690 – 1500
HML-100	100-10T DD	Med-High	1/2 HP	High	1/2 HP	3	1/2 HP	690 – 1500

Table A-7 Direct Drive Blower Characteristics PSC Motor

Furnace Model	Blower	Motor HP	Motor FLA	ΔT	Speed	CFM			
						External Static Pressure – Inches w.c.			
						0.20	0.30	0.40	0.50
HML 60 – 100	100-10T DD	1/2 HP	7.0	60°F	High	1741	1651	1556	1476
					Med-High	1557	1497	1434	1369
					Med-Low	1063	1051	1037	1037
					Low	697	697	687	672
									646

Table A-8 Direct Drive Blower Characteristics ECM Motor

Furnace Model	Blower	Motor HP	Motor FLA	ΔT	CFM RANGE		
					Continuous Fan	Heating	Cooling
HMLV 60 – 100	100-10T DD	1/2 HP ECM	7.7	60°F	445 - 605	625 - 1500	600 - 1200

TIP

Formulas will assist with design of duct-work and determination of air flow delivery.

CFM = Bonnet Output / (1.085 x System Temperature Rise (ΔT))

System Temperature Rise (ΔT) = Bonnet Output / (1.085 x CFM)

Table A-9 ECM Blower Set-Up (HMLV)

Dip Switch Adjustment Chart


For Input 0.50 USGPH TO 0.85 USGPH

SW1 - HEAT		POS.	INPUT USGPH
DIP Switch Position			
1	2		
OFF	OFF	A	0.65
ON	OFF	B	0.85
OFF	ON	C	0.75
ON	ON	D	0.50

SW3 - ADJUST		POS.	CFM
DIP Switch Position			
1	2		
OFF	OFF	A	0%
ON	OFF	B	(+)15%
OFF	ON	C	(-)15%
ON	ON	D	N/A

SW2 - COOL		POS.	AC Size (TON)
DIP Switch Position			
1	2		
OFF	OFF	A	3
ON	OFF	B	2.5
OFF	ON	C	2
ON	ON	D	1.5

SW4 - DELAY		POS.	INPUT USGPH
DIP Switch Position			
1	2		
OFF	OFF	A	0.65
ON	OFF	B	0.85
OFF	ON	C	0.75
ON	ON	D	0.50

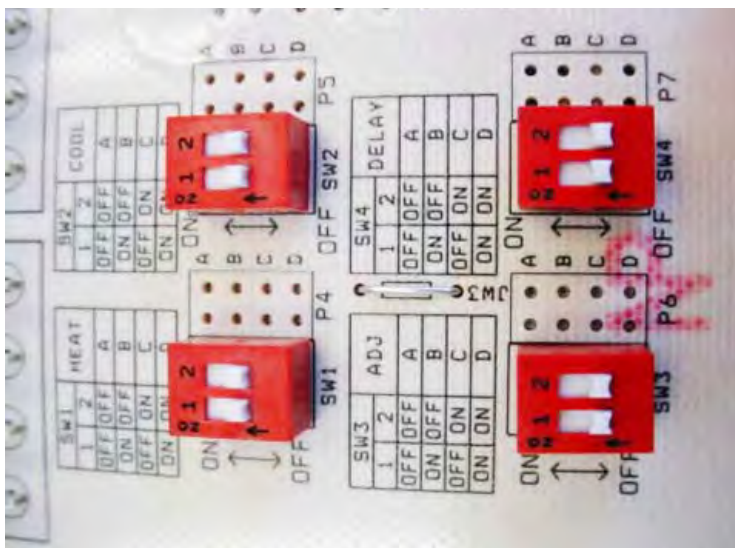

NOTE:

SW1 (HEAT) AND SW4 (DELAY) DIP SWITCHES MUST BOTH BE ADJUSTED ACCORDING TO INPUT (NOZZLE SIZE).

SW2 (COOL): 1 TON is approximately equal to 400 CFM

SW3 (ADJUST): (Heating Mode) Increase OR decrease temperature rise respectively
(Cooling Mode) Increase OR decrease CFM respectively

Table C-1: 1158-120 Electronic Fan Timer Board (EFT) Detailed Sequence Of Operation (HML)


Mode	Action	System Response
HEAT	Thermostat calls for heat. ("W" terminal is energized).	EFT closes the oil primary control T - T connections. Ignition system and the oil primary control start the furnace. Oil flows as long as the oil primary control senses flame. Burner motor is energized and heat "fan on" delay timing begins. When timing is complete, the circulator fan is energized at heat speed.
	Thermostat ends call for heat. ("W" terminal is de-energized).	The oil primary control is de-energized, terminating the burner cycle. Heat "fan off" delay timing begins. Length of delay depends on EFT dipswitch settings. When timing is complete, the circulator fan is de-energized. EFT returns to standby mode. (Oil primary control and circulator fan are off, unless continuous fan operation is selected at the thermostat).
	Burner fails to light.	Oil primary control locks out within lockout timing, (15 seconds). Burner motor is de-energized. (Even though thermostat is still calling for heat). If circulator fan has started, it continues through the selected heat "fan off" delay period.
	Established flame fails.	Burner motor is de-energized and oil primary control goes into recycle mode. If the selected heat "fan off" delay timing is longer than the recycle delay timing, the circulator fan continues to run through the next trial for ignition.
COOL	Thermostat begins call for cool. (G and Y terminals are energized).	Cooling contactor is energized immediately. Circulator fan is energized at cool speed.
	Thermostat ends call for cool. (G and Y terminals are de-energized).	Cooling contactor is de-energized immediately. Circulator fan turns off immediately.
FAN	Thermostat begins call for fan. (G terminal is energized).	Circulator fan is energized immediately at cooling speed.
	Thermostat ends call for fan. (G terminal is de-energized).	Circulator fan is de-energized immediately.
LIMIT	Limit switch string opens.	Oil primary control shuts off burner. Circulator fan is energized immediately at heat speed. EFT opens the oil primary control T - T connections. Circulating fan runs as long as limit string stays open. If there is a call for cooling or fan, the circulating fan switches from heating to cooling speed.
	Limit switch string closes (with existing call for heat).	EFT begins heat "fan off" delay sequence. Circulating fan turns off after the selected heat "fan off" timing. EFT re-closes the oil primary control T - T connections. Oil primary control is energized, initiating burner light off.
	Limit switch string closes (without existing call for heat).	Circulator fan turns off when heat "fan off" delay time is complete. Normal operation resumes; EFT control is in standby mode awaiting next thermostat command.
FAN	Continuous circulating fan is connected.	Circulating fan is energized when there is no call for heat, cool, or fan. If fan operation is required by a call for heat, cool, or fan, the EFT switches off the continuous fan speed tap before energizing the other fan speed.
EAC	Electronic Air Cleaner is connected.	Electronic air cleaner (EAC) connections are energized when the heat or cool speed of the circulator fan is energized. EAC connections are not energized when the optional continuous fan terminal is energized.
HUM	Humidity control is connected.	Humidifier connections are energized when the oil burner motor is energized.

1168-1 Electronic Fan Timer Board (EFT) Detailed Sequence Of Operation (HMLV)**Thermostat Input LEDs (LED1-5, LED8)**

Six green LEDs are placed behind their respective thermostat connections (Y1, Y/Y2, G, DH, O, and W) and operate whenever a call is present.

Thermostat calls for heat "W". The 24VAC input signal is passed to pin 2 of P1 and will drive the K1 relay that provides dedicated contacts to the T-T input of the Oil Primary Control. **Thermostat calls for cool "Y1".** The 24VAC input signal is passed to pin 6 of P1. **Thermostat calls for fan "G".** The 24VAC input signal is passed to pin 15 of P1. **Thermostat calls for dehumidification "DH".** The 24VAC input signal is passed to pin 10 of P1. **Thermostat calls for reversing valve "O".** The 24VAC input signal is passed to pin 9 of P1.

C.1 Troubleshooting


WARNING

Electrical shock hazard. Only a trained, experienced service technician should perform troubleshooting procedure. Failure to do so could result in death or serious injury.

C.2 Preliminary Steps:

Consult Beckett or Riello instruction manuals provided with oil burner for specific information regarding oil burner primary control sequence of operation, diagnostics and troubleshooting.

Check diagnostic light for indications of burner condition.

NOTICE

When simulating call for heat at oil primary control, disconnect at least one thermostat lead wire from T - T terminals to prevent damage to thermostat. Neglecting this procedure may burn out heat anticipator of standard 24 vac thermostat, or cause harm to components within micro-electronic thermostat.

Before checking oil primary control, perform these preliminary checks, repair or replace controls as necessary:

- Check power supply, fuse box or breaker, any service switches, all wiring connections, and burner motor reset button (if equipped).
- Check limit switches to ensure switch contacts are closed.
- Check electrode gap and position.
- Check contacts between oil primary control and electrodes.
- Check oil supply (tank gauge).
- Check oil nozzle, oil filter, and oil valves.
- Check piping or tubing to oil tank.
- Check oil pump pressure.

C.3 Check Oil Primary Control

If the trouble does not appear to be in the burner or ignition hardware, check the oil primary control per manufacturer's instructions included with oil burner.

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

⚠ WARNING

Electrical shock hazard. Only a trained, experienced service technician should perform troubleshooting procedure. Failure to do so could result in death or serious injury.

Table C2: System and General Troubleshooting

Problem	Possible Cause	Remedy
Furnace will not start.	Thermostat not calling for heat	Check thermostat and adjust. Check thermostat for accuracy; if mercury switch type, it might be off level.
	No power to furnace	Check furnace switch, main electrical panel furnace fuse or circuit breaker. Look for any other hand operated switch, such as old poorly located furnace switch, which was not removed during furnace replacement.
	Thermostat faulty	Remove thermostat wires from oil primary control terminals T-T. Place a jumper across T-T. If furnace starts, replace thermostat, thermostat sub-base (if equipped), or both.
	Oil primary control faulty	Check reset button on oil primary control. Remove thermostat wires from oil primary control terminals T - T. Check for 24V across T -T. If no voltage is present, check for 115V to oil primary control. If 115V is present, refer to oil primary control documentation provided with oil burner.
	Photo Cell wiring shorted or room light leaking into photo cell compartment	Check photo cell (cad cell) wiring for short circuits. Check for room light leaking into cad cell compartment. Repair light leak if necessary.
	Open safety switch	Check for open limit or auxiliary limit. Check internal wiring connections; loose connectors, etc.
Furnace will not start without first pushing oil primary control reset button. (Happens on frequent basis)	No fuel oil	Check fuel oil supply. Check all hand operated fuel oil valves are in open position. Fill oil storage tank if necessary.
	Clogged nozzle	Replace nozzle with high quality replacement. Use rating plate or Tables in Appendix A as a guide.
	Clogged oil filter	Replace oil tank filter or in-line filter if used.
	Low oil pump pressure	Connect pressure gauge to oil pump. Adjust pump pressure, or replace oil pump if necessary. Verify erratic pressure readings are not caused by defective fuel oil line.
	Air getting into fuel oil lines, or fuel oil line dirty, clogged, or in some manner defective	Check fuel oil lines. Replace any compression fittings found with high quality flared fittings. Check for signs of oil leaks. Any oil leak is potential source of air or contaminants.
	Defective burner motor	Check burner motor. If burner motor is cutting out on over-load, determine why. Replace if necessary.

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

Table C-2: System and General Troubleshooting continued

Problem	Possible Cause	Remedy
Furnace starts, but cuts out requiring manually re-setting oil protector reset button.	Photo Cell (Cad Cell) defective.	If cad cell is dirty, clean it. Determine why cad cell is getting dirty. If cad cell is poorly aimed, realign it. NOTE: Photocell should have resistance of 100 K Ω in absence of light; maximum of 1500 Ω in presence of light. Verify room light is not leaking into the cad cell compartment. (See diagnostic light section).
Furnace starts, but cuts out requiring manually re-setting oil protector reset button.	No fuel oil.	Check fuel oil supply. Check that all hand operated fuel oil valves are in the open position. Fill oil storage tank if necessary.
	Clogged nozzle.	Replace nozzle with high quality replacement. Use rating plate or Tables in Appendix A as a guide.
	Clogged oil filter.	Replace oil tank filter or in-line filter if used.
	Low oil pump pressure.	Connect pressure gauge to oil pump. Adjust pump pressure, or replace oil pump if necessary. Verify erratic pressure readings are not caused by defective fuel oil line.
	Air getting into fuel oil lines, or fuel oil line dirty, clogged, or in some manner defective.	Check fuel oil lines. Replace any compression fittings found with high quality flared fittings. Check for any signs of oil leaks. Any oil leak is a potential source of air or contaminants.
	Defective burner motor.	Check burner motor. If burner motor is cutting out on over-load, determine why. Replace if necessary.
	Water or contaminants in oil.	Drain fuel oil storage tank; replace fuel oil. (Consult with fuel oil supplier).
	Frozen oil line.	Gently warm oil line. Insulate oil line. (Outdoor piping size may require increased diameter).
Oil burner sputtering at nozzle	Electrodes out of adjustment or defective.	Check electrode settings. Check electrodes for dirt build-up or cracks in porcelain.
	Poor igniter connections or defective igniter.	Check contacts between the igniter and electrodes. If OK, replace the igniter
	Fuel oil filter clogged.	Replace fuel oil storage tank filter and / or fuel oil in-line filter.
	Defective oil pump.	Check burner motor and / or fuel oil pump coupling. Check oil pump pressure. Replace fuel oil pump if necessary.
	Fuel oil line partially clogged or contains air.	Bleed air from oil line. If problem persists, replace oil line.
Excessive fuel oil consumption.	System temperature rise too high.	System temperature rise should not exceed 75°F. Check for clogged air filters. Check blower fan for excess dirt build-up or debris. Speed up blower fan if necessary.
	Poor "fan off" delay timing selection, (fan stops too soon).	Check "fan off" delay timing setting. Use duct thermometer in supply air plenum take-off or first few inches of supply air trunk duct. Fan should shut off at 90° - 100°F. Manipulate dip switch settings to come as close as possible to this "fan off" temperature.
	Fuel oil leak.	Check fuel oil line for leaks. Repair or replace if necessary.
	Stack temperature too high.	Check stack temperature. Stack temperatures will normally range from 400° to 500°F. Check draft regulator. Draft should be set to -0.02 in. w.c.
	Thermostat improperly adjusted or in poor location.	Check thermostat heat anticipator setting against measured amperage draw. Increase heat anticipator setting if necessary. If thermostat is being influenced by drafts, sunlight, duct work, etc., relocate to suitable location.

APPENDIX C - SEQUENCE OF OPERATION AND TROUBLESHOOTING

Table C-2: System and General Troubleshooting continued

Problem	Possible Cause	Remedy
Too much smoke.	Insufficient combustion air adjustment at oil burner, or improper draft pressure.	Adjust oil burner combustion air band and draft regulator to gain highest practical CO ₂ or lowest practical O ₂ content in flue gases. See Burner Set Up.
	Heat exchanger partially clogged.	Check for soot build-up in heat exchanger flue passages, especially in outer radiator.
Soot building up on blast tube (end coning).	Poor alignment between oil burner blast tube and fire pot.	Check alignment. Blast tube should be centered with fire pot burner opening. Oil burner head should be ¼ inch back from inside surface of fire pot.
	Flame impingement caused by incorrect nozzle angle.	Check nozzle size and angle. (See Appendix A). Check distance from head to inside surface of fire pot.
	Defective fire-pot	Check fire-pot. Repair or replace.
Furnace will not warm home to desired temperature.	Airflow blocked or dirty air filter.	Clean or replace air filter.
	Thermostat adjustments or location.	Check thermostat heat anticipator setting against measured amperage draw. Increase heat anticipator setting if necessary. If thermostat is being influenced by drafts, sunlight, duct work, etc., relocate to suitable location.
	Insufficient airflow.	Check all dampers. Open closed dampers including registers in unused rooms. Check system temperature rise. If temperature rise is too high, speed up blower fan.
	Defective high limit control.	Test high limit function of all limit switches. Use duct thermometer to verify accuracy of limit control. Check for obstructions to airflow around limit switch bimetal elements. Replace control if necessary.
	Under-sized nozzle.	Check nozzle. If problem is not caused by air flow problems, use larger nozzle, if permitted by rating plate.
	Blower fan motor stopping intermittently on overload.	Check blower fan motor amperage draw. Check motor ventilation ports, clean if necessary. Replace motor if necessary.
	Burner motor stopping intermittently on overload.	Check burner motor. Replace if necessary.
Home does not heat evenly	Improper distribution of heat.	This is not likely to be a furnace problem. Balance duct system.
Supply air temperature too hot.	Airflow blocked or dirty air filter.	Clean or replace air filter.
	Insufficient airflow.	Check all dampers. Open closed dampers including registers in unused rooms. Check system temperature rise. If temperature rise is too high, speed up blower fan.
Supply air temperature too cool.	Excess airflow.	Check system temperature rise. Slow down blower fan if necessary.
	Excessive duct losses.	Check supply air ductwork. Seal leaky joints and seams. Insulate ductwork if necessary.
Supply air temperature too cool during first moments of furnace cycle.	Fan control "fan on" setting too low.	Increase "fan on" dipswitch settings on EFT if control has this option. Register air deflectors may help.
	Excessive duct losses.	Check supply air ductwork. Seal leaky joints and seams. Insulate ductwork if necessary.

APPENDIX D - HOMEOWNER'S REFERENCE TABLE

Model No.		
Serial No.		
Date Installed		
Contractor		
Contact		
Address		
Postal Code		
Telephone No.		
After Hours No.		

Fuel Supplier

Fuel Oil Supplier	
Contact	
Telephone No.	
After Hours No.	

PARTS LISTING

Parts Listing: Chimney Vent Models HML80(C2,CRF2, CNX2) and HMLV80(C2,CRF2, CNX2)

Ref. No.	Description	Part No.
1	Left Side Panel Assembly	29130AD
2	Right Side Panel Assembly	29129AD
3	Rear Panel	29131AD
4	Blower Division Assembly	29189
5	Base Panel	26216
6	Inner Front Panel	30066
7	Blower Access Panel	27721AD
8	Top Panel	21437AD
9	Heat Exchanger Assembly	550001636
10	Combustion Chamber Retainer Bracket	27068
11	Replacement Combustion Chamber	27000WP
12	Oil Burner Mounting Plate Assembly	109007674
	Sight Glass Cover Plate	29850
	Sight Glass Gasket (2 per unit)	29870
	Sight Glass	29876
13	Flue Connector	29005
14	Pouch Gasket	2080175
15	Flue Collar Gasket	21994
16	Insulation Retainer	20602
17	Radiator Clean-out Cover (2 per unit)	240007841
	Radiator Clean-out Cover Gasket (2 per unit)	240006333
18	Clean-out Gasket Retainer	29161
	Clean-out Tube Gasket	29163
19	Filter Frame 16" X 25"	18020
20	Filter Frame End Support	5592B2
21	Filter 16" X 25" X 1" Permanent	2180023
24	Control Box	29362
25	Upper Door Panel	30164AD
	Logo Bezel	28479
	Logo Label	28563
26	Limit Disc 60T11 BOF 155°F	30071
27	Fan Timer Control 1158-120 UTEC	29388
	Fan Timer Control 1168-1 ECM UTEC	240007048
28	Wire Harness, Controls Fan Timer	29364
29	Wire Harness PSC, Blower	29365
30	Wire Harness, Fan Timer Board, Transformer	29751
31	Wire Harness, ECM Blower Control	240006438
	Wire Harness, ECM Blower Supply	240005742
32	Transformer	240005330
33	Draft Regulator	27494 (5")
34	Oil Burner Assembly, Beckett AF76BNHS	30067
	Oil Burner Assembly, Beckett NX70LHSS	240010182
	Burner Motor 1/7 HP 3450 RPM PSC	29689
	Beckett Clean-Cut Oil Pump A2EA6520	29688
	Solid State Ignitor	29522
	Oil Primary Combustion Control 7505P1515	240008818
	Flame Retention Head (F3 for AF burner)	1050002
	Low Fire Kit (0.50 GPH for AF burner)	29880
	Low Firing Rate Baffle (for AF burner)	25521101
34	Oil Burner, Riello 40F3	29568

PARTS LISTING

Parts Listing: Chimney Vent Models HML80(C2,CRF2,CNX2) and HMLV80(C2,CRF2,CNX2)


Ref. No.	Description	Part No.
35	Blower Assembly Direct Drive	30146
	Blower Assembly Direct Drive ECM	109007271
	Blower Housing and Wheel, 100-10T DD (HML and HMLV)	30626
	Blower Motor, 1/2 hp, 4-Speed	102000131
	Blower Motor, 1/2 hp, ECM Programmed	109007272
	Motor Mounting Band TR5868	17811
	Motor Mount Arms – 10-10 DD Blower (3 per unit)	26251
	Motor Run Capacitor, 10 mfd @ 370 Vac	27743
	Capacitor Strap	27761
	Blower Slide Rail 2 Per	27733
36	Right Side Panel, Air Baffle HML- 80C and HMLV-80C	27731
*	Blocked Vent Safety Switch Kit Complete	30693
*	Blocked Vent Safety Switch - Replacement Switch Only	30660

Parts Listing: Direct Vent Models HML80(CB2U2,CRB2U2) and HMLV80(CB2U2,CRB2U2)

Ref. No.	Description	Part No.
All parts are the same as listed on previous pages for chimney vent except where noted below.		
13	Flue Connector Assembly 6" to 4" 90° Elbow	240008224
14	Pouch Gasket (Second gasket required for Direct Vent)	2080175
15	Flue Collar Gasket (Second gasket required for Direct Vent)	21994
28	Wire Harness, Controls, Fan timer, Direct Vent	30745
34	Beckett Oil Burner AFII 85	30069
	Burner Motor 1/7 HP 3450 RPM PSC	28907
	Beckett Clean-cut Oil Pump A2EA6520	29688
	Solid State Ignitor	28558
	Oil Primary Combustion Control 7505P1530	
	Air Tube Combination FBX80HGXS	28561
	Flame Retention Head (FB3)	28533
34	Riello Oil Burner 40BF3	30427
*	Pressure Switch -0.28" WC	30700
*	10 Second Bypass Timer GPS00C9X10 (Use with Beckett AFII)	30699
*	25 Second Bypass Timer GPS00C9X25 (Use with Riello 40BF3))	240005182

PARTS LISTING

Model HML and HMLV Diagram

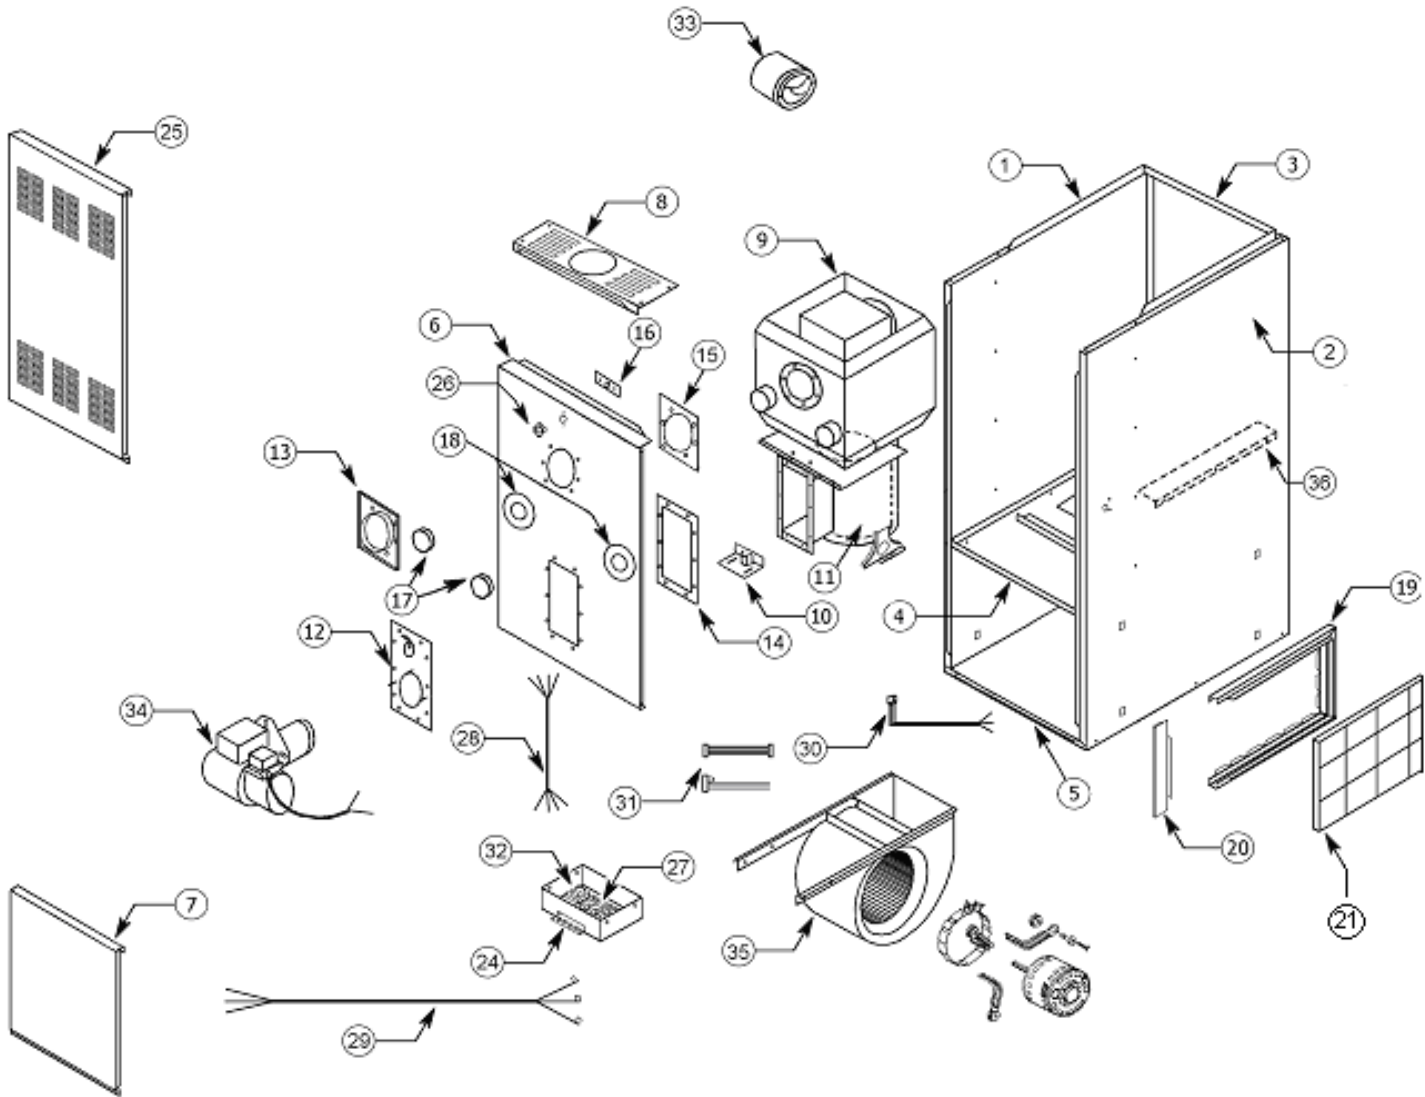

ECR International
2210 Dwyer Avenue, Utica NY 13501
web site: www.ecrinternational.com