

Nunavut Regional Office P.O. Box 2200 Iqaluit, NU, X0A 0H0

February 09, 2009

Attn: Mr. Thomas Kabloona, A/Chief Executive Officer Nunavut Water Board P.O. Box 119 Gjoa Haven, Nunavut X0B 1J0

RE: Nunavut Water Board (NWB) Licence No. 1BR-ROB0813 (NWB's Required Submissions)

As per the table of required submissions on page iii of the Roberts Bay/ Ida Bay's NWB Licence # 1BR-ROB0813, please find the following documents enclosed:

- 1. NWB's Table of Required Submissions (with INAC's responses);
- 2. Modifications to final Remedial Action Plan (RAP) highlighting some modifications made to the project since the submission of the final RAP to NWB. The modifications were effected in the Project Specifications;
- 3. Roberts and Ida Bay Project Specifications;
- 4. General Monitoring Plan (as per Part K of the Water Licence # 1BR-ROB0813);
- 5. Long Term Monitoring plan;
- 6. Abandonment and Restoration Plan;
- 7. Operations and Maintenance Plan for Sewage Disposal Facility;
- 8. Site Specific Health and Safety Plan; and
- 9. Tailings Freezeback Report.

Should you have any questions or require any clarifications, please contact the undersigned or the Project Manager, Dele Morakinyo at dele.morakinyo@inac-ainc.gc.ca, or by telephone at (819) 934-9224

Sincerely,

Natalie Plato, P. Eng.

Director, Contaminated Sites Program (NRO)

Tel: (867) 975-4730; Fax: (867) 975-4736

Email: Natalie.Plato@inac-ainc.gc.ca



Roberts Bay/Ida Bay Mine Site Remediation Project No. 416829

Ida Bay Adit

Tailings Pond Landfill Plan and Sections Page 1 of 2
Tailings Pond Landfill Plan and Sections Page 2 of 2

LIST OF CONTENTS

Section 00 00 00 Page 1 of 1

Section Title Pages Division 01 01 11 00 Summary of Work 7 Work Restrictions 01 14 00 1 Project Management and Construction Schedule 01 32 19 6 01 33 00 **Submittal Procedures** 3 Site Specific Health and Safety Plan 01 35 32 11 01 35 43 **Environmental Procedures** 3 01 41 00 Regulatory Requirements 3 Temporary Facilities 2 01 51 00 01 53 00 Mobilization and Demobilization 1 Camp Facility 01 54 00 8 01 71 01 Survey Requirements 2 01 74 19 Construction Waste Management and Disposal 1 01 77 00 Closeout Procedures 1 01 78 00 **Closeout Submittals** 2 **Division 02** 02 41 00 Demolition and Removal of Hazardous Waste 4 02 41 13 Selective Site Demolition Division 03 03 05 11 Mine Opening Seal 3 Division 31 4 31 23 10 Excavating and Backfilling Tailings Pond Non Hazardous Landfill 31 23 11 10 31 23 12 Geotextile 5 Rough Grading 31 23 13 1 **Figures** Roberts Bay and Ida Bay Location Roberts Bay Silver Mine Photomap - RESCAN Roberts Bay Abandoned Mine Site Sample Locations - RESCAN Ida Bay Silver Deposit Photomap Estimated Volumes of Waste Rock at the Roberts Bay and Ida Bay Mine Sites Roberts Bay Waste Rock location Ida Bay Waste Rock location Roberts Bay Adit #1 Roberts Bay Adit #2

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829 **CAMP FACILITIES**

Section 01 54 00 Page 1 of 8

Part 1 General

1.1 PRELIMINARY REQUIRMENTS

- .1 Prior to installation of camp facilities and service area, submit location and layout plan to Engineer for review.
- .2 The location of the camp facilities must be approved by Engineer. Provide 3 weeks prior to mobilization.
- .3 Provide and operate complete camp facilities services, including provision, preparation, and serving of food for construction personnel, Engineer and his authorized personnel, and other specified site visitors.
- .4 Temporary camp facilities to be established and operated in accordance with local regulations and authorities having jurisdiction.
- .5 Provision of camp facilities services consisting of:
 - .1 Design, supply, installation, operation and maintenance of camp facilities including:
 - .1 All associated facilities.
 - .2 Utilities and services required for camp such as heating, lighting, fuel, potable, and domestic water systems.
 - .3 Sewage collection.
 - .4 Treatment and disposal systems.
 - .5 Waste, refuse and garbage collection and disposal system.
 - .6 Camp fire prevention.
 - .7 Alarm and fire fighting system.
 - .8 Camp safety and security service.
 - .9 Meals and catering service.
 - .10 Shower/wash facilities.
 - .11 Sleeping and washroom facilities.
 - .12 Bedding and bedding laundry service.
 - .13 Janitorial service.
 - .14 Recreational facilities.
 - .15 Personnel laundry facilities.
 - .2 Obtain and pay for, as part of provision of camp facilities services all licenses, permits, and authorizations required to comply fully with all laws, ordinances and regulations of Federal and local authorities in connection with the performance of work of this section.
 - .3 Provide camp facilities services for own workforce, surveyors, Engineer, specialist inspectors (1) and for two (2) over night visitors. Separate space is to be provided for female staff.
 - .4 Demobilize and remove camp facilities from site at completion of contract.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829 **CAMP FACILITIES**

Section 01 54 00 Page 2 of 8

- .6 Camp facilities including its facilities, utilities, services, location and operation is subject to Engineer's approval and is to be designed, established and operated in accordance with applicable Federal, Territorial and local codes, regulations and requirements governing camp facilities.
- .7 Camp location to be established at a location, which does not interfere with operations undertaken on site. Camp and service area locations are subject to Engineer's approval.
- .8 Pay for all costs for inspection of camp and electrical facilities by authorities having jurisdiction.
- .9 Pay for all costs for inspection of camp and electrical facilities by authorities having jurisdiction.
- .10 Provide camp facilities services for own workforce, Engineer and Engineer's authorized personnel as follows:
 - .1 Resident Engineer: duration of project.
 - .2 Engineer's Authorized Personnel, PWGSC and INAC Office Personnel: on an as required basis, maximum of 2 persons at any one time, arriving and departing with crew changes.
- .10 Soft-sided tents will meet the requirements of this specification.

1.2 ENVIRONMENT

- .1 Comply with environmental regulations as per Section 01 35 43.
- .2 Adhere to applicable guidelines and in accordance with authority having jurisdiction.
- .3 Submit to Engineer before opening of camp, proof of adherence to all environmental regulations. Display all applicable regulatory permits at the camp site.
- .4 Camp facilities including its facilities, utilities, services, location and operation is subject to the approval of Engineer and is to be designed, established and operated in accordance with applicable Federal, Territorial and local codes, regulations and requirements governing camp facilities. The camp facilities will meet or exceed the most recent edition of the Government of Nunavut, Public Health Act and Regulations.
- .5 Provide water that meets Health Canada Guidelines for Canadian Drinking Water Quality. Submit information on water, including the source and water quality test results to Engineer prior to opening the camp.
- .6 Comply with sewage treatment, disposal and closure requirements as outlined in Section 01 35 43 Environmental Procedures.

1.3 CAMP INSTALLATION AND REMOVAL

- .1 Mobilize equipment, camp, personnel, and materials.
- .2 Establish approved temporary buildings and facilities as required.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829

CAMP FACILITIES

Section 01 54 00 Page 3 of 8

- .3 Place all camp facilities so as not to interfere with any construction or other site activities.
- .4 Carry out all work necessary to protect environment, such as construction pads (if required), prior to actual installation of camp.
- .5 Do not locate camp generators adjacent to any sleeping facility, camp kitchen or an area with constant human presence.
- .6 Remove camp facilities, clean up, and leave site in condition satisfactory to Engineer.

1.4 SITE LOCATION

- .1 Locate Camp at a site that provides for the safety and welfare of its residents for the duration of the Work.
- .2 Locate Camp within walking distance of the work site, if possible.

1.5 MAINTENANCE

- .1 Maintain Camp facilities in tidy and sanitary condition.
- .2 Heat Camp facilities as required.
- .3 Clean Camp facilities daily. Clean and sanitize toilets, urinals, showers, wash basins, and laundry tubs daily.
- .4 Provide adequate bug, pest, and wildlife control to all buildings, facilities, and camp site.
- .5 Maintain camp facilities power plant, fuel storage facilities, water lines, sewage system, garbage disposal containers, heating units, appliances and furniture in neat, clean and good operating condition and make repairs as necessary.

1.6 ENGINEER'S REQUIREMENTS

- .1 Provide for sole use of Engineer, one room for sleeping. Space to be furnished in same manner as rooms used by Contractor's personnel.
- .2 Provide space for up to 2 overnighting or occasional site visitors as and when required in the camp.
- .2 Provide a minimum of 11 m³ of air space for each occupant.
- .3 Provide space in the Camp for the exclusive use of the medic. Space must have two beds. Provide medic with a communications device compatible with all site communications.
- .4 Provide space for the Engineer to use as an office.
- .5 Engineer's office to have a minimum floor space of 15 square metres and furnished with the following:
 - .1 Table, minimum size 1.8m x .8 m
 - .2 One two-drawer file cabinet with locking mechanisms.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829

CAMP FACILITIES

Section 01 54 00 Page 4 of 8

- .3 One waste paper basket.
- .4 One duplex receptacles, 120V, 60hz.
- .6 Provide and maintain at Engineer's office one satellite phone line or equivalent communication approved by Engineer.
- .7 Provide, for use by one (1) mobile communication radio, complete with charging units. The radio shall allow for on-site communication between engineer and the Contractor.
- .8 It is critically important that the communication equipment provided by the Contractor for Engineer's use is reliable and of the highest quality. Immediate repair or replace faulty equipment.
- .9 Provide one (1) ATV c/w trailer as described under Section 01 51 00, Temporary Facilities for use by Engineer and authorized visitors.

1.7 ADDITIONAL SAFETY EQUIPMENT

- .1 Maintain at site, two (2) sets of CSA approved safety rubber boots and three (3) safety hats with liners and safety glasses for use by Engineer and visitors.
- .2 Maintain a supply of ear plugs or any items necessary for well being of camp occupants.

1.8 KITCHEN DINING COMPLEX

- .1 Functional design of kitchen to include all equipment necessary for food storage, preparation, cooking and serving 3 meals daily to meet camp population requirements.
- .2 Provide dishwashing and garbage handling equipment, consistent with required function of kitchen.
- .3 Provide seating capacity of dining area to meet camp population requirements.
- .4 Store all non-perishable food supplies in adequate containers, kept in an orderly manner and under sanitary conditions, in vermin-proof enclosures.
- .5 Store all perishable food supplies in properly refrigerated indoor areas within camp facilities to preclude attraction of wildlife.

1.9 LINEN, BEDDING AND LAUNDRY

- .1 Supply three (3) blankets, two (2) sheets, one (1) bath towel, one (1) face cloth, and one (1) pillow and one (1) pillow case for each person living in camp.
- .2 Change two (2) sheets and one (1) pillow case once per week or whenever a change of occupant occurs.
- .3 Launder sheets and pillow covers regularly to provide weekly supply of clean linen.
- .4 Provide clean blankets to all camp occupants. Clean blankets at conditions warrant.
- .5 Cooking staff to wear suitable kitchen attire. Launder kitchen attire daily.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829 **CAMP FACILITIES**

Section 01 54 00 Page 5 of 8

1.10 ABLUTION AND LATRINE FACILITIES

- .1 Provide ablution and latrine facilities as per AHJ and codes requirements and as per camp occupancy requirements as follows:
 - .1 Flush toilets as required.
 - .2 Urinals as required.
 - .3 Wash basin of stainless steel, porcelain, with one mirror over each basin as required.
 - .4 Individual shower units with non-slip flooring together with adjacent dressing cubicles as required.
- .2 Maintain separate ablution and latrine facilities for female/male populations.
- .3 Maintain separate ablution and latrine facilities for Engineer and Engineer's support staff.
- .4 Clean ablution and latrine facilities daily. Supply adequate amounts of paper towels, toilet tissue, and individual drinking cups in washrooms.

1.11 FOOD QUALITY AND SCHEDULE

- .1 Groceries to be of top quality. Eggs and dairy products to be grade "A". Canned fruit and vegetables to be choice or fancy. Provide choices of traditional food.
- .2 Beef to be Canada Grade "A", pork to be Grade "I", turkey, chicken, or other fowl to be "utility" or better.
- .3 As a minimum, provide three meals a day. Provide casual meals or fourth meals if irregular shifts are worked or irregular travel by personnel is required.
- .4 Provide box lunches for all camp occupants who will not be in a camp for noon meal.

1.12 CAMP RULES

- .1 A Camp of this nature in a remote location requires that certain basic rules be established for mutual benefit of all camp occupants.
- .2 Prepare a set of Camp rules, for approval by Engineer, prior to commencing operations.
- .3 Camp rules to cover such items as property damage, smoking, use of alcoholic beverages, drugs, firearms, security, nuisance, and any other matters to make Camp an orderly, well managed operation.
- .4 In order to protect all residents, the following activities are strictly prohibited and could result in dismissal and removal from site:
 - .1 Tampering with smoke or fire detectors/alarms, and other safety equipment.
 - .2 Possession and consumption or use of alcohol or illegal drugs.
 - .3 Possession or use of firearms, ammunition, or other lethal weapons.
 - .4 Fighting, physical violence, stealing, vandalism, or destruction of property.
 - .5 Harassment in any form.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829 **CAMP FACILITIES**

Section 01 54 00 Page 6 of 8

- .6 The employee or visitors departure from the site for any of these reasons will be on the first available scheduled transportation. Should this person wish to leave immediately, the costs will be the responsibility of the employee.
- .5 Become familiar with all emergency procedures, exits, signals, and alarms. Keep accesses to fire equipment clear at all times, and immediately report any damaged fire or safety apparatus to your supervisor.
- .6 Use vehicles or equipment only when trained and authorized to do so.
- .7 Use, adjust, and repair equipment or machinery only when authorized by the supervisor.
- .8 Vehicle/Equipment checks must be completed and the logbook updated at the beginning of every shift or when starting any vehicle or piece of equipment. Seat belts must be worn at all times in vehicles and equipment.
- .9 Keep living areas as clean as possible.
- .10 Have warm emergency clothing available at all times during the winter.
- .11 Keep clothing or other flammable goods away from baseboard heaters.
- .12 Ensure that personal items and clothing are marked for easy identification.
- .13 Employees must store/remove all personal effects and belongings when going off rotation or permanently off site.
- No loose clothing, dangling neckwear, bracelets, rings or similar articles are to be worn where there is a risk of coming into contact with moving machinery or electrical energized equipment.
- .15 Keep workplace and equipment neat and orderly. Complete an inspection of work place tools and equipment prior to starting work. Correct any hazards immediately.
- .16 Provide a copy of Camp rules to all camp occupants prior to or upon arrival in camp.
- .17 Enforce Camp rules.

1.13 LAUNDRY FACILITIES

- .1 Provide laundry facilities dedicated to the Camp and separate from units used for washing of site PPE (e.g. coveralls).
- .2 Laundry facilities for washing of PPE to be located in controlled facility within or adjacent to base camp.

1.14 EQUIPMENT, TOOL AND MATERIALS STORAGE

- .1 Provide and maintain, in a clean and orderly condition, weatherproof sheds for storage of tools, equipment, and materials.
- .2 Locate materials not required to be stored in weatherproof sheds in a manner to cause least interference with work activities.

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829

CAMP FACILITIES

Section 01 54 00 Page 7 of 8

1.15 SANITARY FACILITIES

.1 Washroom facilities are to be provided at, or in close proximity to, the respective camp, and work areas.

1.16 ACCESS TO WORK

.1 Be responsible for the transport of personnel and equipment to the various work areas on the site.

1.17 TRANSPORTATION

- .1 Provide return air transportation services for Contractor, Engineer, and Engineer's Authorized Personnel from Cambridge Bay to the Roberts Bay or Ida Bay sites.
- .2 It is anticipated that air transport of Engineer's Authorized Personnel will be scheduled to coincide with the transport of Contractor's workforce to and from the site.
- .3 Engineer will advise Contractor of Engineer and Engineer's personnel air transportation requirements one week in advance of trip departure.

1.18 CAMP SECURITY

.1 Restrict access to camp. Only persons employed on project to be allowed normal access. Unauthorized persons will be permitted on site only with approval of Engineer and/or Contractor.

1.19 MEASUREMENT OF PAYMENT

- .1 Provision of all camp facilities and equipment, including communication equipment for the camp will be paid at the lump sum price tendered under Item 01 54 00-1, Camp Facilities and Equipment, in the Basis of Payment Schedule.
- .2 All costs for the operation and maintenance of all camp facilities and equipment, including water treatment and sewage treatment, inspection of camp and electrical facilities by Nunavut officials, on-site mobile communication equipment, as well as the provision of catering, rooms, and laundry services for the camp are to be included in the lump sum payment for Camp Operation and Maintenance, Item 01 54 00-2, as indicated in the Basis of Payment Schedule.
- .3 The provision of room and board and associated services for Engineer and Authorized Personnel will be measured for payment by the person-day for each day that personnel reside overnight at the camp. Engineer's room and board will be paid under Item 01 54 00-3 in the Basis of Payment Schedule.
- .4 Provision of casual meals to visiting Engineer's Authorized Personnel will be measured for payment by the number of meals served. Casual meals will be paid under Item 01 54 00-4 in the Basis of Payment Schedule.
- .5 Charters will be paid at the unit price tendered under Item 01-54 00 5 on the Basis of Payment Schedule. The rates are to include crew changes, food flights, supplies, meetings

Roberts Bay/Ida Bay Mine Site Remediation Project No: 416829 **CAMP FACILITIES**

Section 01 54 00 Page 8 of 8

or any other charter requirements. The rates are to be based on a round trip from Cambridge Bay.

- .6 It is anticipated that air transport of Engineer's Authorized Personnel will be scheduled to coincide with the transport of Contractor's workforce to and from site. Provide air transportation for Engineer's personnel at a minimum frequency of one return trip per week and two additional trips per month schedule according to Engineer's request.
- .7 All costs for the provision of satellite and/or long distance communication links for Engineer and authorized personnel will be paid at the lump sum price tendered for Communication links, Item 01 54 00-6, as indicated in the Basis of Payment Schedule.
- .8 All costs for the provision and maintenance of an ATV and a snowmobile for use by the engineer will be paid at the lump sum price tendered under item 01 54 00-7 in the Basis of Payment schedule.
- .9 Except as otherwise indicated herein, work under this section will not be measured. Include all costs in Item BOPC-1, Balance of Project Costs in the Basis of Payment Schedule. Indicate the cost of this work as a separate line item in the cost breakdown specified in Section 01 32 19 Project Management and Construction Schedule.

Part 2 Products (NOT USED)

Part 3 Execution (NOT USED)

END OF SECTION

Operations and Maintenance Plan for Sewage Disposal Facility

The sewage disposal facility to be used at Roberts Bay to treat the sewage from camp operations is the NOMADIC[™] Sewage Wastewater System.

Estimated black water generation during the remediation activities is as follows:


- 2008 (Ida Bay) 150 man days x 10 liters/man day = 1,500 liters
- 2009 (Roberts Bay) 728 man days x 10 liters/man day = 7,280 liters

As back up, approximately 3000 gallons (13,500 liters) of tankage will be available in case of system failure along with approximately 200 square meters of liner (for construction of a sewage lagoon if required).

A mechanic will be trained in dealing with maintenance/repair of the WWTS prior to mobilization.

A complete parts/maintenance package will be shipped with the system. The residual waste sludge will be disposed of off site.

Attached as Appendix A is a letter from Pinnacle (WWTS manufacturer) providing additional detail on the WWTS and client references. Also included is some performance test data, drawings and a copy of the owners' manual and a description of the operation and treatment process.



PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

22765 - A Fraser Highway, Langley, BC, Canada

Telephone: 604.514.7555 Toll Free: 866.514.7555 Fax: 604.514.7595



Mailing Address: P.O. Box 3070 Langley, BC, Canada, V3A 4R3

www.peti.ca

NOMADIC"

MOBILE SEWAGE WASTEWATER TREATMENT SYSTEM

MODILE SEWAGE WASTEWATER TREATMENT STOTEM					
DS Series	# of Persons				
NOMADIC DS 10	10				
NOMADIC DS 15	15				
NOMADIC DS 20	20				
NOMADIC DS 25	25				
HS Series					
NOMADIC HS 21/25	25				
NOMADIC HS 26/50	50				
NOMADIC HS 51/75	75				
NOMADIC HS 100	100				
NOMADIC HS 150	150				
NOMADIC HS 250	250				
NOMADIC HS 500	500				
NOMADIC HS 750	750				
ASCO ₂ R Series					
ASCO ₂ R Series 1000 - 2500	>1000				


NOMADIC™ DS and HS Series have, at the core of the treatment process, the Fixed Activated Sludge Treatment System known as FAST® and as available from Bio-Microbics Inc.

Pinnacle Environmental Technologies Inc. is the exclusive Canadian Distributor of the FAST® system and employs the technology in a wide variety of designs and settings to provide solutions for sewage wastewater treatment across Canada and offshore.

The NOMADIC™ DS and HS Series are a tested and true result of the Pinnacle design to meet the specific needs of the mobile work camp market, satisfy regulatory requirements and provide easy maintenance at an affordable cost.



MOBILE SEWAGE WASTEWATER TREATMENT SYSTEM

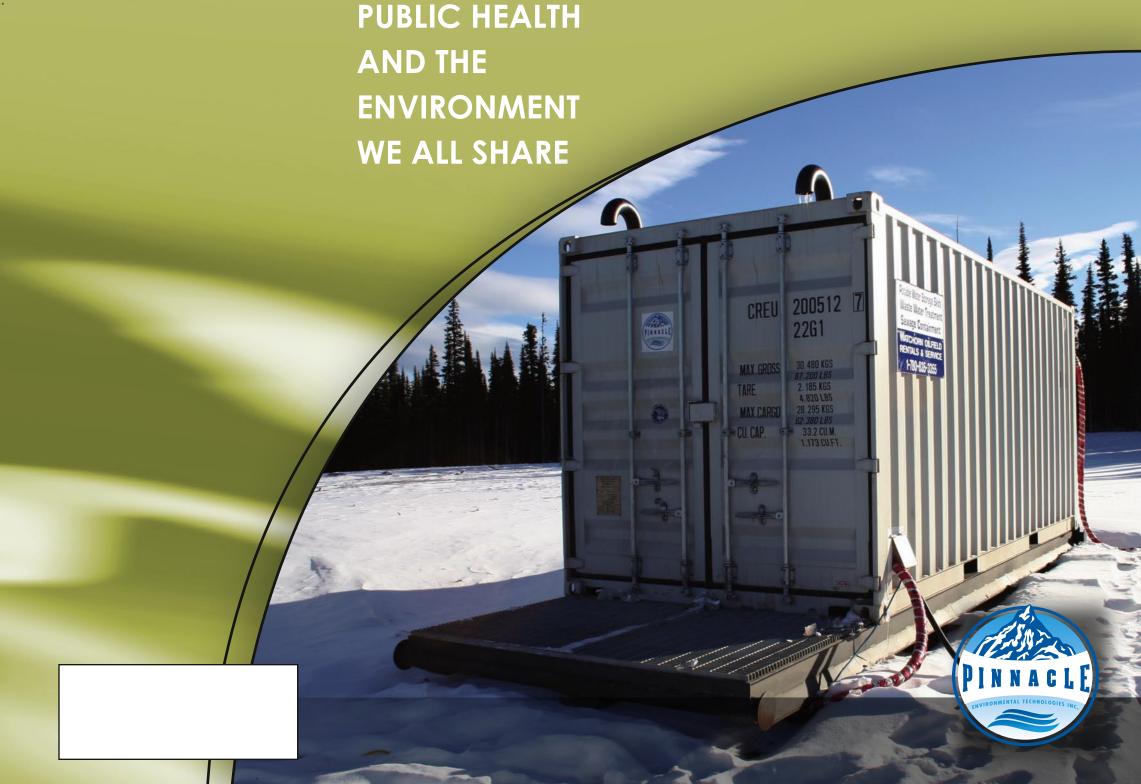

TO PROTECT

Mobile and Portable Systems

The NOMADIC[™] series is designed for mobile work camps and disaster relief. The systems are available for a variety of applications such as mobile, portable in permanent arrangements, semipermanent or short-term temporary installations.

The NOMADIC™ system design takes into account the following design considerations:

- High-strength sewage wastewater characteristics
- Fats, oils and greases from the centralized kitchen works
- Power availability
- Fresh water supply and characteristics
- Cold weather climate conditions
- High altitude conditions
- Above-ground, free-standing arrangements
- Outdoor installation
- Indoor installation
- In-ground installations
- Pump and dosing packages
- pumping into the system
- pumping or dosing within the system
- pumping or dosing to the discharge point
- Flow equalization
- Pre-settling and trash collector chamber
- Effluent disinfection
- Automated grease interceptor



Benefits

- High treatment levels
- Low sludge production
- Low maintenance skill level
- Performance pure and simple
- Rapid deployment

Rugged Construction

Heavy gauge steel construction with skid mounts and roll bars allows for multiple moves and long term use.



NOMADIC™ DS Series

NOMADIC[™] DS Series are for work camps up to 25 persons and which do not utilize a commericial-grade kitchen.



Our knowledgeable and experienced design team consult with you to design and build the system that meets specific unique needs and requirements. Largest system, at time of printing, is for 1,800 person camp.

Design and Build



Standard Series

Available in 3 series.

- NOMADICTM DS
- NOMADIC™ HS
- NOMADIC™ ASCO₂R

Emergency Response/Disaster Relief

The NOMADIC™ system is easily portable for fast mobilization to areas that need immediate response to a disaster or crisis. Connection to power supply is simple. Effluent quality is suitable for safe and clean discharge even into surface water if required.

Applications


- Forestry
- Mining
- Gas and Oil Drilling
- Remote Fishing Resorts
- Fire Fighting Camps

Installation Locations

- Northern Alberta
- Northern Canada
- United States of America
- Siberia, Russia
- USA-FEMA

Systems for Industry on the Move and Sanitation for Disaster Relief



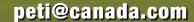



Pinnacle Environmental Technologies Inc.

H/O Mailing Address
P. O. Box 12112
Langley, B.C. V3A 9J5
WebSite: www.peti.ca

H/O Location Address 22765-A Fraser Hwy. Langley, BC.

Email: info@peti.ca

H/O Contact NumbersPh: 604-514-7555
Toll Free 866-514-7555

Fx: 604-514-7595

June 10, 2008

Vijay Lanji Quantum Murray LP 400 - 4400 Dominion Street Burnaby, BC V5G 4G3

Re: Nomadic Workcamp

Mr. Lanji

As requested, here is some information regarding the Nomadic Workcamp and references for operation.

As you are aware the Nomadic™ system has been in use for over 5 years in cold-climate Northern Canada as well as installations in Europe and Asia. The system is built upon traditional septic treatment processes, which have been in use in North America for over 50 years, with special consideration for cold-weather environments and potential portable applications.

Treatment Process

- Influent enters the system into a larger, course-bubble aeration chamber. This chamber (combined with the settling chamber) is sized appropriately for 1 to 1-1/2 days of aeration for the sewage volume.
- We then enter a settling chamber where we can settle out some of the non-organic materials before we enter the treatment chamber.
- The third step in the process is the FAST® treatment process. This is a hybrid treatment process where we use both attached and suspended growth to treat our waste. The FAST® system uses an air-blower to create an air-lift where the sewage is constantly re-cycled through the system, pulling waste from the bottom of the tank and distributing it on top of the media. The air helps to accelerate activity and growth of the biology while the air-lift is constantly cleaning the media with the aggressive action. Note that there is no required maintenance for the media other than pumping out the tanks on a semi-regular basis.
- Effluent exits the treatment center through a mid-height "clarified-zone" and is run through a UV system before entering the pump chamber. The UV system is sized based upon the expected flows of the system.
- Effluent is pumped out to the field through a duplex pumping system. Note that we have also recently installed a re-circulation system where 20% of the pump cycle is sent back to the aeration chamber. This is just a further step in our treatment process which we have found works effectively to further reduce our BOD⁵ and TSS test results.

790 Industrial Road Cambridge, ON 877-553-6336 8104 – 46th Street Edmonton, AB 780-469-6746 22765-A Fraser Highway Langley, BC

866-514-7555



NOMADIC System

Table: Typical Performance Criteria						
	Nomac	dic® 25				
Application:	Mobile Workcamp Environment					
PERFORMANCE	INFLUENT VALUE EFFLUENT VALUE					
PERAMETER						
Daily Sewage Flow (Max)	Est. 1250 Imperial Gal/ Day					
BOD _s	< 450	< 30				
TSS	< 350	< 30				
Fats, Oils and Grease	<35					

^{*}Performance parameters not listed in this table have no guarantee of reduction or treatment.

FLOW PATH



Engineering

All MicroFAST® systems are shipped with a stamped engineers drawing detailing their design parameters and operational capabilities.

Components

1. Pre-Aeration

The Pre-Aeration uses a Lixor™ Course-Bubble Aerator with a 0.5hp – 1.5hp, 120/240v single phase blower motor (depending on the size of the chamber). No moving parts are submerged in the sewage; rather the Lixor unit is fed air from the blower sitting in the Mechanical room.

The Lixor™ unit creates a "mixed-liquor" whereas the biological material is suspended in the liquid thereby beginning the treatment process.

2. Settling

The Settling Chamber has no mechanical components. This is a small chamber where sludge is able to begin settling at the bottom of the chamber. Treatment continues in sludge and the mixed liquor however non-organic materials that are non-biodegradable are settled to the bottom of the chamber where they remain until the unit is cleaned out with a vacuum truck.



3. Treatment

The treatment chamber contains the MicroFAST® Bioreactor media (see attached drawing for a typical cross-section view of the MicroFAST media). This media is an area where the biological material can attach, grow, consume and die. This is the heart of the treatment process. Using an air-lift design; air is pumped through the center of the media, hitting a stop block and creating an air vacuum. Liquid is then lifted from the bottom of the chamber, through the center of the media and to the top of the chamber where it hits a splash plate, dispersing over the top of the media. The media never needs to be cleaned or washed due to the vigorous splashing action which consistently cleans and renews the media.

There are no moving parts in this chambers as the air is pumped from a blower in the mechanical room.

Note that I have also attached a file showing the testing process and results of the NSF™ certification process and data received from the

4. UV / Pump Chamber / Mechanical Room

As the effluent exits the treatment chamber it goes through a UV sterilization unit, the Protector™. This final polishing step eliminates harmful pathogens such as fecal coliforms and other bacteria which can infiltrate the local watercourse. As the pump chamber fills the floats or transducer evacuates this chamber using a duplex (two pumps) pumping system. In the event of high flows or pump failure the system will give warnings however it will still be able to keep up with demand. The mechanical room contains all electrical components and any serviceable parts that are contained in the Nomadic™ system. Other items not previously noted include: Electrical panel, heater, 4" chamber clean-out ports and all relevant control panels.

References

As requested here are a couple of references that use our Nomadic™ technology extensively. Both have extensive experience using the Nomadic system in all types of environments, summer and winter operation.

Tim Watchorn Watchorn Oilfield Rentals 780-834-0055

Gerry Vassuer Arrow Septic 780-835-0415

Test Results

Attached are a couple of test results that Pinnacle Environmental Technologies Inc. took ourselves at a site that we operated near Bragg Creek, Alberta. Test results are from November 2007 and January 2008 while the system was in operation. I have requested that



PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

some of our customers send us some of their test results and they are mailing and faxing them to me as we speak. As soon as these are in my possession I will forward them to you. These results will include samples from cold-weather operation in Northern Alberta.

If you have any additional questions, please do not hesitate to contact me at any time.

Yours truly,

PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

Michael D Harkin Alberta Area Manager 780-964-8755



Pinnacle Environmental Technologies Inc.

Mailing Address
P. O. Box 12112
Langley, B.C. V3A 9J5
WebSite: www.peti.ca

Location Address 22765-A Fraser Hwy. Langley, BC.

Email: info@peti.ca

Contact Numbers

Ph: 604-514-7555 Toll Free 866-514-7555 Fx: 604-514-7595

NOMADIC™ Sewage Wastewater System

Owner's Manual

Publication Date: September 18, 2006



INDEX

<u>Section</u>	Title	<u>Page</u>
1.0	Process Description Design Criteria Process Typical Flow Path	3 3 4 5
2.0	Models & Flow Rates Table 1 – Models	6
3.0	Professional Engineer Review	6
4.0	Operation & Maintenance Plan Responsibility of Owner / User Typical Maintenance Schedule Types of Alarm System Redundancies Spare Parts	7 7 8 9 9
5.0	Management Plan Qualified Maintenance Personnel Sewage Lift Station Design Start-Up Procedures Shut-Down Procedures Sludge Removal Test Procedure Pump Out Procedure	10 10 10 10 11 11
APPENDIX	Typical NOMADIC™ "Cowboy" Layout Typical NOMADIC™ Layout Standards of Good Practice	13 15 18



1.0 PROCESS DESCRIPTION

1.1 Design Criteria

The mobile / portable work camp sewage wastewater treatment plant design criteria are:

- (1) Units must be robust for loading, placing and relocation by flat bed truck using winches to load and drop into place.
- (2) Units are to be heated and insulated for cold weather conditions
- (3) Units sole energy source is electricity as supplied by others on 24/7 basis.
- (4) Hydraulic and Organic Loading rates are:
 - (a) 225 litres per man (60 us gals)
 - (b) NOMADIC™ "Cowboy" series are for work camps with less than 25 men and do NOT have a commercial grade central kitchen works.
 - (c) For NOMADIC™ "Cowboy" Series the influent sewage characteristics are to be

```
BOD5 = 250 mg/l
TSS = 250 mg/l
FOG = 35 mg/l
```

(d) For NOMADIC™ Series the influent sewage characteristics are to be

```
BOD5 = 650 mg/l
TSS = 350 mg/l
FOG = 35 mg/l
```

- (5) The Alberta Private Sewage Disposal Systems Regulation refers to the National Sanitation Foundation International (NSF) Standard 40, Class 1. The FAST® BioFilter system is certified by NSF as meeting this standard. If operated and maintained in accordance with this manual, the NOMADIC™ system should meet or exceed the NSF Standard plus fecal coliform of < 400 CFU/100 ml.
- (6) Disinfection is by Ultra-Violet Light.
- (7) Fats, oils and grease (FOG) are to be intercepted PRIOR to entering the Nomadic™ system.
- (8) Discharge from the Nomadic[™] system is pump using a minimum of ½ HP effluent pump.
- (9) An event recorder function is to allow for assessment and monitoring of systems flow, discharge pump and float switch operation on a daily and minute-by-minute basis.
- (10) Laundry is NOT to have caustic mud waste enter the NOMADIC™ system.



1.2 Process

To accomplish the above, the sewage wastewater flow and treatment process is as follows:

- (1) For "Cowboy" series NOMADIC™ systems, all kitchen, laundry, washing and toilet waste enter a sewage lift station with a grinder pump (or a 2" solids handling pump) as supplied by others. The lift station pumps into the NOMADIC™ system that contains a trash collection chamber (a.k.a. a settling chamber). From the trash collection chamber the biomass flows by gravity into the main treatment chamber that contains a FAST® BioFilter.
- (2) For all other NOMADIC™ systems the central kitchen is to be fitted with Pinnacle's automated grease interceptor (AGI) at all scullery and pot washing sinks. The AGI is NOT fitted to the automated hot water dishwasher.
- (3) All kitchen, laundry, washing and toilet waste enter a sewage lift station with a grinder pump (or a 2" solids handling pump) as supplied by others. The lift station pumps into the NOMADIC™ system that contains a Pre-Aeration chamber. The Pre-Aeration chamber is sized to hold a minimum of ½ day's design flow and contains a coarse air diffuser system with a volume of air to match the incoming organic load and reduce the BOD5. By gravity the biomass flows into a second chamber that is a settling chamber sized to be a minimum of ½ of the day's design flow rate. After the Pre-Aeration and Settling Chamber the BOD5 is to be 250 mg/l.
- (4) The settling chamber allows for some separation of liquids and solids. From the settling chamber the biomass flows by gravity into the main treatment chamber that contains a FAST® BioFilter.
- (5) FAST® stands for Fixed Activated Sludge Treatment. In the FAST® process, a large colony of bacteria, referred to as the biomass, breaks down biodegradable waste into carbon dioxide and water. The process occurs continuously as long as the biomass is supplied with food (incoming waste) and oxygen (air) in a suitable environment. Solid material that the biomass cannot process and bacteria that die settle in the bottom of the tank for normal pump-out removal.

The FAST® process consists of the BioFilter and the air pump (air source). The air pumps provide continuous air to the treatment tank through the air supply pipe. The air supply pipe combines with the draft tube to create an airlift. This airlift is the means by which air and wastewater are mixed within the tank. The airlift assembly lifts the wastewater to the splash plate. The wastewater is cascaded off the splash plate across the surface of the honeycomb plastic media.

PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

The honeycomb plastic media is the heart of the FAST® process and is suspended in the wastewater. The media provides the high surface area on which the required biomass layer develops. Growing on the honeycomb media, and receiving food and oxygen necessary for growth from the airlift, this "bio-layer" biomass degrades (stabilizes) the waste before it is discharged to the drain field or other dispersal site.

The Fixed Activated Sludge Treatment system is designed to keep the active biomass on the media and not in the water. This allows for cleaner water to be discharged to the drain field.


A vent allows for venting the air and non-harmful carbon dioxide created by the process.

As the biomass layer thickens and accumulates on the media, some of it sloughs off the media and the airlift picks up the activated sludge particles and returns them to the media to aid in sewage absorption.

Eventually, there is an accumulation of "non-activated" sludge (or dead biomass and/or ash) at the bottom of the chamber and the tank will need to be pumped out.

1.3 Typical Flow Path



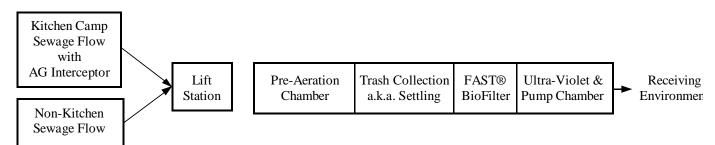

2.0 MODELS & FLOW RATES

(1) The following table sets out the typical various standard models and their respective daily flow rates based on the above stated design criteria:



2.1 TABLE 1 for NOMADIC™ SYSTEMS

Model No.	AGI Required	Max. Number	Daily Flor	w Rate
<u>Number</u>	(yes or no)	of Person	<u> Litres</u>	US Gals
Nomadic™ 21/25	YES	25	5,625	1,486
Nomadic™ 26/50	YES	50	11,250	2,972
Nomadic™ 51/75	YES	75	16,875	4,458

- (2) Custom-built systems to meet larger flow rates or into different arrangements of containers (a.k.a. SeaCan) due to shipping, handling or placement issues follow the above described treatment process and design criteria.
- (3) For systems with higher levels of incoming sewage wastewater strengths than described above are also are designed and built using the same flow path, but with increased pre-aeration and FAST® BioFilter.
- (4) Refer to the appendix for general arrangement drawings and specifications for each of the NOMADIC™ Models listed in Table 1 above.

3.0 PROFESSIONAL ENGINEER REVIEW

A Professional Engineer may be required to provide a design for the dispersal site given site and soil conditions. Confirm with the appropriate authorities.

4.0 OPERATION & MAINTENANCE PLAN

It is the sole responsibility of the system's owner or user to operate and maintain the system in accordance with:

- (1) The Standards of Good Practice as published from time to time by Pinnacle Environmental Technologies Inc.,
- (2) in accordance with the system's design criteria, and,
- in accordance with any instructions issued by Pinnacle Environmental Technologies Inc.
- 4.1 Refer to Standards of Good Practice in the Appendix
- 4.2 The system owner or user MUST use Pinnacle's Automated Grease Interceptor (AGI) in any commercial grade central kitchen works.

4.3 **TABLE 2 - Typical Maintenance Schedule**

ITEM **FREQUENCY**

AG Interceptor

Remove Food Particles Daily or more subject to usage **Empty Grease from Container** Daily or more subject to usage Bi-Weekly or more subject to usage Wipe Down Entire Unit

Pre-Aeration

Empty Chamber Contents Prior to moving System Empty and wash-down Chamber Annually

Air Blower Operation Bi-weekly confirm amps and ohms are OK Air Blower Air Intake Filter B-Weekly remove, clean or replace

Settling / Trash Collection

Empty Chamber Contents Prior to moving System Empty and wash-down Chamber Annually

FAST® BioFilter

Empty Chamber Contents Prior to moving System

Empty and wash-down Chamber Annually during non-use periods or every 2 - 3 years if system is used

continuously since placement. Follow sludge

judge assessment procedures.

Only if during annual shut-down and storage Wash-down media

and only as best as possible.

Bi-weekly confirm amps and ohms are OK Air Blower Operation Air Blower Air Intake Filter

B-Weekly remove, clean or replace

Ultra-Violet Light & Pump Chamber

Empty Chamber Contents Prior to moving System

Empty and wash-down Chamber Annually

Ultra-Violet Light

Lamps c/w sheath Replace after 12 months of usage (being on)

Replace if gauge drops to zero

Bi-weekly check lamp & wash as needed

Discharge Pump

Pump Operation Bi-weekly confirm amps and ohms are OK

Heater

Operation Bi-weekly confirm amps and ohms are OK

4.4 TABLE 3 – Types of Alarms

Alarm Description (Audible or Visual)

Pre-Aeration Blower Alarm
FAST® BioFilter Alarm
Ultra-Violet Light Gauge Drops to Zero
High Level Alarm in Discharge Pump Chamber

Problem Indicated

Air Blower NOT operating
Air Blower NOT operating
UV Lamp NOT operating
Pump not discharging effluent

4.5 TABLE 4 – System Redundancies

ITEM REDUNDANCY

Pre-Aeration Air Blower none FAST® BioFilter Air Blower none Ultra-Violet Light none

Discharge Pump Duplex alternating pumps for redundancy

4.6 Spare Parts

Spare parts available that can be supplied on order:

<u>ITEM</u>	<u>ITEM</u>
Circuit Breakers	Air Blower (Pre-Aeration / FAST®)
60 AMP	1/3 HP 110-220-/1/60
20 AMP	½ HP 110-220/1/60
15 AMP	1 HP 220/1/60
	1 ½ HP 220/1/60
Air In-Take Filter for	2 ½ HP 220-440/1/60
1/3 HP Air Blower	5 HP 220-440/1/60
½ HP Air Blower	
1 HP Air Blower	<u>Ultra-Violet Light Lamp Combo</u>
1 ½ HP Air Blower	Lamp/Sheath/electrical pigtail
2 ½ HP Air Blower	
5 HP Air Blower	
	4" Knife Gate Brass Valve
½ HP 110/1/60 Myers ME50 Discharge Pump	
	Float Switch 20 ft cord



5.0 MANAGEMENT PLAN

5.1 Only qualified maintenance personnel are to be used to conduct the system's maintenance and to provide instructions to either camp maintenance staff or kitchen staff in the safe and proper operation and use of any and all appliances or facilities in the work camp that create sewage wastewater entering the NOMADIC™ System.

Qualified maintenance personnel are to meet or exceed the training, education or experience as determined by Provincial regulation. In the event there is no provincial regulation determining the qualifications of maintenance personnel, then such persons shall be:

- (a) registered with Applied Science Technologists and Technicians of British Columbia (ASTTBC) as a Registered Onsite Wastewater Practitioner (ROWP) for the maintenance of work camps, or
- (b) recognized by the British Columbia Director of the Environmental Management Act, Municipal Sewage Regulation as being suitably qualified in the safe and proper operation of the facility for the protection of the environment and human health.
- 5.2 Sewage lift stations pumping into the NOMADIC[™] raw sewage from the work camp shall be designed in accordance with the following:
 - 1. Pump Dose Volume is to be determined by the following calculation/formula: Total Design Daily Flow \times 0.075 = Pump Dose Volume per Occasion
 - 2. Pump Dose Frequency

Allow not less than 5 minutes between dosing events

3. Pump GPM

Pump not to exceed 80 us gal./min.

May also be achieved by using 2" diameter PVC pipe

5.3 Recommended Start-Up and Shut-Down Procedures

Start-Up

- 1. Fill all chambers at least half full of fresh water.
- 2. Connect electrical power supply for lighting only and switch off circuit breaker to discharge pump control panel.
- 3. In Pump Chamber, unwrap float switches and suspended and then switch on circuit breaker to discharge pump control panel. Not to do this in this order will cause the panel to alarm. If this occurs, simply turn circuit breaker off and wait a 30 seconds and turn circuit breaker on. The panel will re-set.
- 4. Turn on all air blowers, ultra-violet lights, discharge pumps and heaters.
- 5. Ensure AG Interceptor, if required, is installed and operational in the kitchen.
- 6. Start using the system.



Shut-Down

- 1. Through the drain valves empty all chambers.
- 2. Disconnect electrical power supply
- 3. In Pump Chamber, wrap-up and protect float switches from being tossed about during move, as they may crack and break.
- 4. All air blowers, ultra-violet lights, discharge pumps and heaters should be off.
- 5. Remove the AG INTERCEPTOR from kitchen works and store in SeaCan and secure for move.

5.4 LIQUIDS & SLUDGE SOLIDS REMOVAL TEST PROCEDURE

Using a "sludge judge" type, draw samples of the sludge levels in the trash collector / settling chamber through the access hatch on top of the NOMADIC $^{\text{TM}}$. Consult drawings of system as needed to locate the correct hatch.

If the sludge level at the bottom of the trash collection / settling chamber is **equal to or greater than 24 inches**, have the liquid contents of all chambers emptied.

5.5 **PUMP OUT PROCEDURE**

- 1. Turn off all air blowers 30 minutes prior to emptying.
- 2. Empty contents from all chambers through the knife / gate valves provided.
- 3. Wash down pre-aeration and trash collection / settling chamber if needed
- 4. Fill half full the Pre-Aeration Chamber and trash collection / settling chamber with clean water.
- 5. Turn on all blowers

DO NOT wash down BioFilter or attempt to vacuum it


NOTE: ALWAYS USE A LICENSED QUALIFIED PUMPER / HAULER

NOTE: THE COST ASSOCIATED WITH PUMPING THE TREATMENT SYSTEM IS NOT COVERED UNDER WARRANTY AND IS NOT INCLUDED IN THE SERVICE POLICY.




APPENDIX

PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

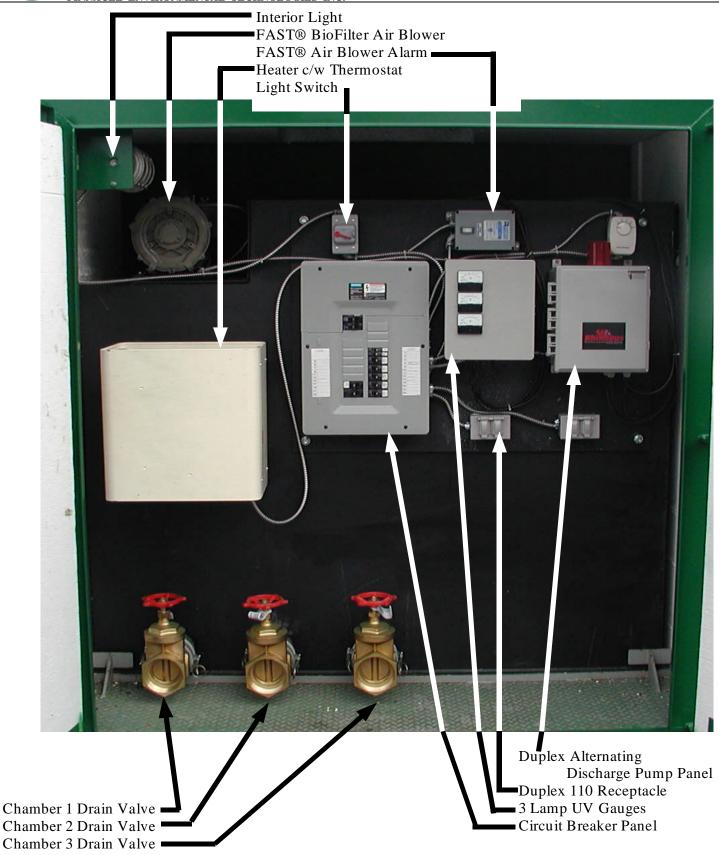


PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

TYPICAL NOMADICTM LAYOUT

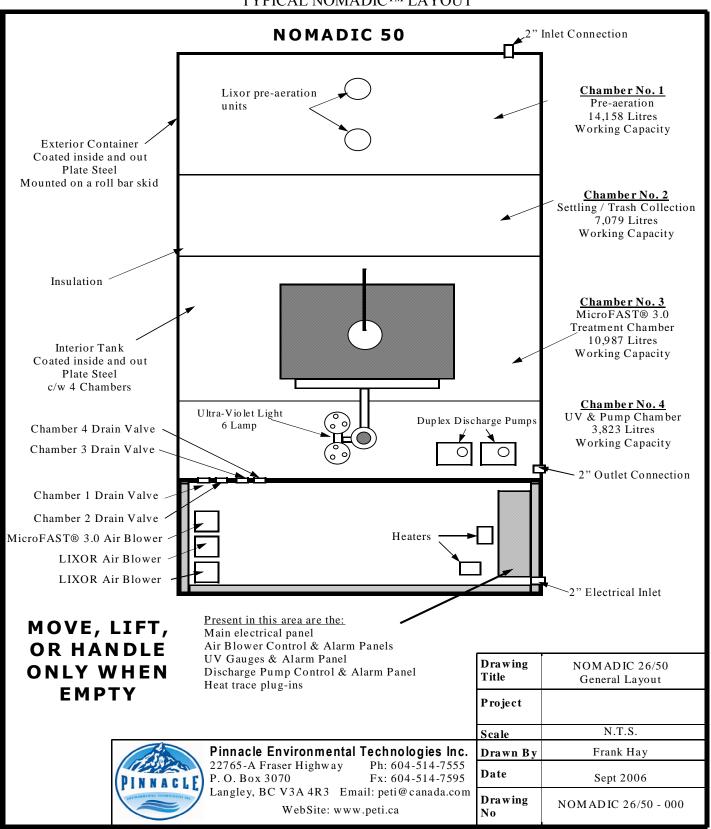




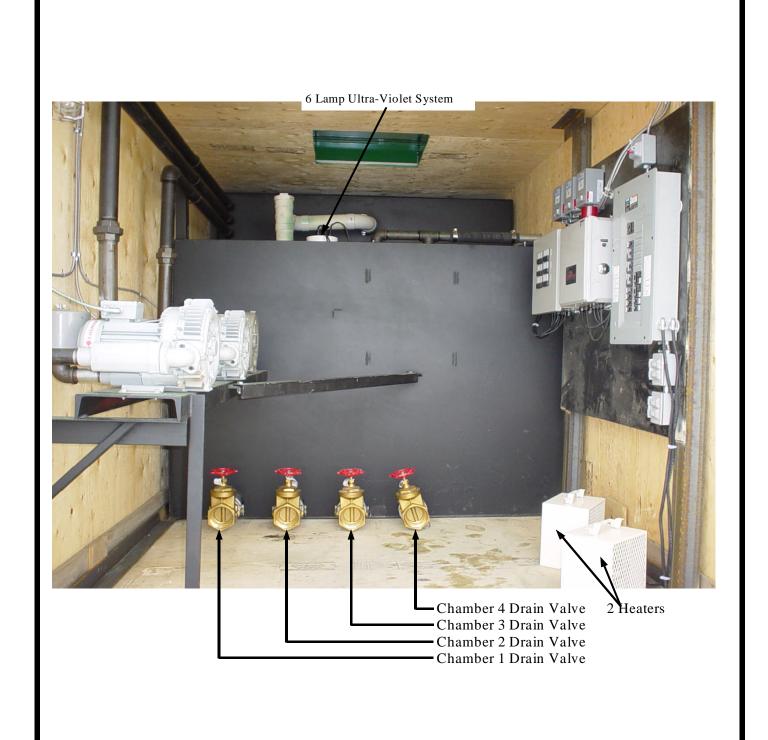

NOMADIC 50

NOMADICTM Owner's Manual



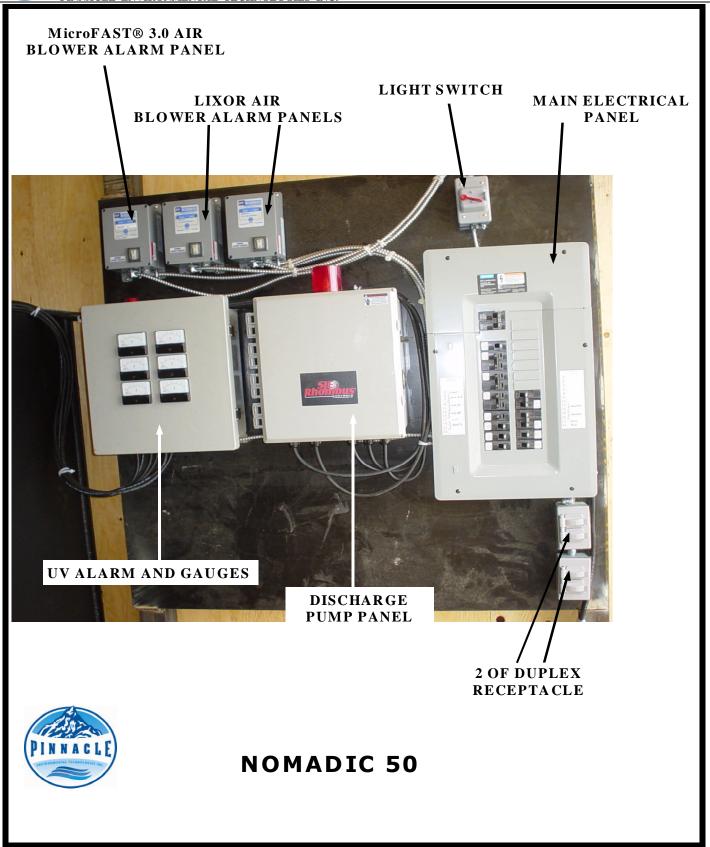



PINNACLE ENVIRONMENTAL TECHNOLOGIES INC.

STANDARD OF GOOD PRACTICE

OWNER CARE AND OPERATION INSTRUCTIONS

The **FAST**® system has been designed and built to provide long term, reliable and efficient service. Once the unit has been installed, the unit will operate with a minimum amount of attention.

ITEMS TO MINIMIZE OR TO CONTROL USAGE OF

DISINFECTANTS OR BLEACHES

Use in small quantities only. Use non-chlorine cleaners that are biodegradable and non-toxic.

ALL DETERGENTS

Should be low-sudsing, biodegradable, and low phosphate and contain either Baking Soda or Washing Soda. (some examples are: Arm & Hammer, VIM, ALL, and "Ecolab®" or Harris Products)

PAPER PRODUCTS

Use only white paper products. Natural bacteria do not eat colour dyes in paper and therefore do not breakdown coloured paper. Non-bleached paper (brown in colour) take a long time to breakdown and can therefore clog septic tanks and treatment systems.

NO LIQUID FABRIC SOFTENERS should be used. These products typically contain quaternary ammonia that is toxic to the bacteria. PLEASE USE DRYER SHEETS.

NO TOILET BOWL TABLETS SHOULD BE USED.

NO BACKWASH DISCHARGE FROM WATER SOFTENERS.

NO OILS, GREASES, CHEMICAL WASTES OR LATEX PAINTS.

NO HARSH CHEMICALS OR TOXINS SHOULD BE PUT INTO THE SYSTEM

(paints / solvents / thinners / caustic cleaners / pesticides / herbicides etc)

OBJECTS NOT TO BE PUT INTO THE SYSTEM

SANITARY NAPKINS HAIR BANDAGES

RAGS COTTON BALLS STRING

CONDOMS PLASTICS COFFEE GROUNDS

CIGARETTE BUTTS METAL OBJECTS MUD

STICKS PAPER TOWELS AUTOMOTIVE FLUIDS

CHEMICAL WASTES EGG SHELLS BONES

CORN COBS WATER SOFTENER BACKWASH


STANDARD OF GOOD PRACTICE

In-sink garbage disposal units

The use of this appliance increases both the organic matter and water entering the sewage system that in turn may upset the performance and treatment and may cause damage to the drain field. Therefore, it is recommended that there be a limited use of this appliance. All solid waste should be disposed of through composting or garbage collection.

The frequency of pumping out the system will in all likelihood increase.

VIOLATIONS OF THE STANDARD OF GOOD PRACTICE MAY VOID THE PRODUCT WARRANTY AND DAMAGE THE EFFLUENT RECEIVING SITE




NEN CURRISIVE CLAMP EVERY 2 F. (SEE AIR SUPPLY LP LIND) TIP OF TANK F USE WITH BUTTIN OF CHICKET F LID VEHIN 1 1/2' JASKET JASKET

FIFVATION

- 2. ANCHOR THE LEG EXTENSIONS (4 CORNER LEGS ONLY) TO THE BASE OF THE TANK, PLACE BOLTS AT OPPOSITE CORNERS OF THE LEG EXTENSION BASE.
- 3. TO ELONGATE FOOT PAST THE PROVIDED 12", CUT THE 3.9" LEG EXTENSION IN THE CENTER INTO TWO SEPARATE PIECES. THEN CUT A SCH 40 PVC PIPE TO THE DESIRED LENGTH AND SLIP THE PIPE OVER THE TOP AND BOTTOM CUT SECTIONS OF THE LEG EXTENSIONS.
- 4. ATTACH PIPES WITH STAINLESS STEEL SCREWS.
- 5. THE AIR SUPPLY LINE INTO THE FAST® UNIT MUST BE SECURED SO AS TO PREVENT DAMAGE FROM PIPE VIBRATION.
- 6. SEE ALL NOTES ON MCF 1.5 L DRAWING.
- 7. IF LEGS ARE EXTENDED PAST 48", USE OF SCHED 80 OR STRONGER PIPE IS RECOMMENDED.


IN THE INTEREST OF TECHNOLOGICAL PROGRESS, ALL PRODUCTS ARE SUBJECT TO DESIGN AND/OR MATERIAL CHANGE WITHOUT NOTICE.

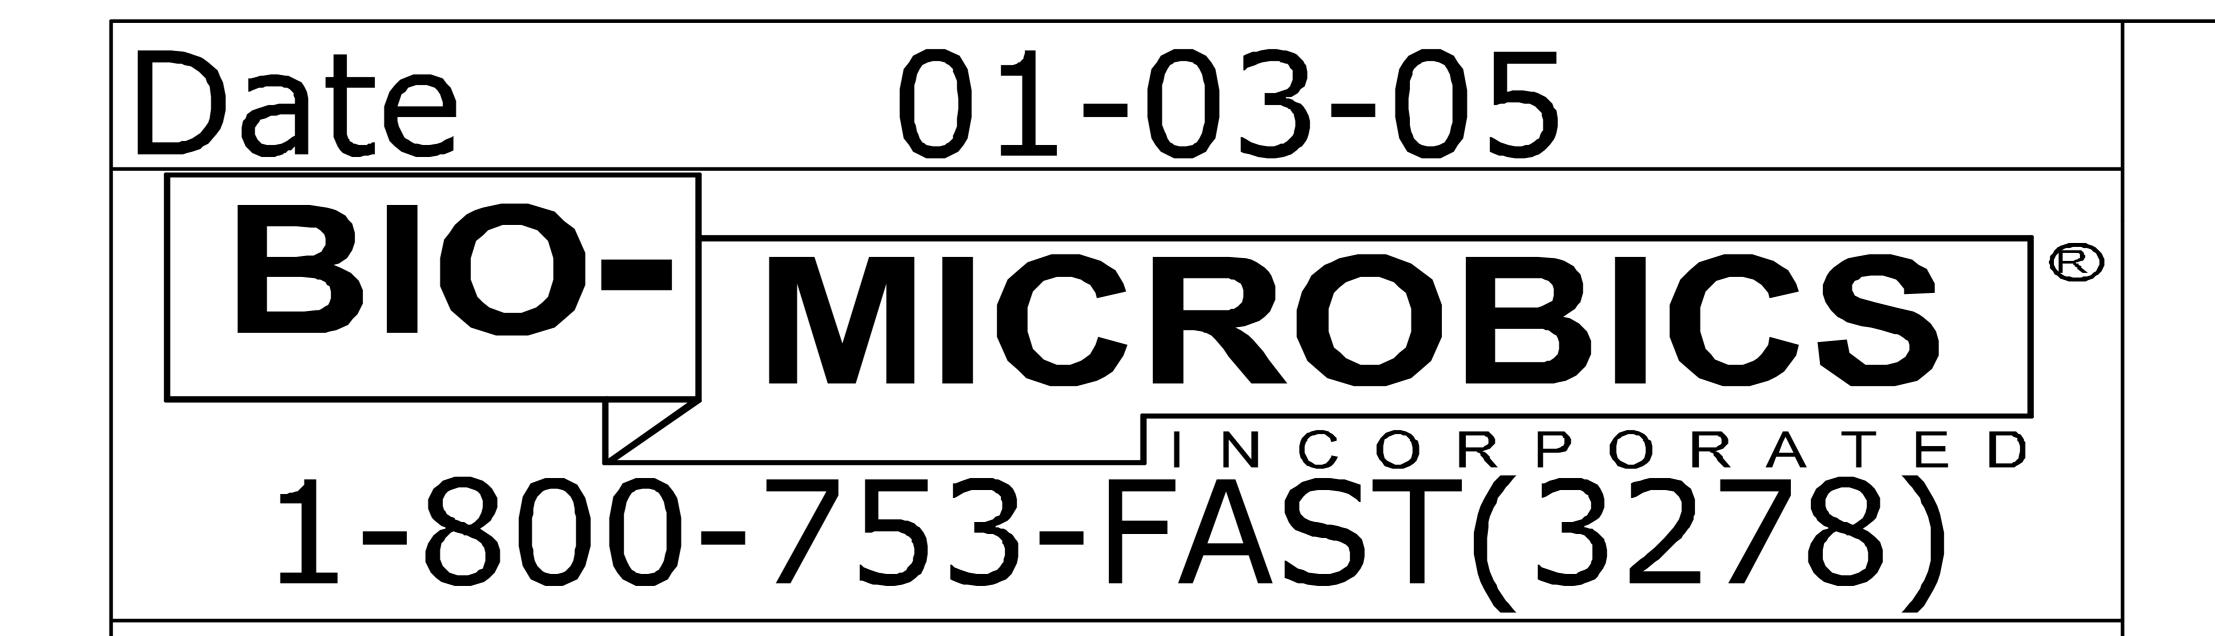

(c) Bio-Microbics, Inc. 2003

MicroFAST® 1.5 F

THE DESIGN AND DETAIL OF THIS DRAWING IS THE PROPERTY OF BIO-MICROBICS, INC. AND IS NOT TO BE USED EXCEPT IN CONNECTION WITH OUR WORK. DESIGN AND INVENTION RIGHTS ARE RESERVED. DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.



Specifications For MicroFAST 1.5 Wastewater Treatment System

1. GENERAL

The contractor shall furnish and install (1) MicroFAST 1.5 treatment system as manufactured by Bio-Microbics, Inc. The treatment system shall be complete with all needed equipment as shown on the drawings and specified herein.

The principal items of equipment shall include FAST System insert, insert lid (or leg extensions if that option is chosen), blower assembly, blower controls and alarms. The MicroFAST 1.5 unit shall be situated within a 1125 gallon minimum compartment in a two compartment tank as shown on the plans, or in a 1875 gallon one compartment tank. Tank(s) must conform to local, state, and all other applicable codes. The contractor shall provide coordination between the FAST system and tank supplier with regard to fabrication of the tank, installation of the FAST unit and delivery to the job site.

2. OPERATING CONDITIONS

The MicroFAST 1.5 treatment system shall be capable of treating the wastewater produced by typical family activities (bath, laundry, kitchen, etc.) ranging from (6) six to (21) twenty-one persons and not to exceed 1,500 US Gallons per day (5678 LPD).

3. MEDIA

The FAST media shall be manufactured of rigid PVC, polyethylene or polypropylene and it shall be supported by the polyethylene insert. The media shall be fixed in position and contain no moving or wearing parts and shall not corrode. The media shall be designed and installed to ensure that sloughed solids immediately descend through the media to the bottom of the septic tank.

The MicroFAST 1.5 unit shall come equipped with a regenerative type blower capable of delivering 25-40 CFM. The blower assembly shall include an inlet filter with metal filter element.

<u>5. REMOTE MOUNTED BLOWER</u>

The blower may be mounted remote withno more than 100 feet (30.5 M) of piping and no more than four elbows, from the FAST unit on a contractor supplied concrete base. The blower must not set in standing water and its elevation must be higher than the normal flood level. A two-piece, rectangular housing shall be provided with tamper-proof screws. The discharge air line from the blower to the RetroFAST shall be provided and installed by the contractor.

6. ELECTRICAL

The electrical source should be within 150 feet of the blower. Consult local code for longer wiring distances. All wiring must conform to code. The input power required for the blower is 115/230 Volts, Single Phase, 60/50 Hertz, 5.6/2.8 Full Load Amps, minimum wire size is 14 A.W.G. (Locked Rotor Amps are 23.2/11.6). All conduit and wiring between the electrical control panel (optional), the power supply, and the blower shall be furnished and installed by the contractor.

7. ALARMS

The alarm system shall consist of a visual and audible alarm to indicate loss of power to the blower and/or high water level. A manual silence switch is included.

8. INSTALLATION AND OPERATING INSTRUCTIONS

All work must be done in accordance with local codes and regulations. Installation of the MicroFAST 1.5 shall be done in accordance with the written instructions provided by the manufacturer. No more than four feet of fill may be placed over the FAST

9. FLOW AND PIPE SIZING

Each FAST module is provided with a standard (4) four inch effluent pipe hole and gasket. The maximum free or unrestricted flow with a four inch effluent pipe is 90 U.S. Gallons per minute (341 LPM), or 45 U.S. GPM (170

LPM) with a 2.0 design safety factor. An optional (6) six inch hole and gasket can be utilized on the same centerline dimension or up to 2 inches (5 cm) higher. Maximum free or unrestricted flow with a 6 inch effluent pipe is 260 GPM (984 LPM) or 130 GPM (492 LPM) with a 2.0 design safety factor.

Wastewater treatment systems work best when influent flow is delivered as consistently as possible. FAST systems have been successfully designed, tested and certified recieving gravity, demand-based influent flow. However when influent flow is controlled (either by pump or other means) to the FAST system to help with highly variable flow conditions, then multiple feeding events should be used to help assure even flow, optimum performance, and reliability.

10. WARRANTY

In the event a mechanical component fails to perform as specified or is proven defective in service during the warranty period, the manufacturer shall repair or replace such defective parts. (Cost of labor on repair/replacement is not covered under this warranty.) The replacement or repair of those items normally consumed in service such as air filter, etc., shall be considered as part of routine maintenance and upkeep.


It is not intended that the manufacturer assume responsibility for contingent liabilities or consequential damages of any nature resulting from <u>defects in design, material or</u> workmanship, or delays in delivery, replacement, or otherwise.


IN THE INTEREST OF TECHNOLOGICAL PROGRESS, ALL PRODUCTS ARE SUBJECT TO DESIGN AND/OR MATERIAL CHANGE WITHOUT NOTICE.




MicroFAST® 1.5 S


THE DESIGN AND DETAIL OF THIS DRAWING IS THE PROPERTY OF BIO—MICROBICS, INC. AND IS NOT TO BE USED EXCEPT IN CONNECTION WITH OUR WORK. DESIGN AND INVENTION RIGHTS ARE RESERVED. DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.

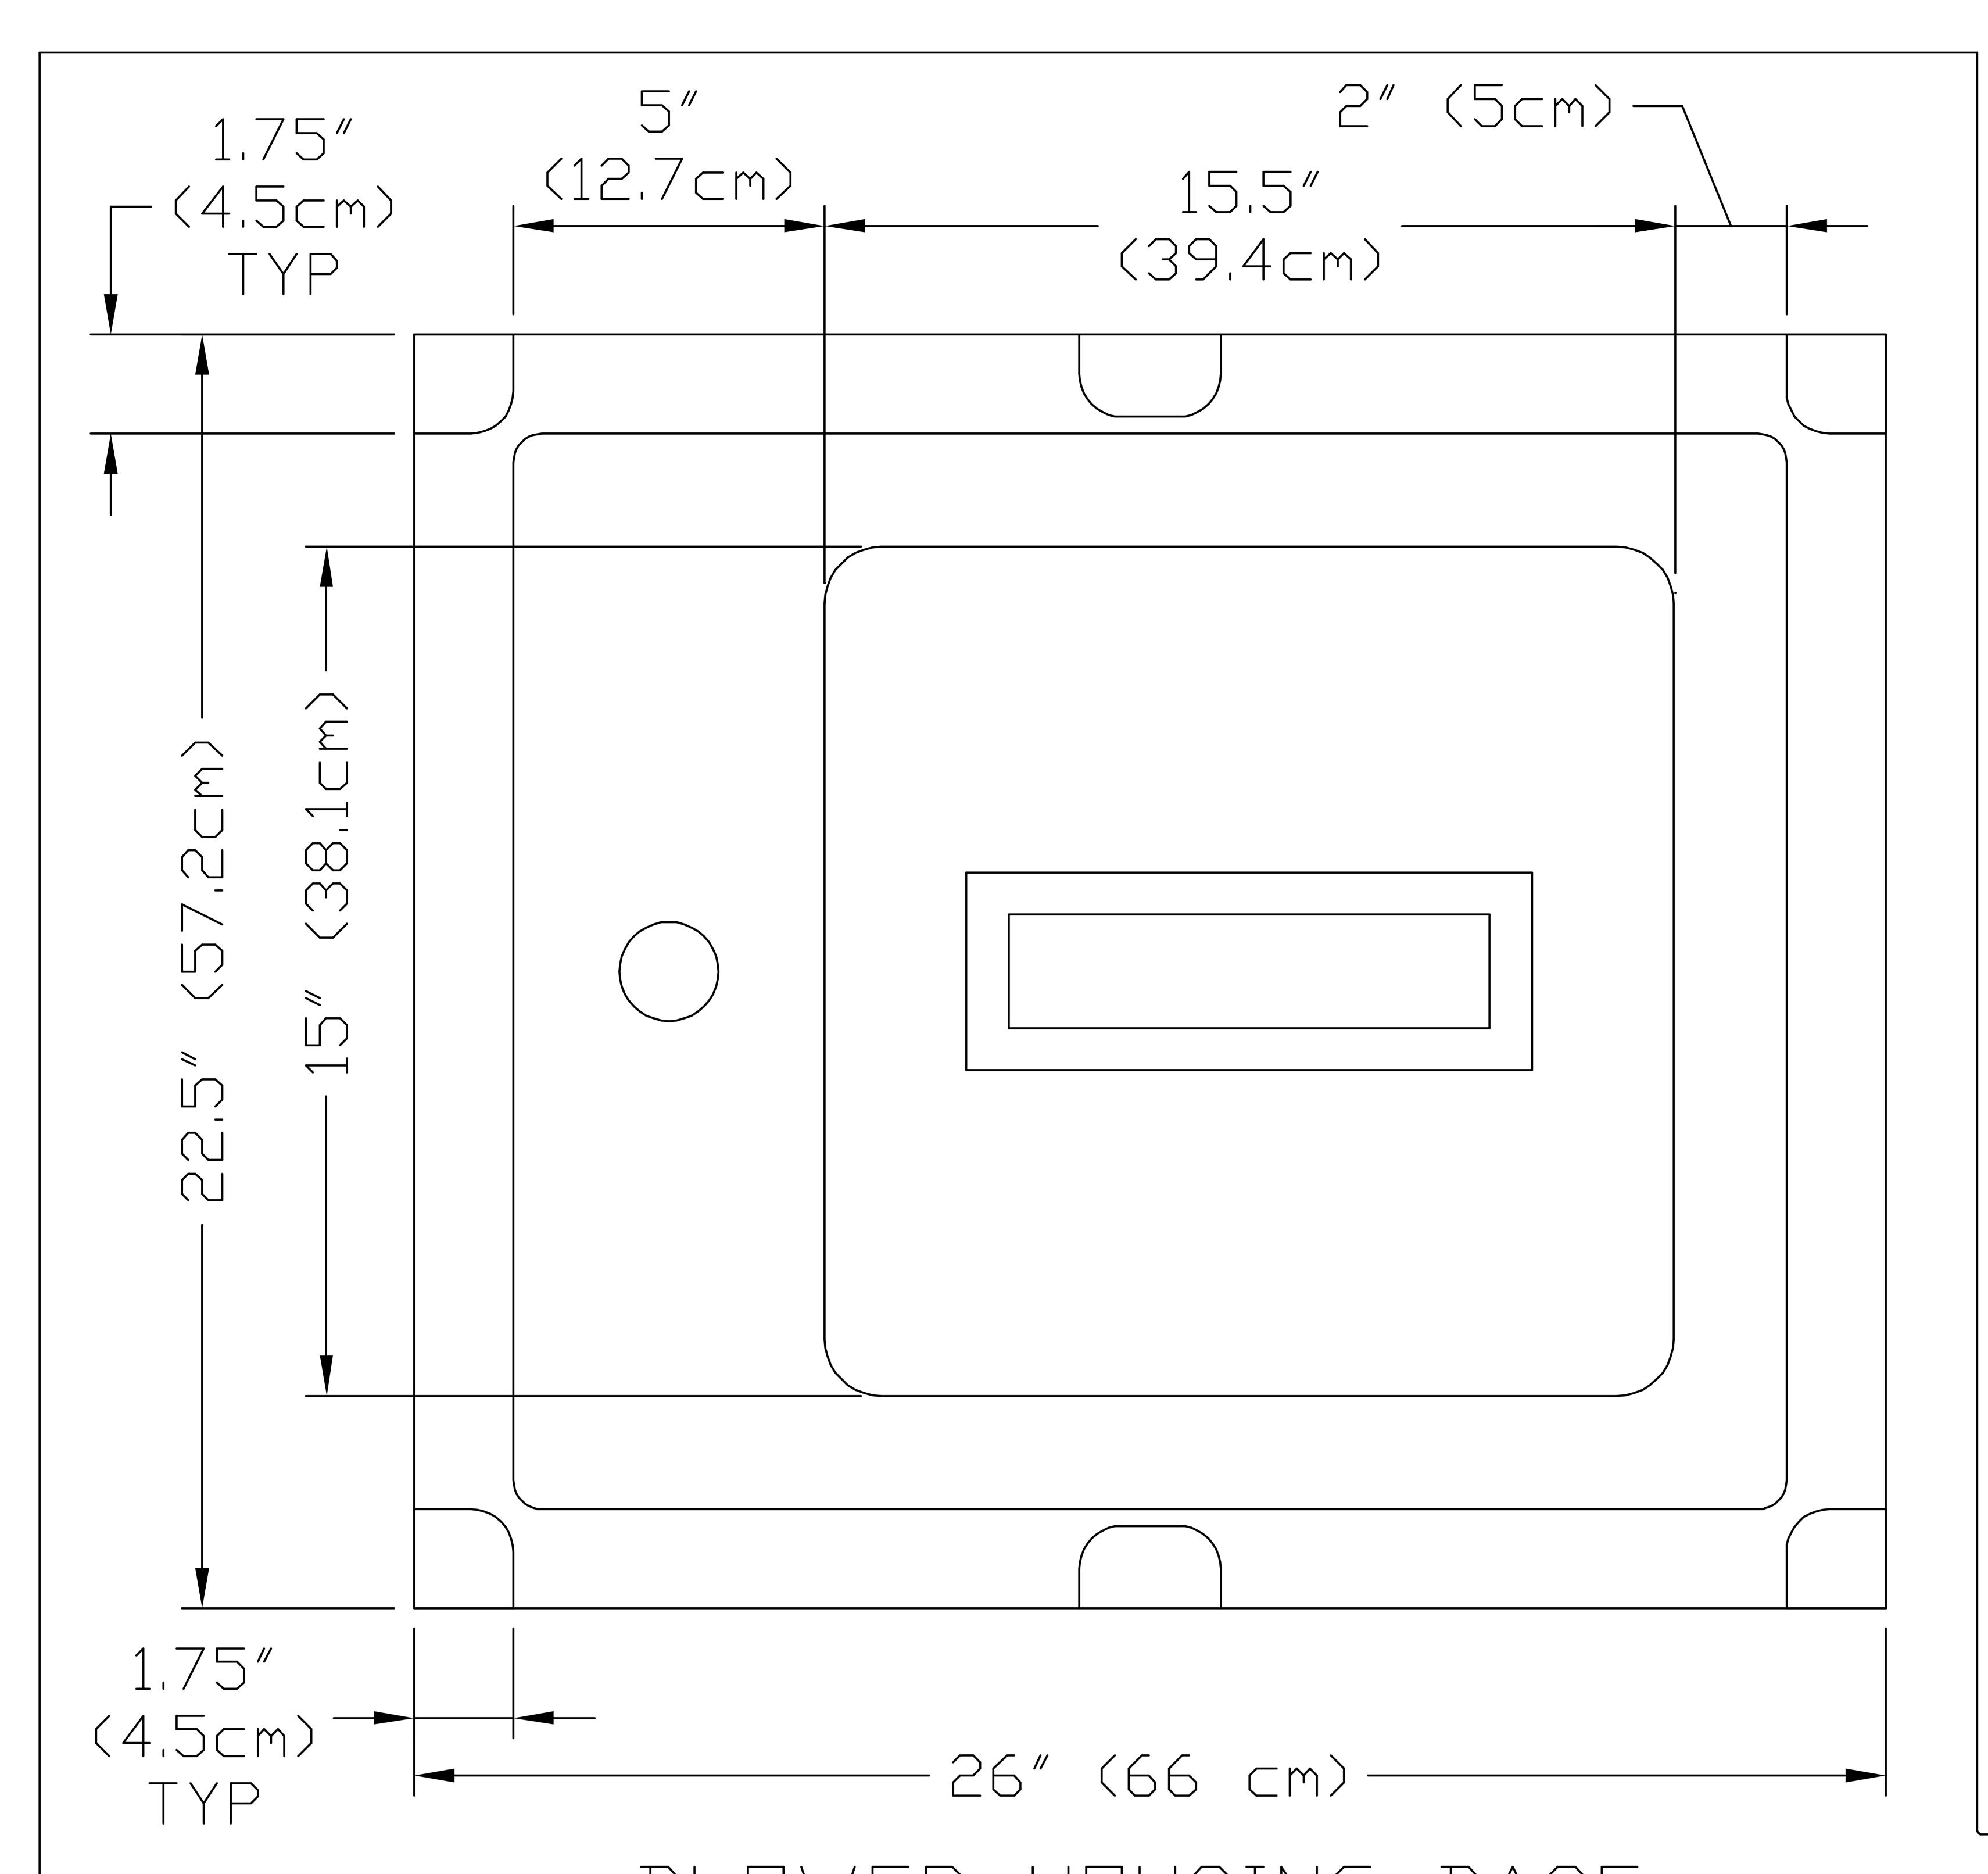

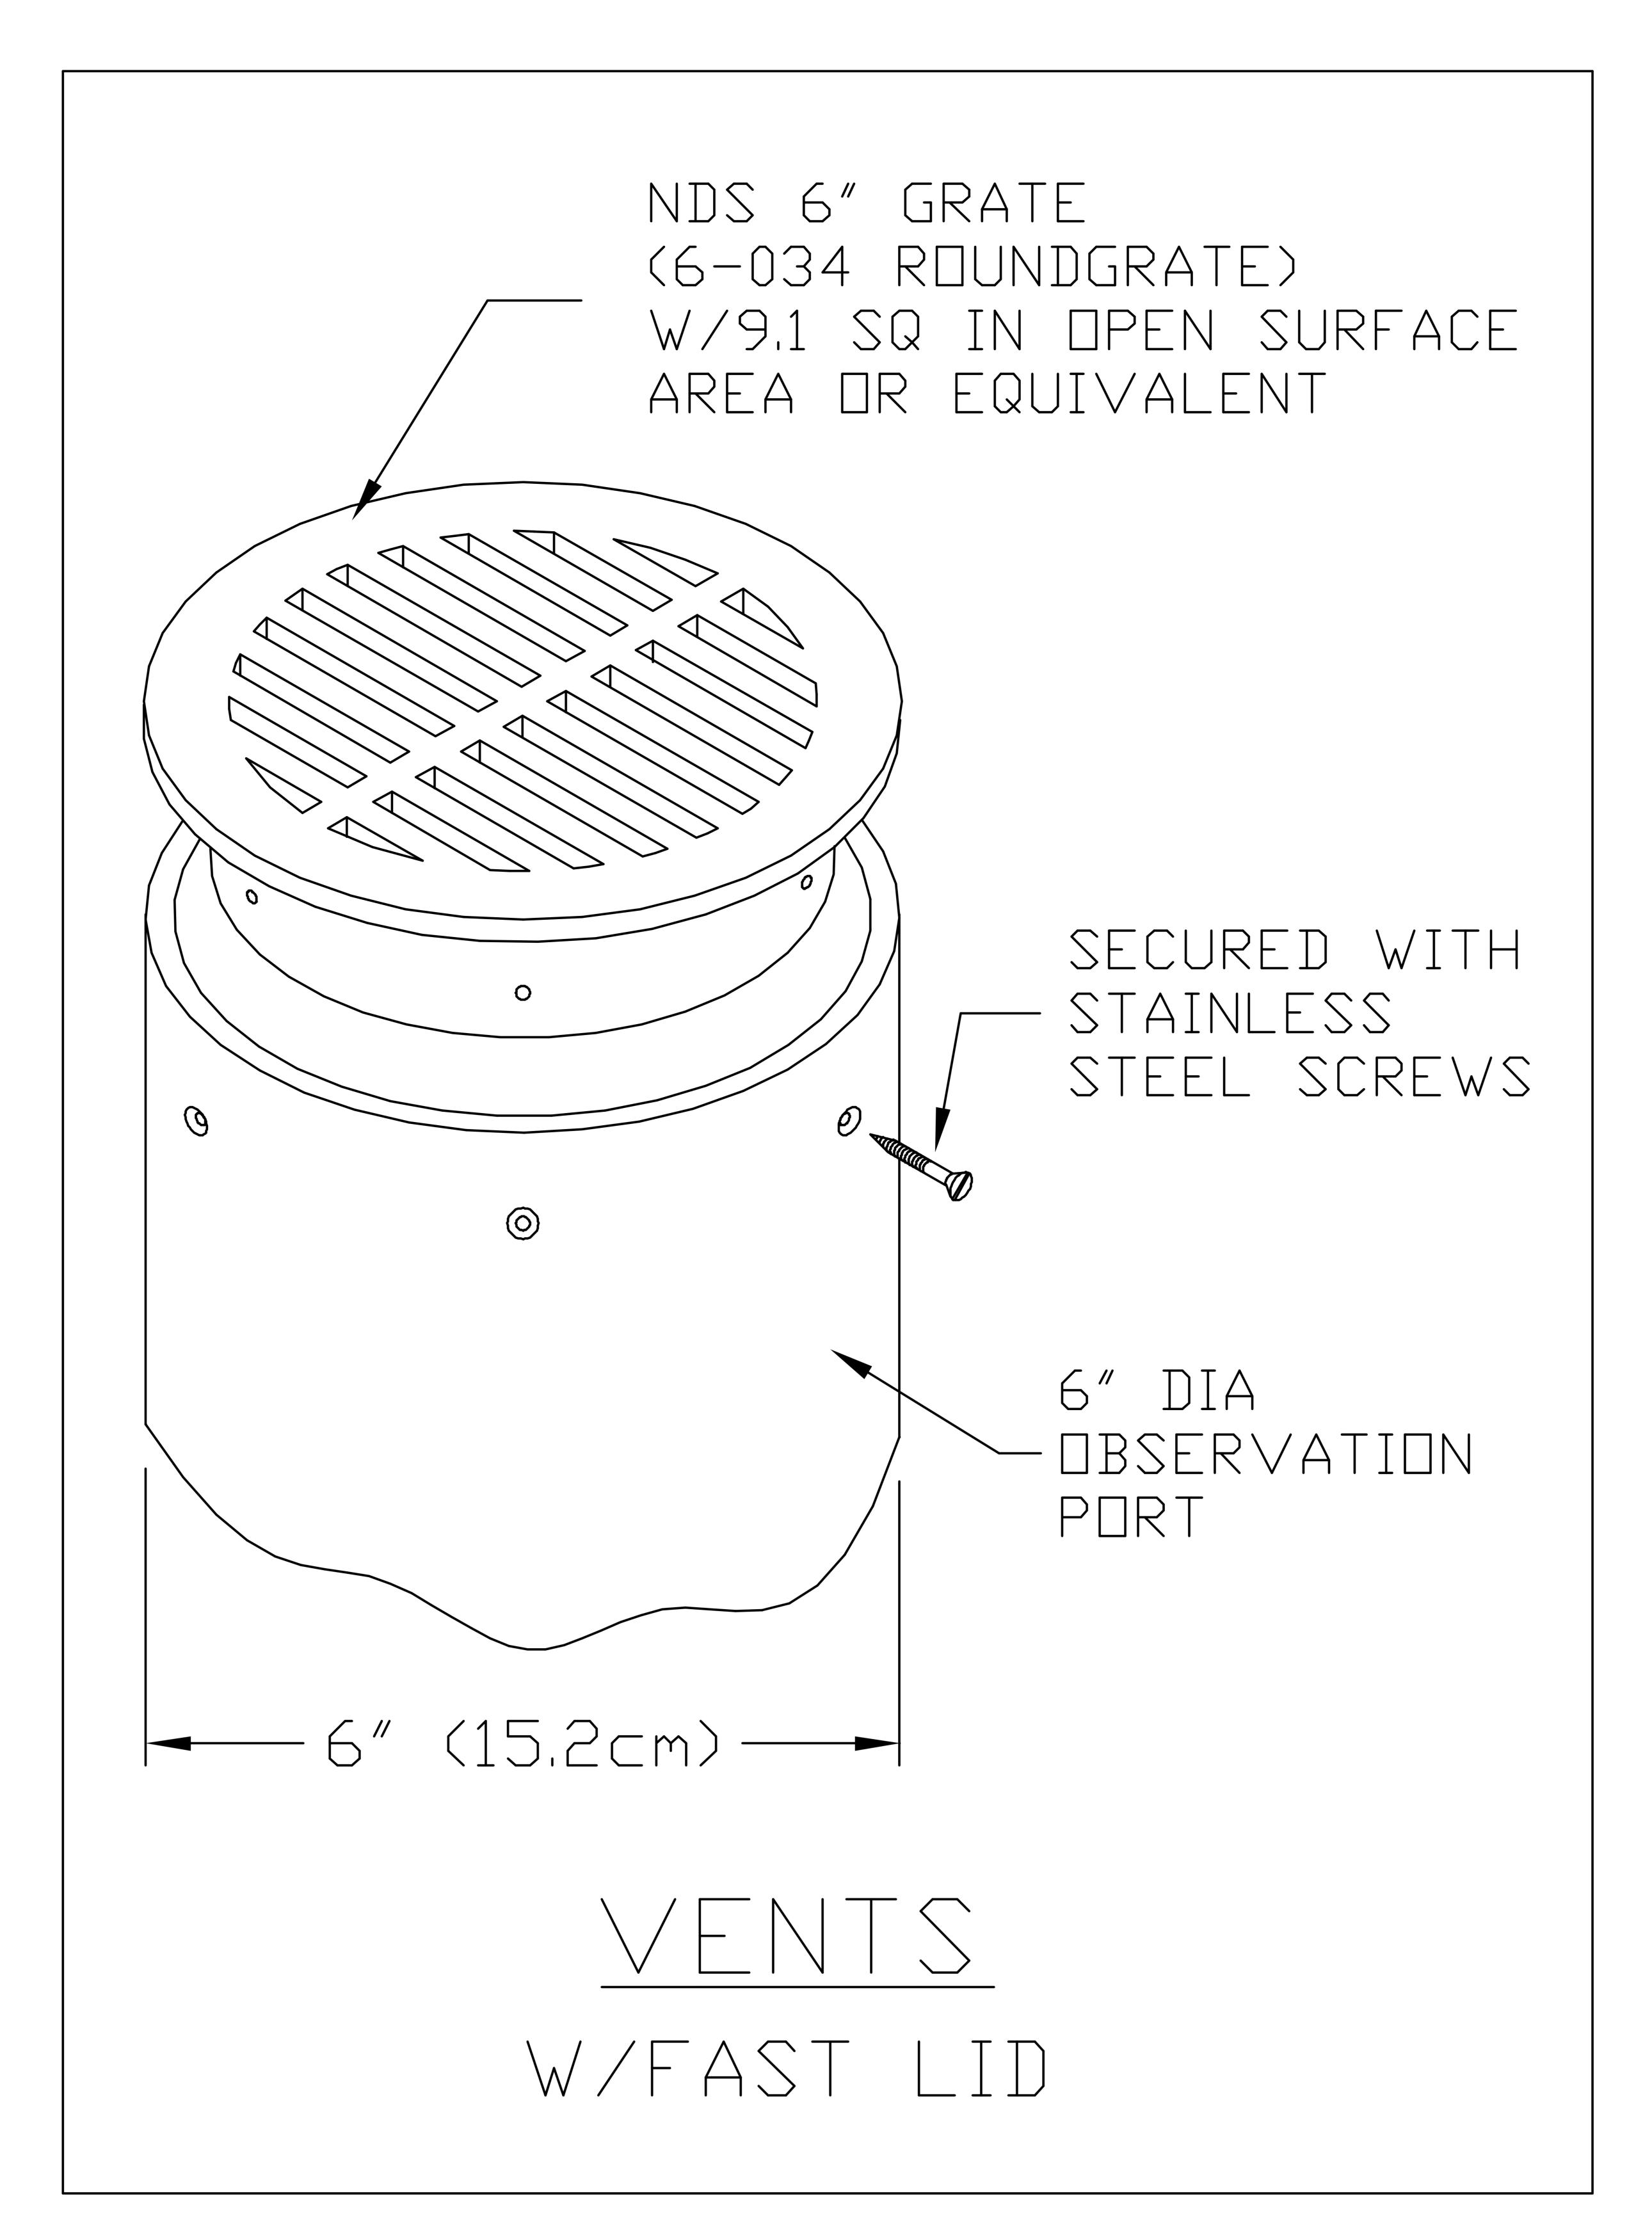

BLOWER HOUSING BASE
DIMENSIONS (SECTION A-A)

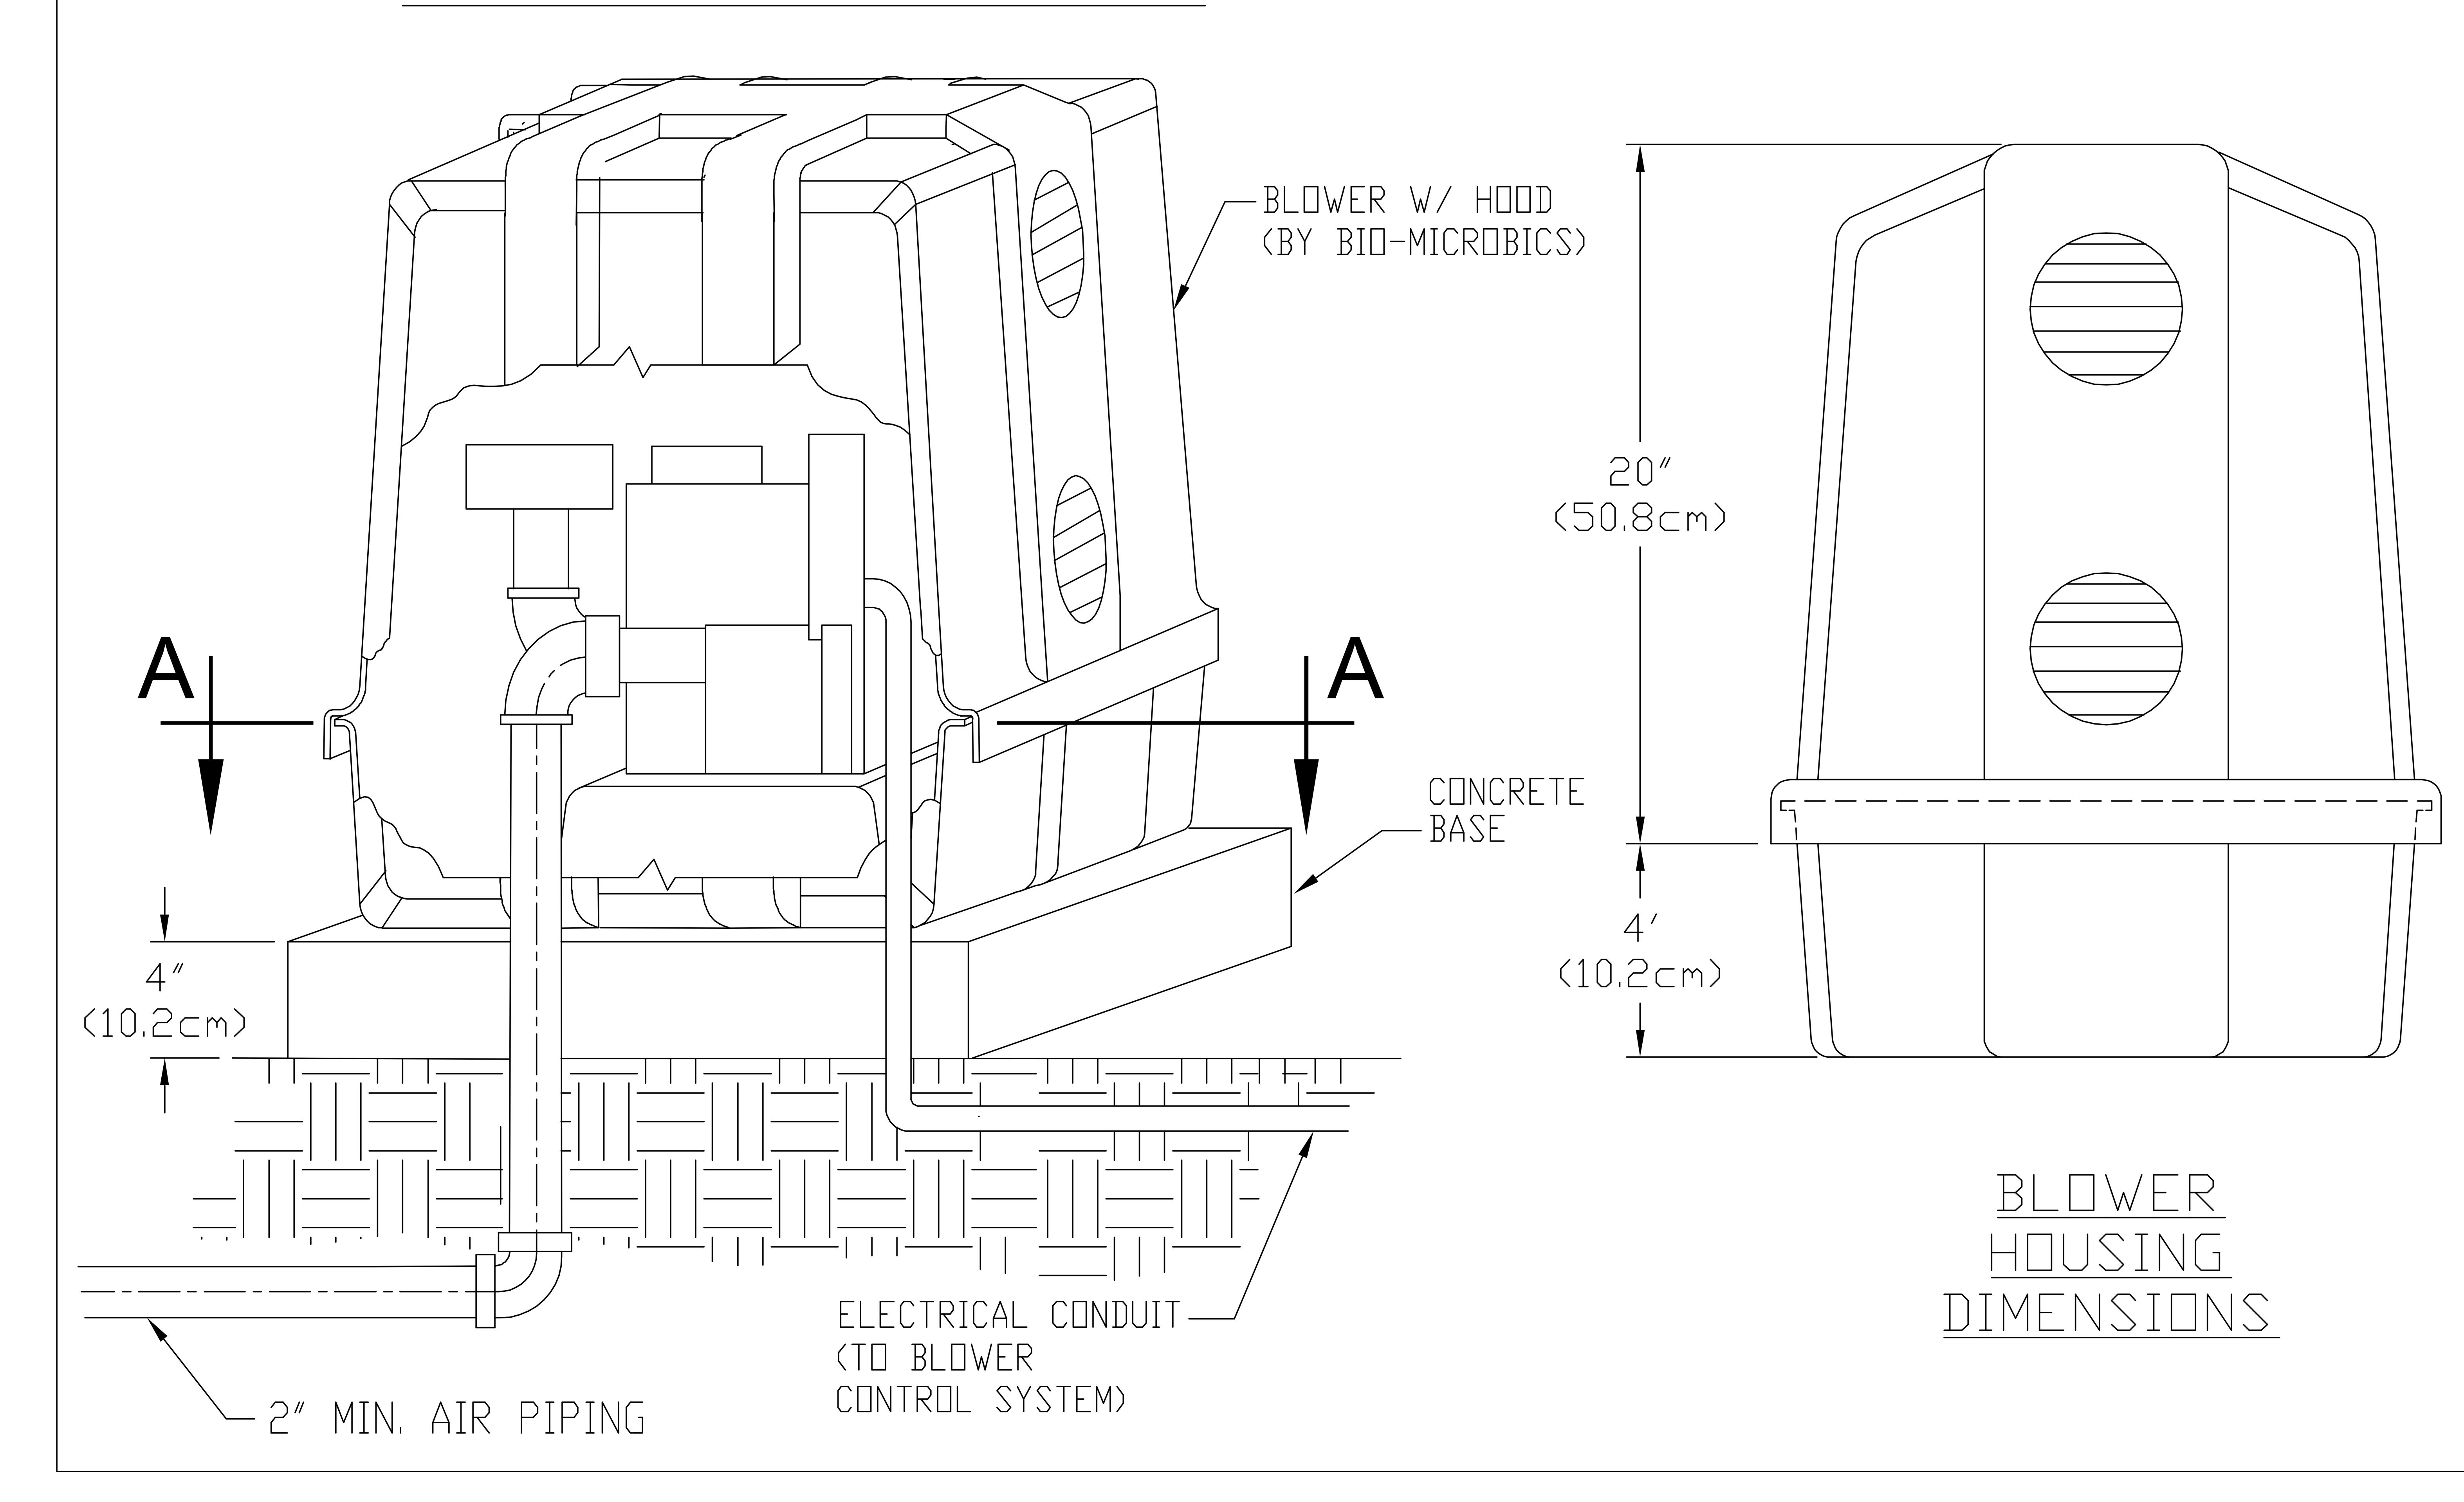

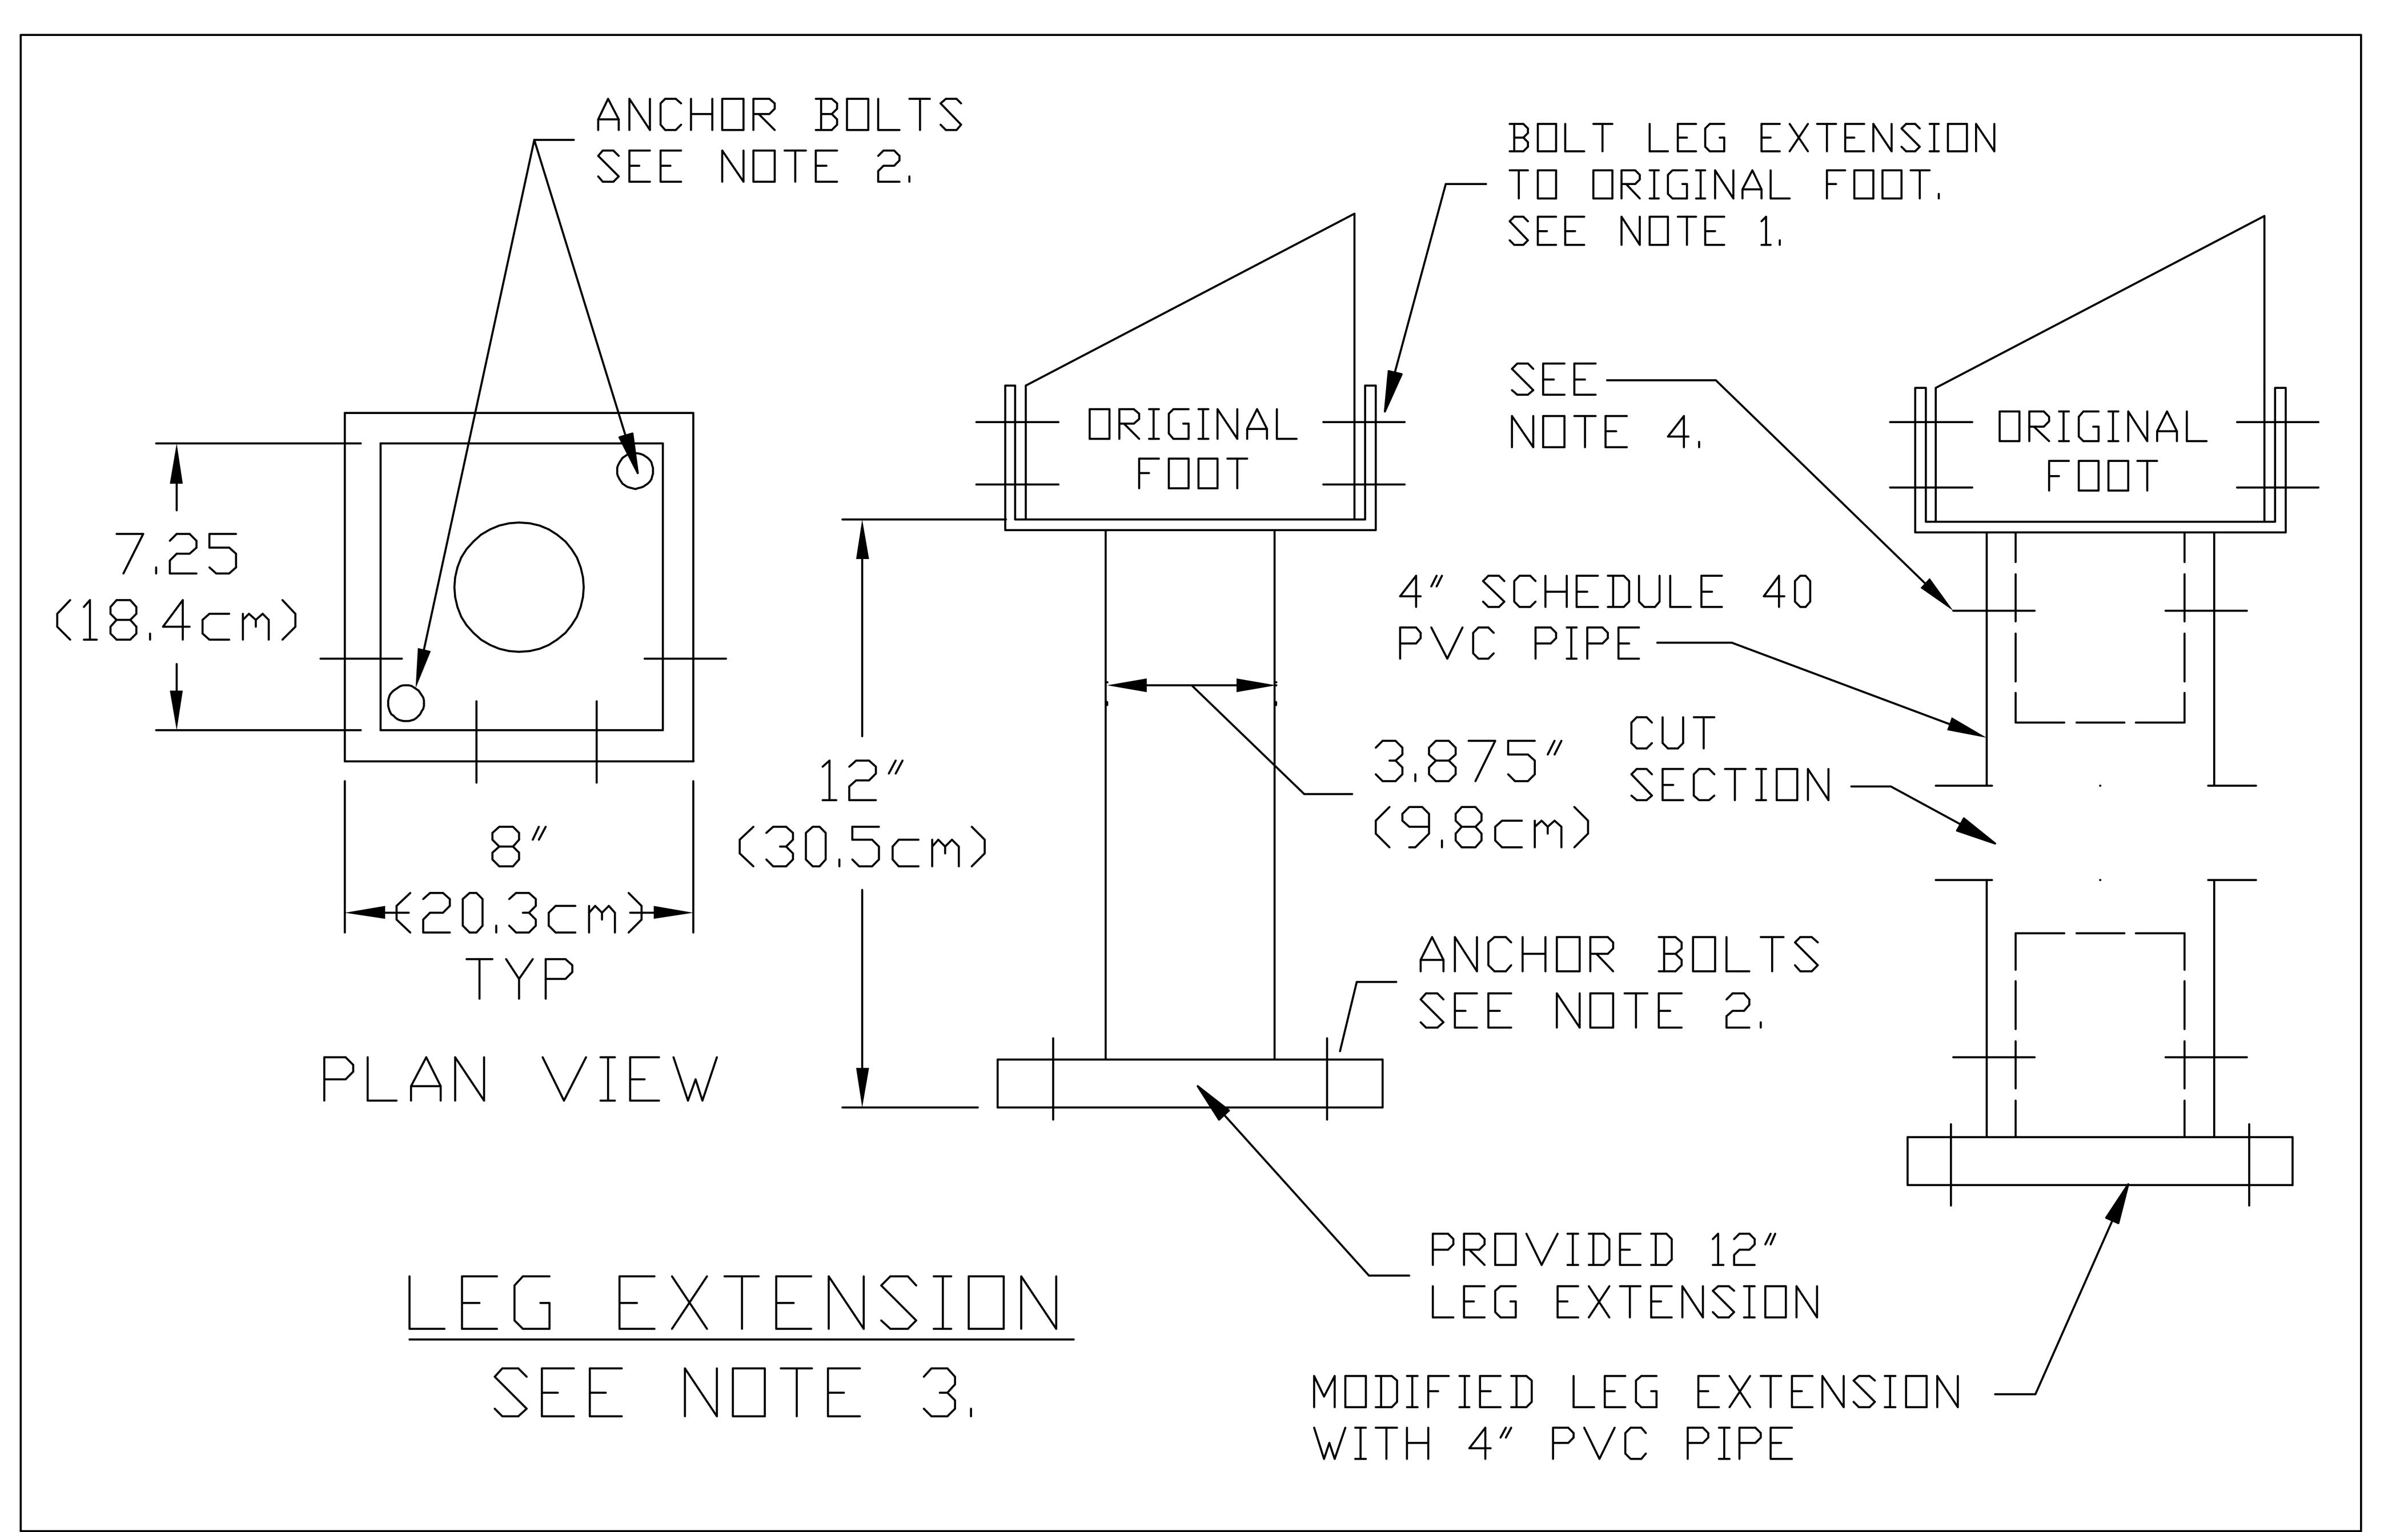


NOTES

- 1. SECURE ORIGINAL 7" X 7" FOOT TO LEG EXTENSION BY PLACING TWO (2) SCREWS IN EACH SIDE OF THE LEG EXTENSION. EIGHT (8) SCREWS PER FOOT ARE INCLUDED AND SHOULD BE USED ON EACH OF THE FOUR (4) CORNER LEG EXTENSIONS.
- 2. ANCHOR THE LEG EXTENSIONS (4 CORNER LEGS ONLY) TO THE BASE OF THE TANK, PLACE BOLTS AT OPPOSITE CORNERS OF THE LEG EXTENSION BASE.
- 3. TO ELONGATE FOOT PAST THE PROVIDED 12", CUT THE 3.9" LEG EXTENSION IN THE CENTER INTO TWO SEPARATE PIECES. THEN CUT A SCH 40 PVC PIPE TO THE DESIRED LENGTH AND SLIP THE PIPE OVER THE TOP AND BOTTOM CUT SECTIONS OF THE LEG EXTENSIONS.
- 4. ATTACH PIPES WITH STAINLESS STEEL SCREWS.
- 5. VENT TO BE LOCATED ABOVE FINISH GRADE OR HIGHER TO AVOID INFILTRATION. CAP WITH 6" VENT GRATE W/AT LEAST 9.1 SQ. IN. OF OPEN SURFACE AREA. SECURE WITH STAINLESS STEEL SCREWS (SEE MCF 1.5 L DWG)


RUN VENT TO DESIRED LOCATION AND COVER OPENING WITH MIN, 4" VENT GRATE W/AT LEAST 9,1 SQ, IN, OPEN SURFACE AREA, SECURE WITH STAINLESS STEEL SCREWS, VENT MUST NOT ALLOW EXCESS MOISTURE BUILDUP OR BACK PRESSURE,


IN THE INTEREST OF TECHNOLOGICAL PROGRESS, ALL PRODUCTS ARE SUBJECT TO DESIGN AND/OR MATERIAL CHANGE WITHOUT NOTICE.

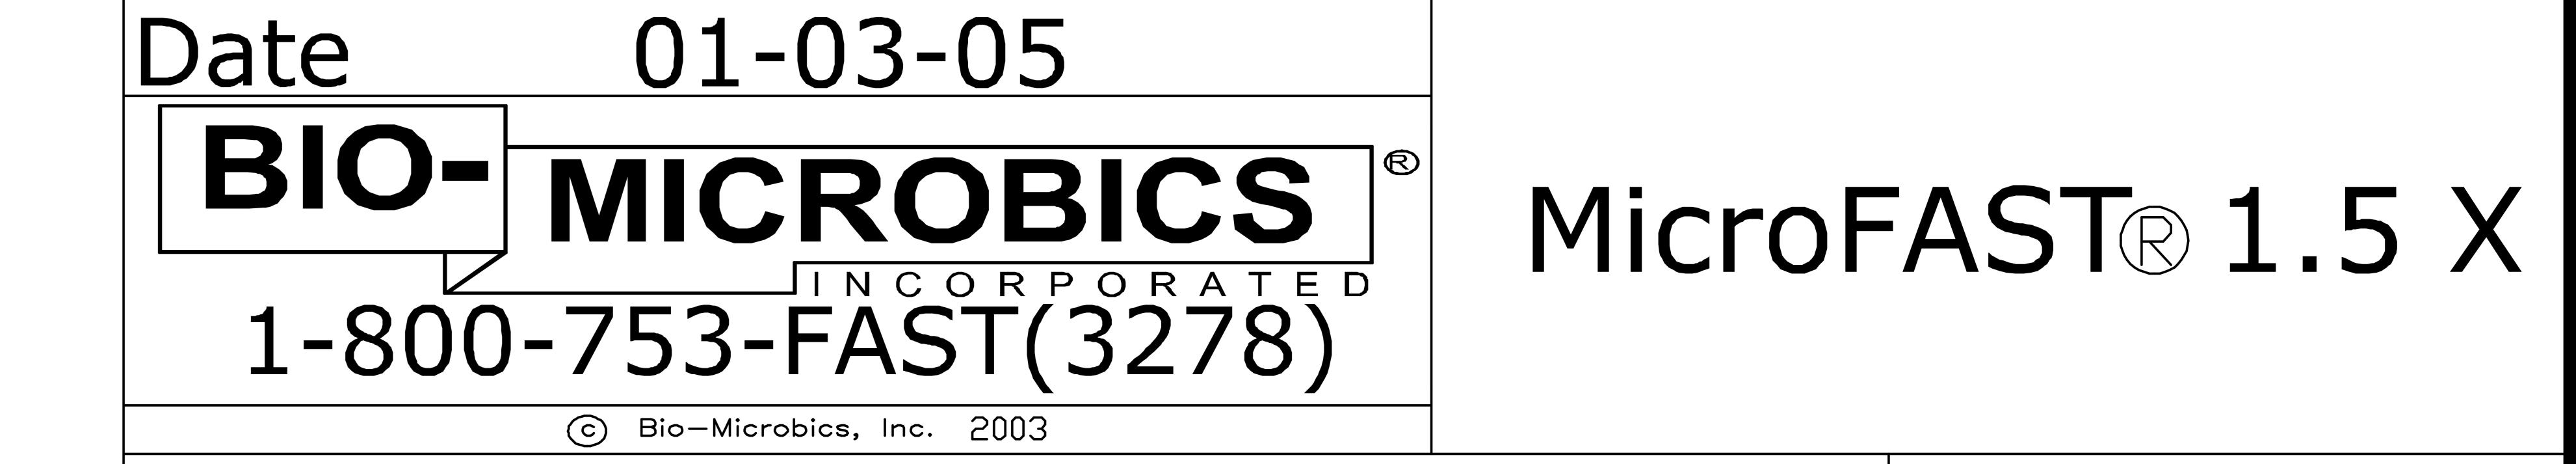

THE DESIGN AND DETAIL OF THIS DRAWING IS THE PROPERTY OF BIO-MICROBICS, INC. AND IS NOT TO BE USED EXCEPT IN CONNECTION WITH OUR WORK. DESIGN AND INVENTION RIGHTS ARE RESERVED.


DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.



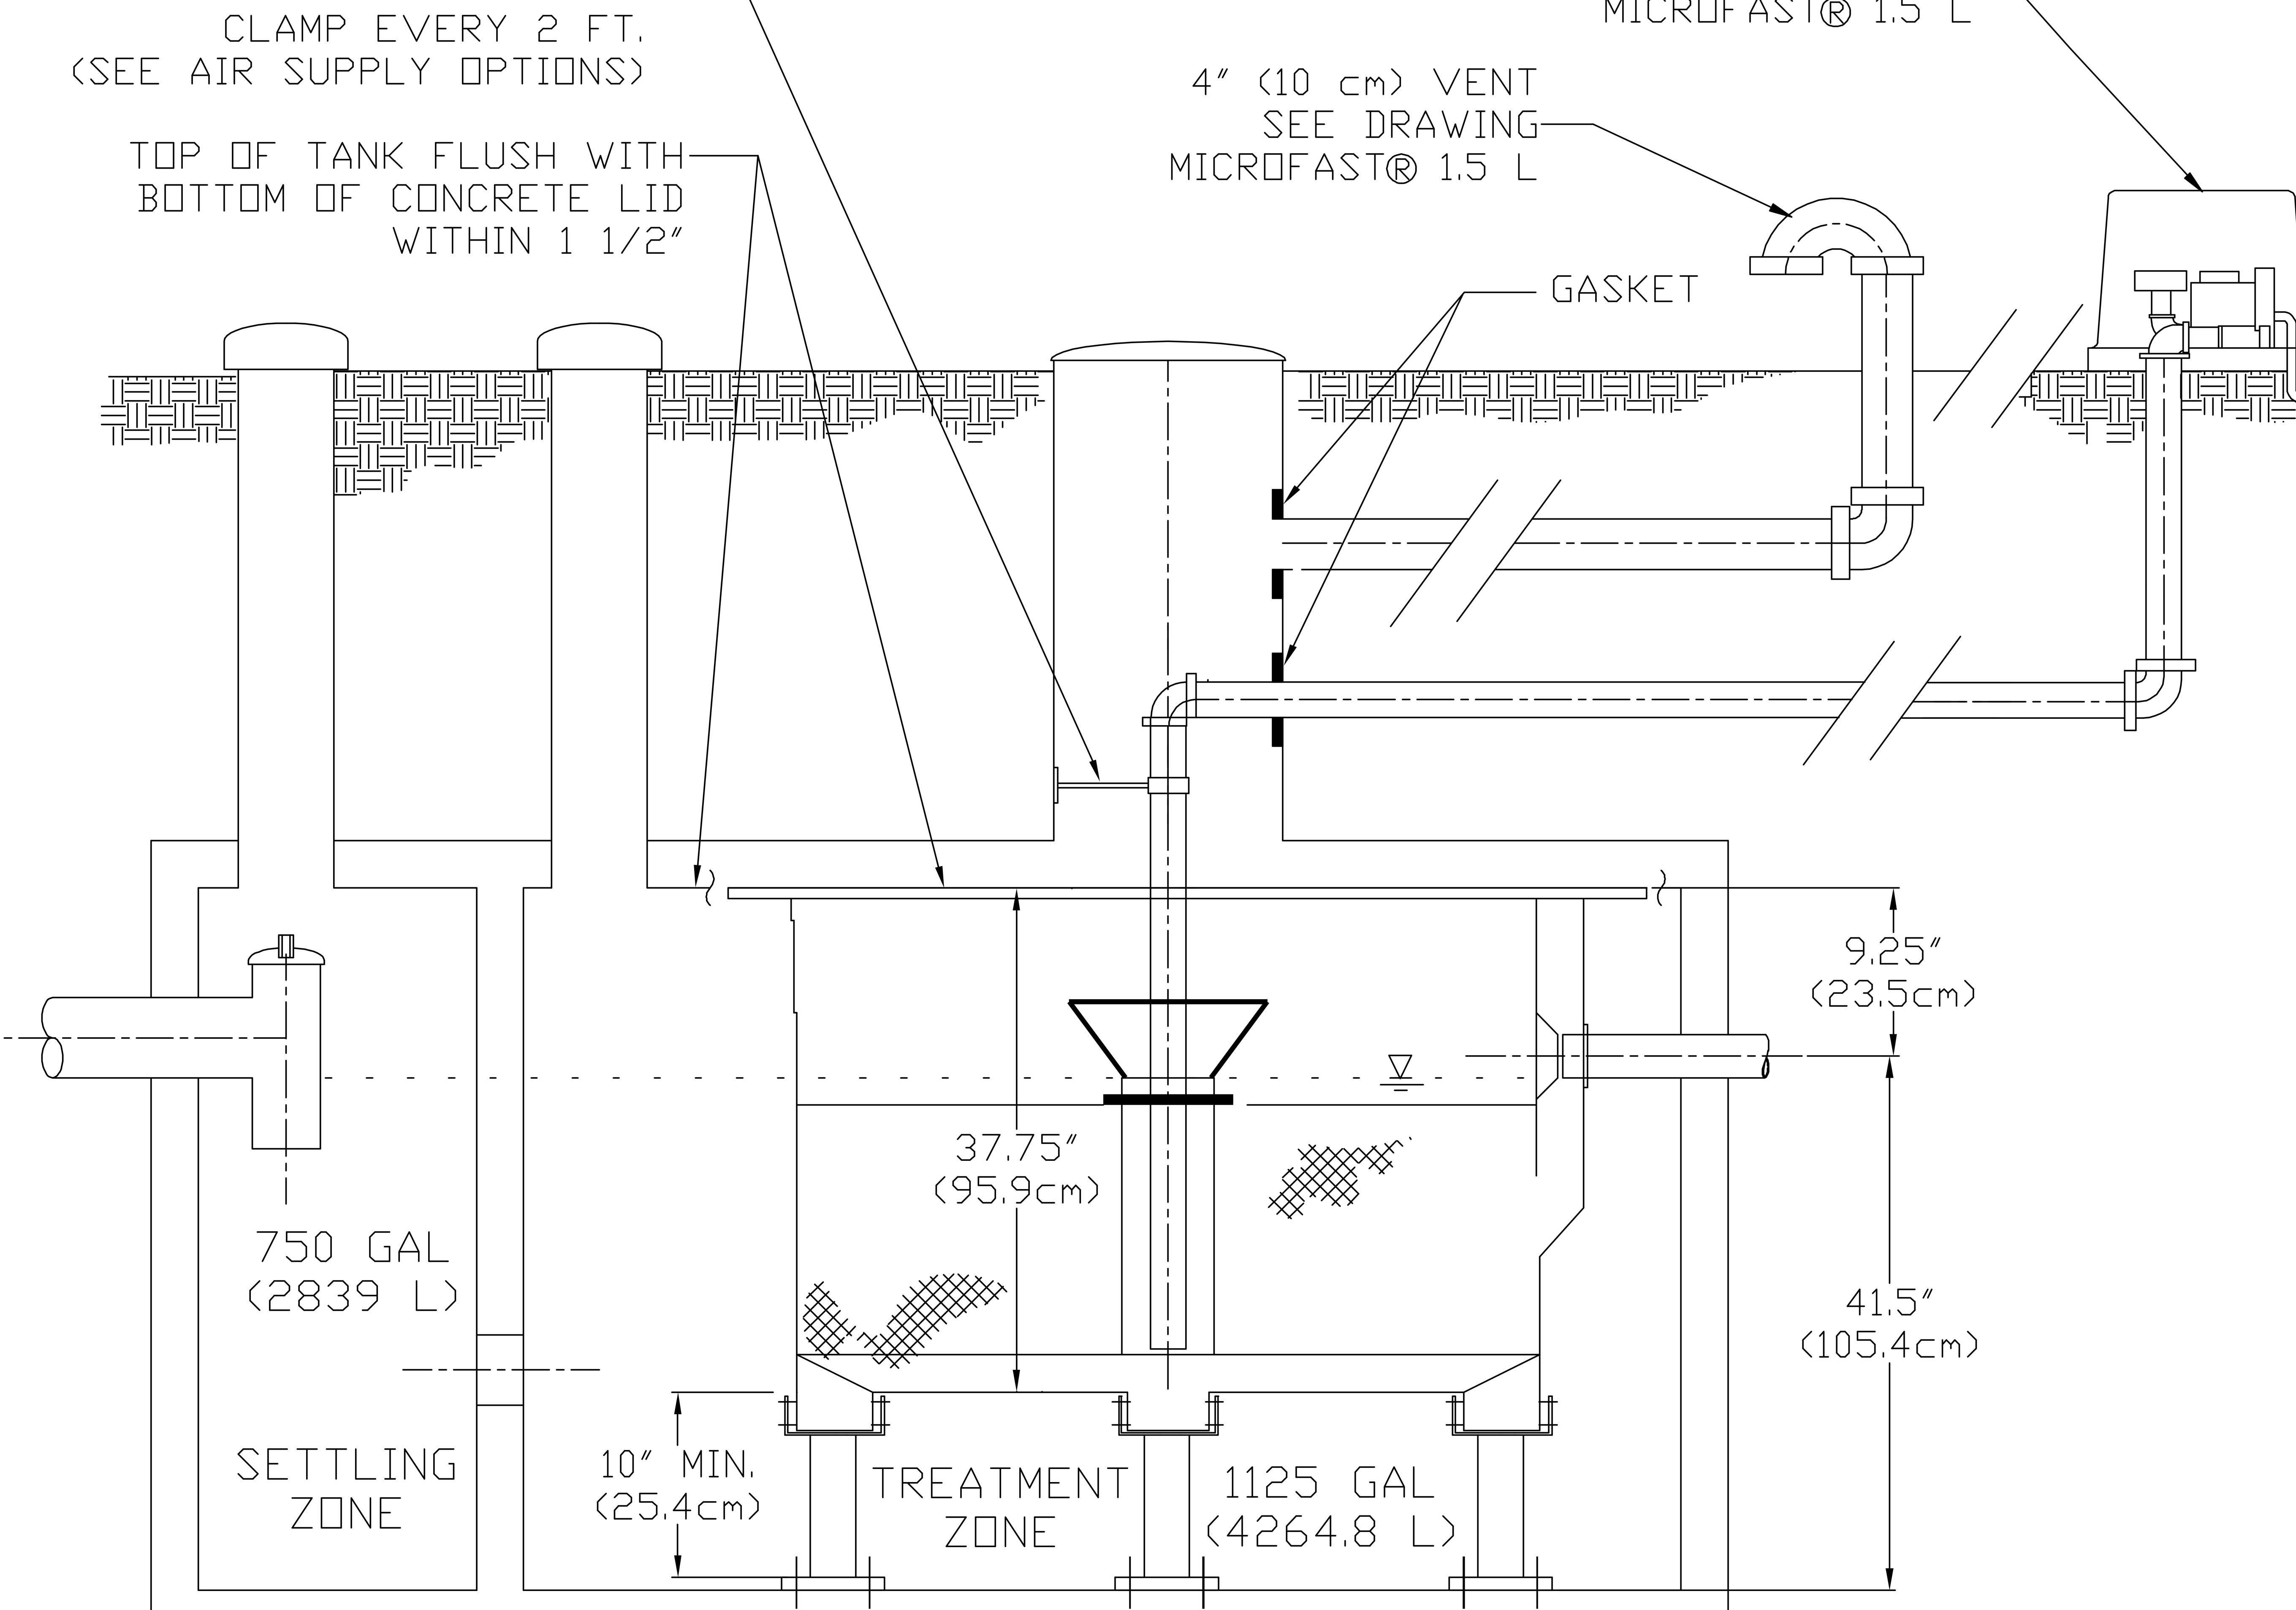

- AT OPPOSITE CORNERS OF THE LEG EXTENSION
- 3. TO ELONGATE FOOT PAST THE PROVIDED 12", CUT SEPARATE PIECES, THEN CUT A SCH 40 PVC PIPE TO THE DESIRED LENGTH AND SLIP THE PIPE OVER THE TOP AND BOTTOM CUT SECTIONS OF THE LEG EXTENSIONS.
- 4. ATTACH PIPES WITH STAINLESS STEEL SCREWS.
- 5. THE AIR SUPPLY LINE INTO THE FAST® UNIT MUST BE SECURED SO AS TO PREVENT DAMAGE FROM
- 6. SEE ALL NOTES ON MCF 1.5 L DRAWING.
- 7. IF LEGS ARE EXTENDED PAST 48", USE OF SCHED 80 OR STRONGER PIPE IS RECOMMENDED.

IN THE INTEREST OF TECHNOLOGICAL PROGRESS, ALL PRODUCTS ARE SUBJECT TO DESIGN AND/OR MATERIAL CHANGE WITHOUT NOTICE.

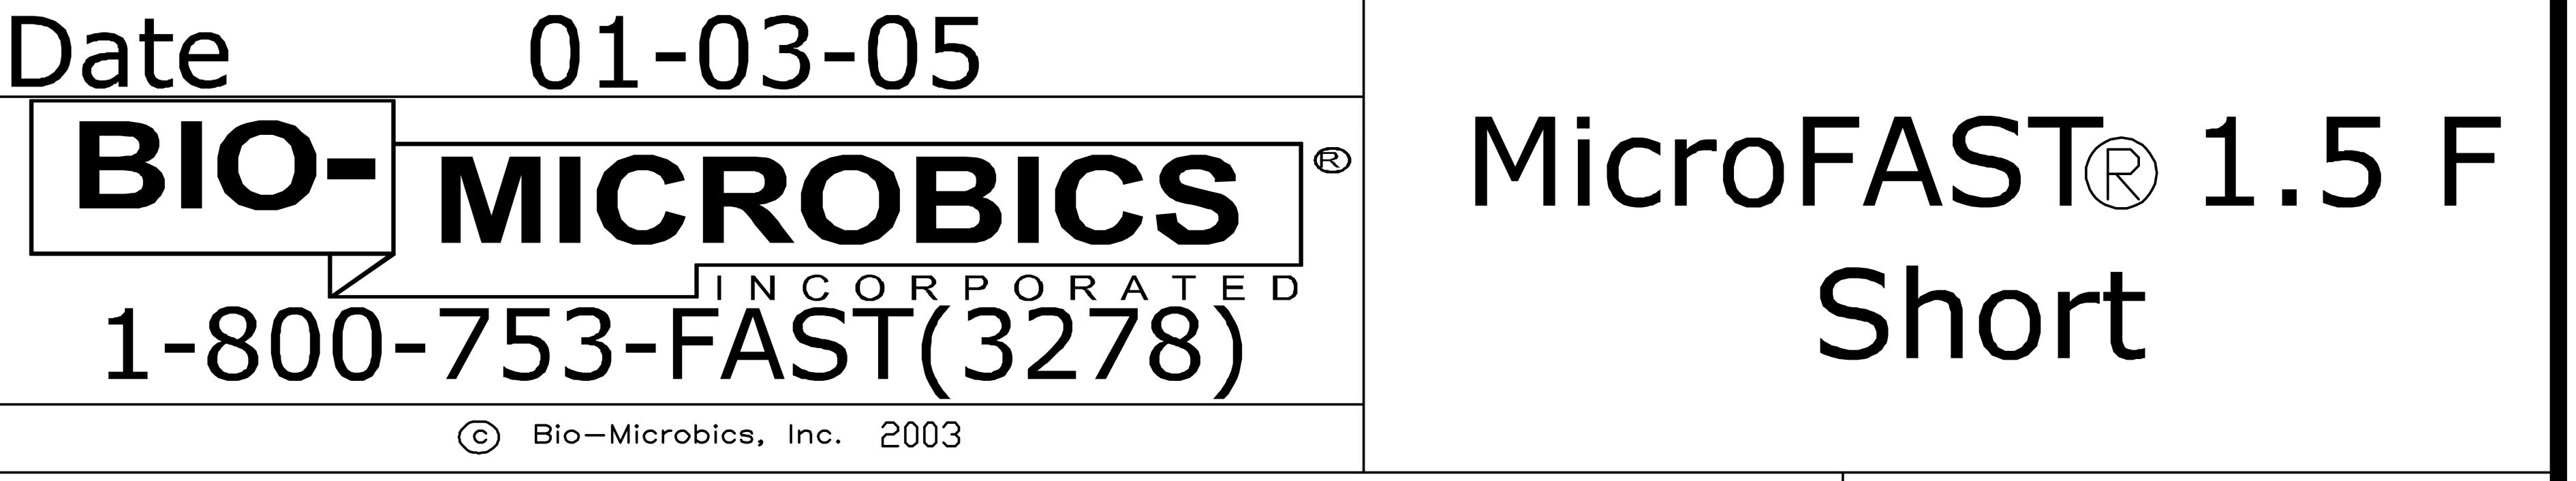

Drawn by BMI TO BE USED EXCEPT IN CONNECTION WITH OUR WORK. DESIGN AND INVENTION RIGHTS ARE RESERVED. DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.



Pinnacle Environmental Technologies Inc.

Mailing Address P. O. Box 3070 Langley, B.C. V3A 4R3 Location Address 22765-A Fraser Hwy. Langley, BC. Contact Numbers
Ph: 604-5147555 (866-514-7555)
Fx: 604-5147595 (toll free)

WebSite: www.peti.ca

Email: info@peti.ca

FAST®

SEWAGE WASTEWATER TREATMENT SYSTEM

PERFORMANCE TEST DATA

The **National Sanitation Foundation** *International* is a world class recognized independent agency for testing the performance capabilities of water and wastewater treatment equipment technologies. They have specific standards that these technologies must meet in order to be certified by NSF *International*.

For the sewage wastewater technologies, NSF *International* has several standards. The standard that has the toughest effluent quality criteria is Standard 40, Class 1.

The FAST_® technology was submitted to the NSF *International* for testing to determine whether it met the Standard 40, Class 1. The testing period is for at least 6 months. The FAST_® was tested during the months from November to June in Ann Harbour, Michigan that is an area in cold winter climate conditions.

The following is a summary of the test results. The $FAST_{\circledast}$ is listed and certified as meeting this standard. A copy of the full report is available to professional engineers and government regulators on request.

SUMMARY OF NSF TEST RESULTS OF THE MicroFAST SEWAGE TREATMENT PLANT							
	Average	Std. Dev.	Minimum	Maximum	Median	Interquartile Range	
BOD ₅ (mg/l) Influent Effluent	144 9	34 4	89 <5	280 24	140 8	120 - 160 6 - 11	
Suspended Solids (mg/l) Influent Effluent	197 7	85 3	85 <5	740 27	180 5	150 - 220 5 - 8	
Volatile Suspended Solids Influent (mg/l) Effluent	159 6	54 3	68 <5	430 29	150 <5	130 - 180 <5 - 7	
pH Influent Effluent	-	-	7.3 7.5	7.7 8.2	7.5 7.8	7.5 - 7.5 7.8 - 7.9	
Temperature (⁰ C) Influent Effluent	12 11	2 4	10 6	17 21	12 10	11 - 13 8 - 13	
Dissolved Oxygen (mg/l) Effluent	6.8	1.4	2.8	9.9	6.9	6.2 - 7.8	

Notes: The median is the point where half of the values are greater and half are less.

The interquartile range is the range of values about the median between the upper and lower 25 percent of all values.

This information found in TABLE 1 Summary of Analytical Results, Page 10 of the NSF Test Results of the MicroFAST MODEL .5, dated July 1997.

Other independent testing agencies and groups, working on behalf of either governments or onsite sewage treatment system owners, have conducted testing of systems in service as required by their regulation or a government lead study.

When and where these test results are submitted back to BioMicrobics Incorporated in Kansas, USA, they are additional confirmation of the capabilities and performance capabilities of the FAST $_{\odot}$ unit.

The following is a summary of a collection of these submitted results.

Site Deta	Site Details: Florida Owners Project — Phase 1. Actual residences of several single family homes.									
Date	BOI),	CBC	D	TSS	S	TKN		Total Pho	osphorus
	Influent	Effluent	Influent	Effluent	Influent	Effluent	Influent	Effluent	Influent	Effluent
11/20/96	137.00	3.26	176.00	2.48	60.00	no data	19.20	1.23	4.32	3.22
12/18/96	148.00	7.75	136.00	8.85	86.00	no data	46.90	1.77	7.09	4.21
1/29/97	299.00	10.00	215.00	9.01	345.00	4.00	62.50	1.82	11.00	4.52
2/26/97	139.00	10.00	183.00	6.00	70.00	4.00	37.40	0.64	7.07	5.22
4/2/97	170.00	2.20	150.00	1.00	17.00	1.00	32.00	1.60	6.60	5.60
4/23/97	210.00	1.40	200.00	1.00	203.00	1.00	46.00	1.10	7.80	5.60
5/8/97 (1)	230.00	1.70	220.00	1.00	170.00	2.50	39.00	1.10	7.10	5.40
5/21/97	62.00	2.70	59.00	1.00	162.00	1.00	33.00	1.60	5.80	5.30
5/29/97 (2)	240.00	1.00	130.00	1.00	80.00	1.00	44.00	1.60	26.00	5.80
6/11/97	100.00	1.40	67.00	1.00	123.00	1.00	36.00	0.83	5.80	7.10
7/17/97	150.00	1.00	130.00	1.00	74.00	3.00	33.00	1.10	7.10	4.50
8/28/97	100.00	1.00	71.00	1.00	20.00	1.00	32.00	0.81	5.00	4.20
Avera ge	165.42	3.62	144.75	2.86	117.50	1.95	38.42	1.27	8.39	5.06
Reduction	97	7.8%	98	3%	9	98.3%	90	6.7%	39	9.7%

- (1) sample collected after vacation stress test simulation
- (2) sample collected after wash day stress test simulation

Site Details: Single Family Home in Washington State. 2 adults and 2 adolescent boys. Effluent discharged to drip irrigation dispersal system EFFLUENT ONLY RESULTS REPORTED							
Date	Date BOD TSS TKN Total Phosphoru						
04/06/99	<3.0	2.0					
04/18/99	< 3.0	2.0	<1.6	2.80			
04/23/99	3.0	2.0					
04/28/99	3.0	2.0	1.8	2.60			
05/13/99	< 3.0	2.0	1.5	2.78			
05/20/99	< 3.0	3.0					
06/03/99	<3.0	3.0	1.8	2.26			

High Strength Sewage Wastewater is typically considered to be where the influent BOD and TSS exceeds 250 mg/l respectively. The FAST® product is available in a design specially constructed to handle high strength wastewater. Each project is considered on its own particular needs and the appropriate FAST® high strength wastewater treatment model is selected.

Test results from systems in place are available upon the submission of the data to BioMicrobics which is not mandatory and provided voluntarily by the system user.

Site Details: Elementary school in the eastern USA. School has cafeteria to service the students and teachers. The total daily flow is 4,000 imp gals (18 cu. m.)					
Date	СВО	OD	TSS	S	
	Influent	Effluent	Influent	Effluent	
01/18/01	894.00	10.40	216.00	11.50	
01/24/01	707.00	4.70	243.00	2.00	
02/01/01	740.00	1.98	232.20	3.00	
02/06/01	623.00	1.67	467.40	3.70	
02/14/01	416.00	4.87	154.70	4.70	
03/07/01	662.00	1.61	96.00	5.00	
03/14/01	514.70	1.13	149.50	6.30	
03/21/01	578.00	197	103.00	7.70	
03/28/01	596.00	5.20	153.00	5.00	
04/04/01	738.00	2.90	241.00	6.00	
04/11/01	789.00	4.40	98.70	3.70	
04/18/01	427.60	2.00	255.00	5.30	
04/25/01	523.00	3.10	117.50	4.00	
05/16/01	579.70	4.30	116.00	5.00	
Average	627.71	3.59	188.79	5.21	
Reduction	Reduction 99.4% 97.2%				