



COMMITTEE BAY RESOURCES LTD.

Suite 220, 9797-45 Avenue, Edmonton, Alberta, T6E-5V8 ph) 780-437-6624 fx) 780-439-7308

15 June 2004
Mr Philippe di Pizzo
Director
Nunavut Water Board
P.O. Box 119
Gjoa Haven, NU X0E 1J0

Dear Mr Pizzo

RE: Water License # NWB2CRA0305

Please accept the enclosed requested amendments to our spill contingency plan. It includes the new contacts, camp layout plans, and camp contact information. Please note that currently direct contact information for the Bullion is unknown until the camp has been fully established and opened. We will notify you when we have this information. Committee Bay Resources Ltd. has decided NOT to establish the Dore camp is indicated in the original amendment due to time and cost constraints. All activities will be conducted from the Hayes Camp or the Bullion Camps. Please also note that the Hayes Camp layout has changed due to your winter camp upgrade.

Your comments and questions are always welcomed. Please do not hesitate to call .

Sincerely,


Jo Price



INTERNAL	
PC	JP
MA	
FO	
LA	
BS	
ST	
TA1	
TA2	
RC	
ED	
CH	
BRD	
EXT.	

**SPILL CONTINGENCY PLAN
For Camps and Remote Operations
Committee Bay Resources Ltd.**

June, 2004

SPILL CONTINGENCY PLAN

Table of Contents

	Page#
1.0 Introduction	4
2.0 Facilities	4
3.0 Petroleum and Chemical Product Storage and Inventor	4
3.1 Remote Location Fuel Inventory, Storage and Handling Procedures	
3.2 Petroleum Product Transfer	
4.0 Risk Assessment and Mitigation of Risk	4
4.1 Petroleum Products and Other Fuels	
5.0 Responding to Failures and Spill	5
5.1 Spill Response Team Contact List	
5.2 Basic Steps-Spill Procedure	
5.3 Basic Steps-Chain of Command	
5.4 Other Contacts for Spill Response/Assistance	
6.0 Taking Action	6
6.1 Before the Fact: Preventative Measures	
6.2 After the Fact: Mitigative Measures	
6.3 Fuel Spills on Land	
6.3.1 Procedures for Spills on Rock	
6.3.2 Procedures for Spills on Land	
6.4 Fuel Spills on Water	
6.4.1 Procedure for Spills on Water	
6.5 Fuel Spills on Snow and Ice	
6.5.1 Procedures for Spills on Snow	
6.5.2 Procedures for Spills on Ice	
6.6 Procedures for Chemical Spills	
6.7 Procedures for Loss of External Load	
7.0 Spill Equipment	10
8.0 Training and Practice Drills	10
8.1 Training	
8.2 Practice Drills	
9.0 Camp Layouts	10
10.0 Camp Contact Information	13

List of Appendices

Appendix #1	
Distribution List	13
-Amendment Record Form	
Appendix #2 Spill Report Form	14

1.0 Introduction

The Committee Bay Resources Ltd. Spill Contingency Plan shall be in effect from February 01, 2003 to February 2008. All future amendments will be posted and recorded on the attached amendment record form.

This Committee Bay Resources Ltd. Spill Contingency Plan encompasses all its present camps and active remote sites in Canada.

This Spill Contingency Plan is posted at operational remote sites.

Committee Bay Resources Ltd. endeavors to take every reasonable precaution toward ensuring the protection and conservation of the natural environment, the safety and health of Committee Bay Resources Ltd. employees, sub-contractors and contractors and (protecting) the community (at large) from any harmful effects of its materials and operations.

2.0 Facilities

No camp facilities have been established at this time.

3.0 Petroleum and Chemical Product Storage and Inventory

3.1 Remote Location Fuel Inventory, Storage and Handling Procedures

At times, Committee Bay Resources Ltd. may establish remote fuel caches for company use. Typically these caches would consist of 19 drums or less of jet fuel, stored in accordance with CSA approved methods of storage of drummed product.

3.2 Petroleum Product Transfer

Manual and automatic pumps (and aviation fuel filters for jet fuel) are used for the transfer of all petroleum products. Smoking, sparks, or open flame are prohibited in fuel storage and fuelling areas at all times.

4.0 Risk Assessment and Mitigation of Risk

4.1 Petroleum Products and Other Fuels

Following, is a list of potential sources of fuel spills:

- 1) Drummed product: Leaks or ruptures may occur. This includes and is not limited to drums of jet A/ B, diesel, waste fuel, waste oil.
- 2) Fuel cylinders: Propane, leaks may occur at the valves. All cylinders are secured at all times.
- 3) Vehicles and equipment: Wheeled vehicles and equipment, aircraft (fixed and rotary wing), snowmobiles, generators, pumps. Incidents involving leaking or dripping fuels and oils may occur due to malfunctions, impact damage, and lack of regular maintenance, improper storage, or faulty operation.

Regular inspection and maintenance in accordance with recognized and accepted standard practices at all Committee Bay Resources Ltd. camps and/ or fuel caches, reduces risks associated with the categories listed above.

Spill response training is provided to personnel who handle fuels and other petroleum products, and at least one emergency response drill will be held during the season. A report will be prepared by the response coordinator following each drill, noting response time, personnel involved and any problems or deficiencies encountered. This report will be used to evaluate emergency response capability and remedy any deficiencies if required.

Oil/Fuel Spill Kits are positioned at all camps and/ or fuel caches. A list of Spill Kits, their location, description, and contents are listed in Section 8.

5.0 Responding to Failures and Spills

5.1 Spill Response Contact List

Committee Bay Resources Ltd. 24 hour telephone contact:

John Williamson, President

Work: 780 437-6624

Home: 780 430-6235

Cell: 780 915-6640

5.2 Basic Steps — Spill Procedure

In the case of any spill or other environmental emergency, it is necessary to react in the most immediate, safe, and environmentally responsible manner. No spill or incident is so minor that it can be ignored.

The basic steps of the response plan are as follows:

- 1) Ensure the safety of all persons at all times.
- 2) Identify and find the spill substance and its source, and if possible, stop the process or shut off the source.
- 3) Inform the immediate supervisor or his/her designate at once, so that he/she may take appropriated action. (Appropriate action includes the notification of a government official, if required, Spill Report forms are included in Appendix 3.
- 4) Contain the spill or environmental hazard, as per its nature, and as per the advice of the Spill Line as required.
- 5) Implement any necessary cleanup or remedial action.

5.3 Basic Steps — Chain of Command

- 1) Immediately notify Committee Bay Resources Ltd.. You may then be instructed to directly contact the:

NWT 24 HOUR SPILL LINE and/or the DIAND 24Hour Line at:

NWT Spill Line
Tel. 1-867-920-8130, Fx. 1-867-873-6924.

Diand
Tel. 1-867-975 4298

- 2) **A Spill Report Form (Appendix 2)** is filled out as completely as possible before or after contacting the 24 Hour Spill Line.
- 3) Other members of the team are notified as deemed necessary.

5.4 Other contacts for spill response/assistance

Environment Canada:

Nunavut Iqaluit	Dave Tilden:	867-669-4728
	Collette Meloche	867-975-4639

Indian and Northern Affairs

Land Use Inspection:	Keb Dahl:	867-669-2757
----------------------	-----------	--------------

Water Licence Inspection	Philip DePiso:	867-360 6338
--------------------------	----------------	--------------

Fisheries and Oceans Canada	Ron Allen:	867-669-6641
-----------------------------	------------	--------------

GNWT Environmental Protection Service	Ken Hall:	867-876-7654
---------------------------------------	-----------	--------------

Diand Water Resources Inspector in Nunavut	Constantine	867-975-4298
--	-------------	--------------

6.0 Taking Action

6.1 Before the Fact: Preventative Measures

The following actions illustrate the proactive approach of Committee Bay Resources Ltd. to environmental care. In addition, these actions minimize the potential for spills during fuel handling, transfer and storage:

- 1) Fuel transfer hoses with cam lock mechanisms are **used**.
- 2) Carefully monitor fuel content in the receiving vessel during transfer.
- 3) Clean up drips and minor spills immediately.
- 4) Regularly inspect drums, tanks and hoses for leaks or potential to leak.
- 6) Train personnel, especially those who will be operators, in proper fuel handling and spill response procedures.

6.2 After the Fact: Mitigative Measures

1. First steps to take when a spill occurs:
 - a) Ensure your own safety and that of others around you, beginning with those nearest to the scene.
 - b) Control danger to human life, if necessary.

- c) Identify the source of the spill.
- d) Notify your supervisor.
- e) Assess whether or not the spill can be readily stopped.
- f) Contain or stop the spill at the source, if possible, by following these actions:

If filling is in progress, STOP AT ONCE.

Close or shut off valves.

Place plastic sheeting at the foot of the tank, barrel, or piece of equipment to prevent seepage into the ground or runoff of fuel

Use absorbent materials (sheets, pads, booms) to absorb and contain the fuel spill.

Use a patch kit to seal leaks, if practical to do so.

2. Secondary steps to take:

Determine status of the spill event.

If necessary, pump fuel from a damaged and/or leaking tank or drum into a refuge container.

Notify the 24-hour Spill Report Line, and receive further instructions from the appropriate contact agencies listed in *Section 5.4*. (e.g. disposal of contaminated soil or ice/snow in sealed containers for removal from site, etc.).

Complete and Fax a copy of the Spill Report Form (*Appendix 3*).

Notify permitting authorities.

If possible, resume cleanup and containment.

6.3 Fuel Spills on Land

"Land" may be defined as soil, gravel, sand, rock, and **vegetation**. Advice on spill containment and cleanup may be obtained from the 24-Hour Spill Line.

6.3.1 Procedure for Spills on Rock

For hydrocarbon spills on rock outcrops, boulder fields, etc.:

- 1) First responder or his designate obtains plastic tarp(s) and absorbent sheeting on-site.
- 2) A berm of peat, native soil or snow is constructed down slope of the seepage or spill.
- 3) the tarp is placed in such a way that the fuel can pool for collection and removal (e.g. at the foot of the berm). If there is a large volume of spilled product, pump the liquid into spare empty drums for sealing and disposal.
- 4) Absorbent sheeting is placed on the rock to soak up spilled oil, fuel, etc.
- 5) Multi Sorb (crushed lava rock) can be used to scrub the rock surface.
- 6) Saturated material is disposed of in an empty drum, which is then labeled and sealed. Alternatively, the pads may be wrung out into the empty drum(s), the drums marked and then secured for eventual disposal.
- 7) Depending on the nature and volume of the spill, the 24-Hour Spill Line may be contacted after Step 4 or Step 5.

6.3.2 Procedure for Spills on Land

- 1) First responder or his designate obtains plastic tarp(s), absorbent sheeting, Multi Sorb or other ultra-dry absorbent and any other necessary spill containment equipment, pump, hoses, etc.
- 2) A berm of peat, native soil or snow is constructed down slope of the seepage or spill.
- 3) The tarp is placed in such a way that the fuel can pool for collection and removal (e.g. at the foot of the berm). If there is a large volume of spilled product, pump the liquid into spare empty drums, and dispose of product as advised by the 24-Hour Spill Line.
- 4) Petroleum-product sheen on vegetation may be controlled by applying a thin dusting of Multi Sorb or other ultra-dry absorbent to the groundcover.
- 5) Contact the 24-Hour Spill Line, Receive instructions from the appropriate contact agencies listed in Section 5.4 regarding collection of the contaminated soil or vegetation, its removal and site cleanup/restoration.

6.4 Fuel Spills on Water

6.4.1 Procedure for Spills on Water

It is important to immediately limit the extent of spills. The following is the procedure to be implemented when an incident occurs:

- 1) If the spill is small, deploy hydrophobic (water repellent) absorbent pads on the water. Hydrophobic pads readily absorb hydrocarbons. Alternatively, an ultra-dry absorbent designed for use on water-based spills may be deployed.
- 2) If the spill is larger, ready several empty drums to act as refuge containers for the spill.
- 3) Deploy *containment* booms on the water surface to “fence in” the spill area gradually and to prevent it from spreading. Keep in mind those environmental factors such as high winds and wave action can adversely affect attempts at spill cleanup.
- 4) *Absorbent* booms can then be deployed to encircle and then absorb any hydrocarbon spillage that may have escaped the *containment* boom.
- 5) Once a boom has been secured, a skimmer may be brought on-scene to aid in capture of the hydrocarbon; once captured, the product should be pumped to the empty fuel drums and held for disposal.
- 6) As soon as possible either during or after the incident, contact the 24-Hour Spill Line. (This will ensure government agencies are informed).

6.5 Fuel spills on Snow and Ice

By its nature, snow is an absorbent, and fuel spilled on snow is collected with relative ease, either by shovel, in the case of small-range spills, and by loader, in the case of more extensive spills.

6.5.1 Procedure for Spills on Snow

- 1) Assess the nature of the spill. Necessary equipment might include shovels, plastic tarp(s), empty drums, and wheeled equipment.

- 2) Shovel or scrape contaminated snow and deposit in empty refuge drums. If the spill is more extensive, build peat-bale berms or compacted snow berms with plastic over top, around the affected area.
- 3) Either during or immediately after the accident, notify the 24-Hour Spill Line. Receive instructions on the preferred disposal method (e.g. storage in sealed drums, incineration or deposit in a designated lined containment area on land) from the appropriate contact agencies listed in *Section 5.4*.

6.5.2 Procedure for spills on Ice

Spills on ice are handled in similar fashion as those on snow. However, as ice presents the added danger of immediate access to water, care must be taken to respond quickly to such spills. Should fuel seep or flow through cracks or breaks in the ice, despite all precautions, assistance should be sought immediately.

- 1) Construct a compacted-snow berm around the edge of the spill area.
- 2) Although hard ice will retard or prevent fuel entry to the receiving waters below, all contaminated snow and ice, as well as objects embedded in the ice (such as gravel or frozen absorbent pads) must be scraped from the ice surface and disposed of in an appropriated manner.
- 3) Contact the 24-Hour Spill Line. Receive disposal instructions (e.g. sealing in drums, burn off, etc.) from the appropriate contact agencies listed in *Section 5.4*.

6.6 Procedure for Chemical Spills

- 1) Assess the hazard of the spilled material. REFER TO THE MSDS SHEETS NOW. Members of the emergency response team who might be susceptible in certain situations, (such as asthmatics, where fumes or airborne particles are evident), should be replaced with alternates.
- 2) Assemble the necessary safety equipment before response (e.g. latex or other protective gloves, goggles, or safety glasses, masks or breathers, etc.)
- 3) Apply absorbents to soak up liquids.
- 4) Place plastic sheeting over solid chemicals, such as dusts and powders, to prevent their disbursement by wind or investigation by birds or other mammals.
- 5) Neutralize acids or caustics. Place spilled material and contaminated cleanup supplies in an empty refuge drum and seal for disposal.
- 6) Contact the 24-Hour Spill Line. Receive instructions on disposal methods and designated locations from the appropriate contact agencies listed in *Section 5.4*.

6.7 Procedure for Loss of External Load

The loss of external loads of fuel, oil, or chemicals from aircraft almost certainly results in complete and catastrophic failure of the container that once held the product. Immediate response is imperative.

- 1) Mark the loss target with GPS coordinates and relay to camp or base ASAP. Include quantity and type of load loss.

- 2) Base or camp will contact 24-Hour Spill Line, and receive direction and instruction.
- 3) Administer the appropriate procedure for Spills on Land, Water, Snow, or Ice.

7.0 Spill Equipment

Complete spill kits, oil absorbent kits, are kept on hand at all camps.

8.0 Training and Practice Drills

8.1 Training

All members of the Response Team will be familiar with the spill response resources at hand, this Contingency Plan, and appropriate spill response methods. Involvement of other employees may be required, from time to time.

This familiarity will be acquired through:

- 1) Initial or refresher training, as appropriate, provided once per season.
- 2) Regular inventory updates are provided in list form to all team members. Information to be reported includes listing of all resources, number of items, their location, condition, date of last inspection and any special comments (such as expiry dates, under whose authority they may be accessed and special handling instructions).

8.2 Practice Drills

Committee Bay Resources Ltd. is aware that without practice, no Contingency Plan has value.

At least one practice drill will be held per season to give personnel a chance to practice emergency response skills. Each practice will be evaluated and a report prepared with the objective of learning where gaps and deficiencies (either in skills or physical resources) exist, and in what areas more practice is required.

9.0 Camp Layouts

10.0 Camp Contacts

Hayes Camp

Andrew Turner or Brad Mercer

Phone 1604-759-0621

Fax 1604-759-0622

Bullion Camp

Phone – to be determined when open – call Hayes camp

Appendix #1

Manual Distribution

Title

Company President

John Williamson

Geologists

Andrew Turner

Rob L'Heureux


Brad Mercer

Jo Price

Safety Officer

Johanna Tuck

Amendment No.	Amendment Date	Date Entered	Entered By
1	Dec 2, 2003	Dec 2, 2003	J. Tuck
2	June 13, 2004	June 13, 2004	Jo Price

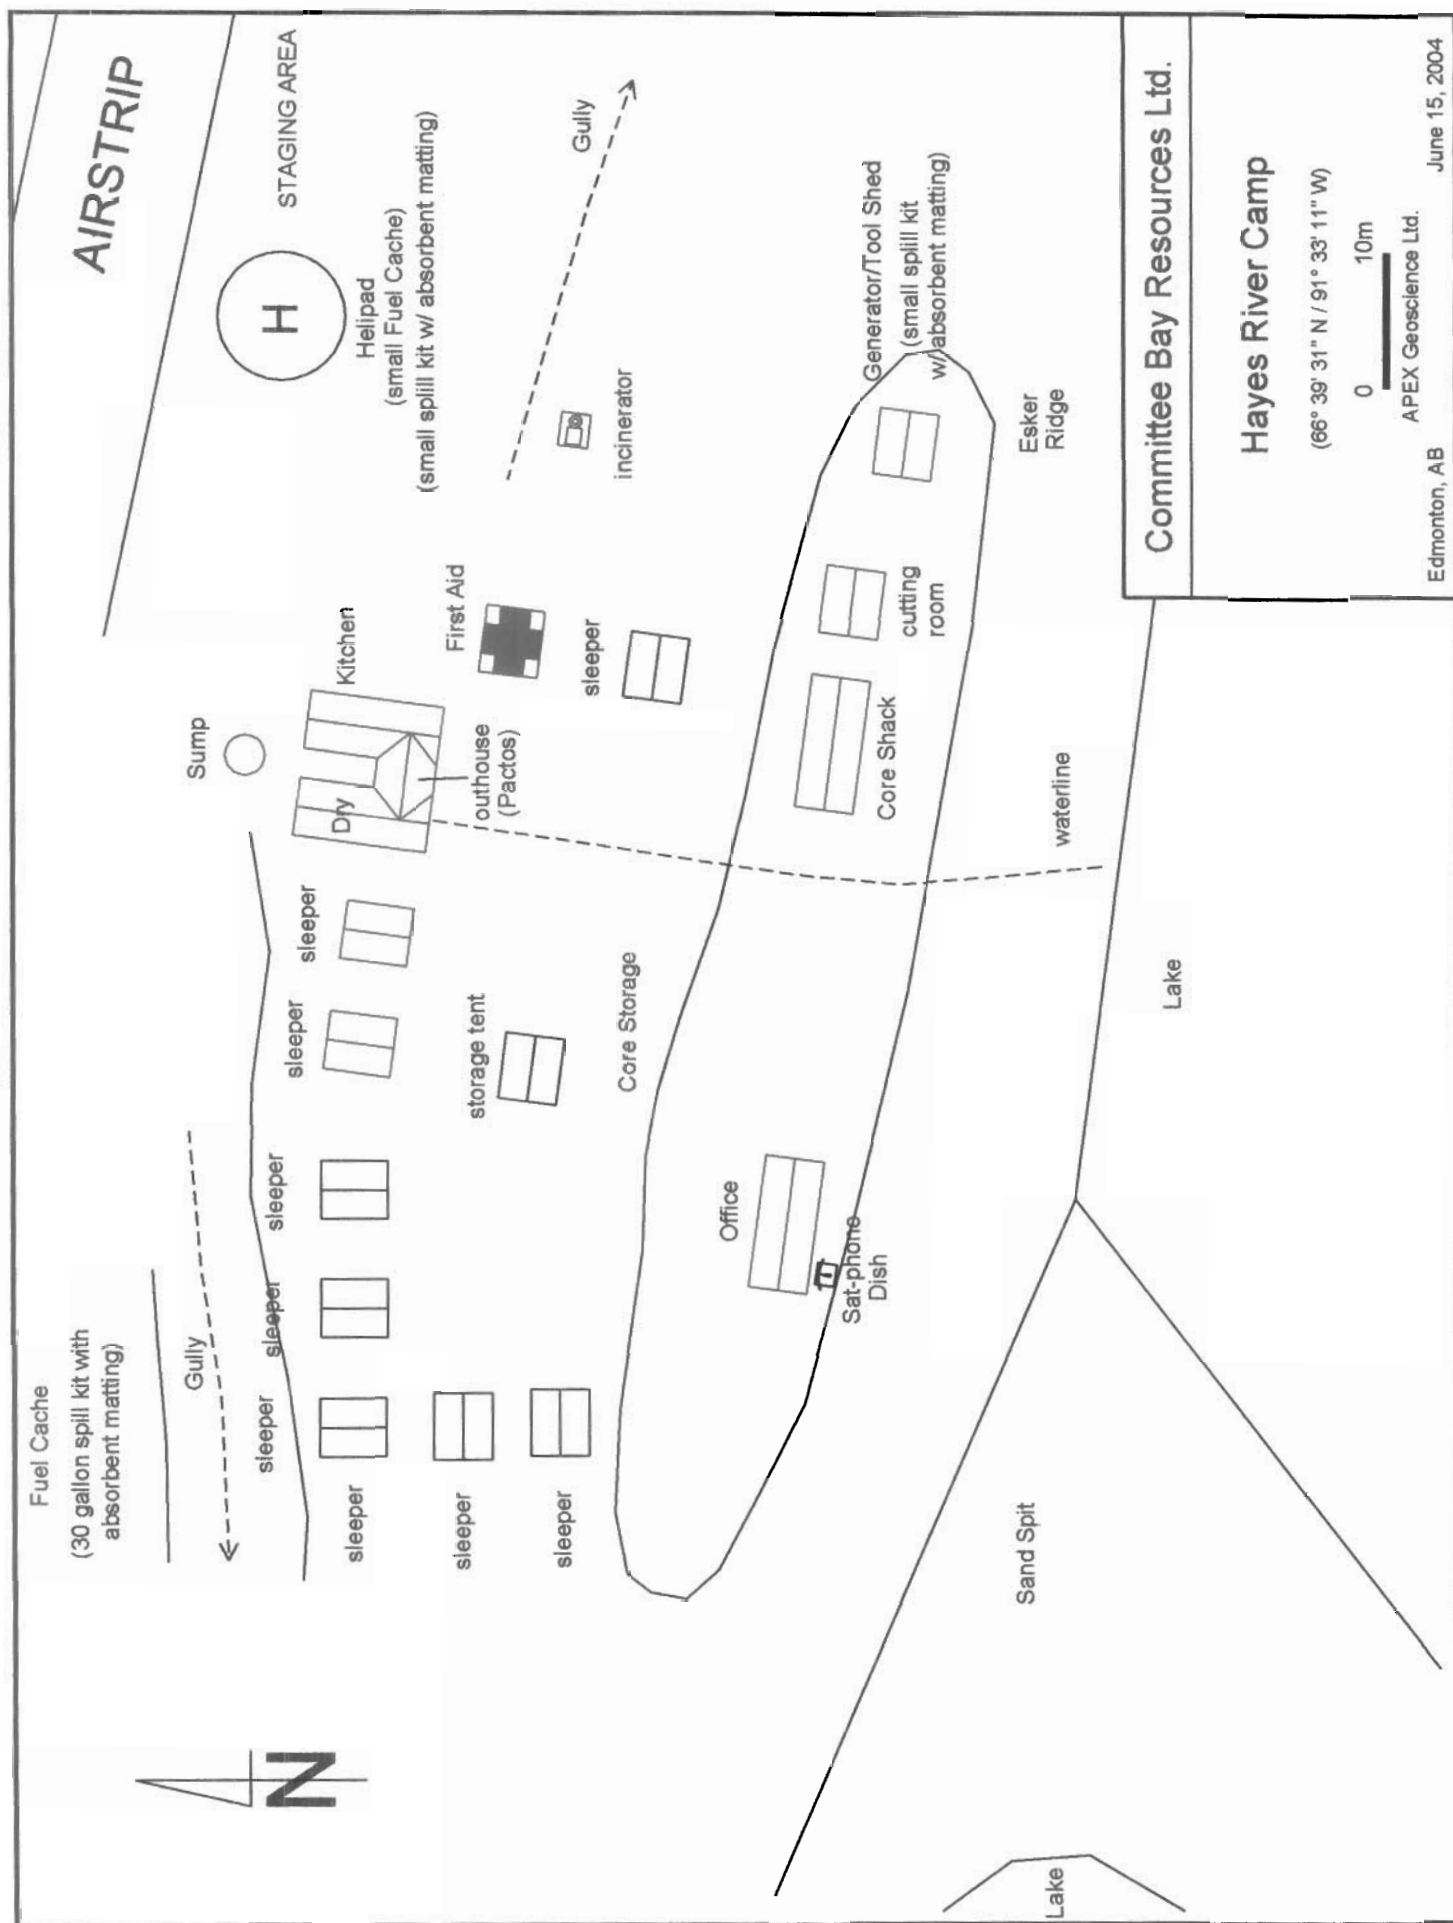

Appendix #2



NWT SPILL REPORT

(Oil, Gas, Hazardous Chemicals or other Materials)

24-Hour Report Line

Phone: (867) 920-8130

Fax: (867) 873-6924

A Report Date and time	B Date and time of Spill (if known)	C ☐ Original Report ☐ Update No.	Spill Number
D Location and map coordinates (if known) and direction (if moving)			
E Party Responsible for Spill			
F Product(s) spilled and estimated quantities (Provide metric volumes/weights if possible)			
G Cause of Spill			
H Is spill terminated? ☐ yes ☐ no	I If spill is continuing, give estimated rate	J Is further spillage possible? ☐ yes ☐ no	K Extent of contaminated area (in sq. m if possible)
L Factors affecting spill or recovery (weather conditions, terrain, snow cover, etc.)		M Containment (natural depression, dyke, etc.)	
N Action, if any, taken or proposed to contain, recover, clean up or dispose of product(s) and contaminated materials			
O Do you require assistance? ☐ no ☐ yes, describe*		P Possible hazards to persons, property, or environment; e.g. fire, drinking water, fish or wildlife*	
Q Comments and/or recommendations *:			FOR SPILL LINE USE ONLY Lead Agency Spill significance Lead Agency contact and time Is this file now closed? ☐ yes ☐ no
Reported by:	Position, Employer, Location		Telephone No:
Reported to:	Position, Employer, Location		Telephone No:

Appendix #2

Spill Report Form

No spills have occurred to date.



AIRSTRIP (600-1000' unprepared)

Committee Bay Resources Ltd.

Bullion Camp


(66° 23' 30" N / 93° 07' 30" W)

0 10m

APEX Geoscience Ltd.

Edmonton, AB

Dec. 7, 2003

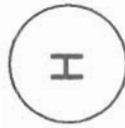

Helipad and Fuel Cache
(30 gallon spill kit plus absorbent matting)

Outhouse (w/ Pictos)



First Aid



Sleeper



Sleeper



Sleeper



Sleeper



Generator
(small spill kit)



burn barrel



Dry

Sump



Kitchen



Office



Sat-phone
Dish



Core Shack

Core Storage

waterline

creek

Lake

340m