



## 5. Prepare the Pen for Storage

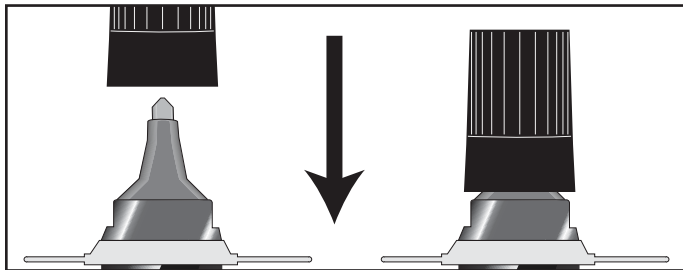

Always immediately replace the cap when not in use to avoid evaporation and contamination.


## 6. Drying

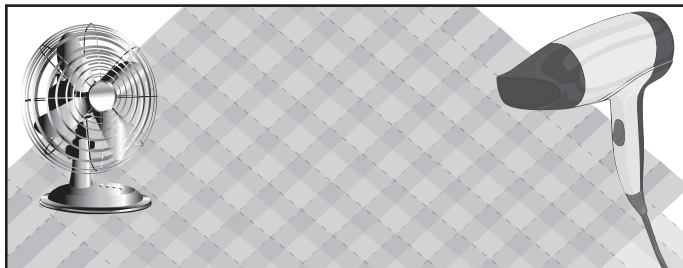

Allow the Alodine Touch-N-Prep® coating to air dry thoroughly.


## Part II: Sealer Application

### 1. Prime Applicator Tip

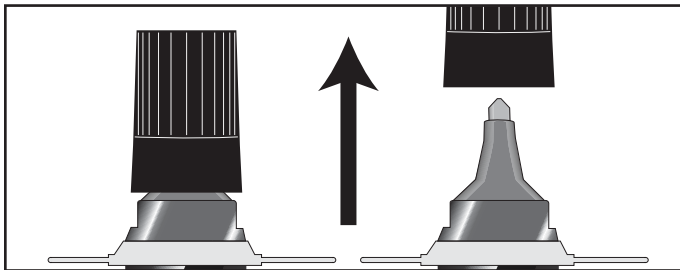


To activate, hold the pen upright and pop off the cap. Do not twist or turn to remove the cap, since this may result in the pen leaking. Hold the pen tip down onto a clean surface to begin the flow of solution to the tip.

### 2. Application

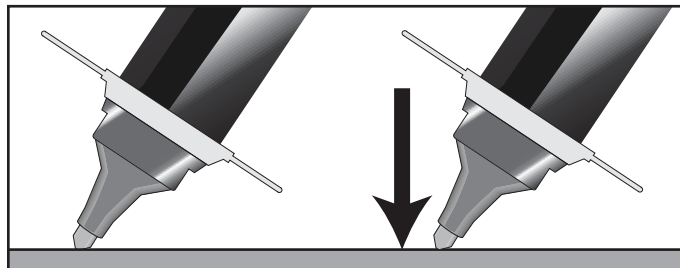


Press the pen tip down on the surface until solution fills the pen tip. Apply the sealer pen solution to the metal surface with firm, smooth, even strokes, covering all of the edges. Overlap each stroke and allow to dry.

### 3. Prepare the Pen for Storage

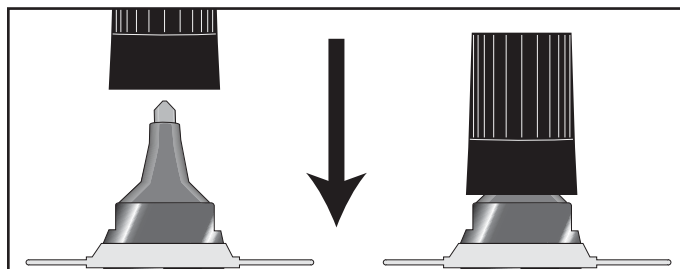

Always immediately replace the cap when not in use to avoid evaporation and contamination.

### 4. Drying

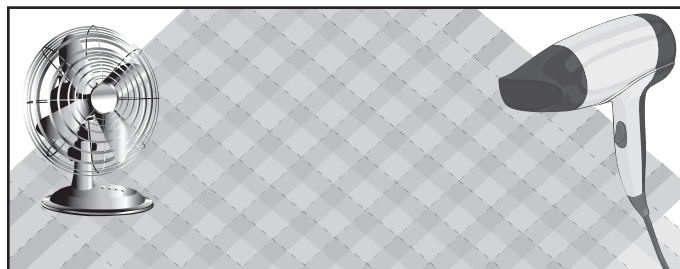

Allow the sealer pen coating to air dry thoroughly.



# NORD GEAR CORPORATION



DRIVESYSTEMS

CONDITIONS OF SALE

WWW.NORD.COM

## 1. CONTRACT

Any contract between Nord Gear Corporation, hereinafter designated as Seller, and the Buyer is subject to the terms and conditions of sale hereinafter set forth. Any deviation from such terms and conditions must be specifically set forth in writing and consented to by Seller. Accordingly, the Buyer and Seller acknowledge and agree that the terms and conditions set forth below and on the face hereof shall govern Buyer's purchase of the goods described on the face hereof and shall take precedence over and represents the final agreement between Buyer and Seller, notwithstanding any inconsistent, contradictory or other prior or further conditions contained in any oral or written request or purchase order issued by Buyer or any other document furnished by Buyer in connection with its purchase of the Goods, regardless of whether such document or documents are exchanged simultaneously with this Invoice or prior or subsequent thereto. Any additional or different terms or conditions which may appear in any communication, oral or written, from Seller, its officers, employees, agents or representatives, are hereby expressly rejected and shall not be effective or binding upon the Seller, unless specifically hereafter agreed to in writing by Seller and no such additional or different terms or conditions in any document submitted to Seller by Buyer shall become part of the contract between Buyer and Seller, unless such written acceptance by Seller specifically recognizes and assents to their inclusion. Any objection by Buyer to the terms and conditions hereof shall be ineffective unless Seller is advised in writing thereof within two (2) days of the date of this Invoice.

## 2. CONFIRMATION

An order shall be deemed accepted only when duly confirmed by Seller, at Nord Gear Corporation's home office in Waukegan, Wisconsin, and upon such confirmation the order shall become a contract binding upon the parties hereto, their successors and assigns.

## 3. PRICES

Prices shown are list prices and may be subject to applicable discounts. Unless otherwise agreed upon in writing, prices are FOB factory Waukegan, Wisconsin. Prices and discounts are subject to change without notice until order is accepted. Seller's prices do not include cost of any inspection permits required.

## 4. LIMITED WARRANTY

Seller hereby warrants that the goods sold hereunder shall be free from material defects in material and workmanship, if properly installed and used under normal operating conditions, for a period of twelve (12) months from the date of installation or eighteen (18) months from date of shipment, whichever comes first (the "Warranty Period"). With respect to gears and housings only, the Warranty Period is extended to thirty-six (36) months from the date of invoice or twenty-four (24) months from the date of installation, whichever comes first. The limited warranty shall not apply to any components or parts which are subject to normal operational wear and tear, including, but not limited to, belts and traction discs. Should any goods fail to comply with the foregoing limited warranty, Buyer shall provide written notice to Seller of the claimed defect and all relevant details within thirty (30) days of Buyer's discovery of the claimed defect. Buyer shall return the allegedly defective goods to Seller at its facilities in Waukegan, Wisconsin or to such other location within the USA as may be designated by Seller in its sole discretion, with all shipping and transportation charges prepaid by Buyer. Seller shall then examine the returned goods to determine if the claimed defect is covered by the limited warranty. If the claimed defect is covered by the limited warranty, Buyer's sole and exclusive remedy shall be to have Seller repair or replace, at Seller's option, the defective goods or components in accordance with the terms of this limited warranty. Seller shall have a commercially reasonable time to make such repairs or replacements and may use new or reconditioned components. Any repair or replacement shall not extend the Warranty Period unless otherwise agreed by Seller. Buyer shall pay all shipping costs and any costs of removal and re-installation of goods or components.

The foregoing limited warranty shall not apply with respect to any goods or components (i) which are not installed, used, operated, serviced or maintained in accordance with manufacturer's instructions or which are otherwise not properly installed, used, operated, serviced or maintained, or (ii) which are misused, neglected, damaged, altered, repaired, reconfigured or incorrectly wired. Seller makes no representations as to the specifications, capacity or performance of the goods sold hereunder, except as may be specifically set forth in the invoice's written specifications, and any such representations are expressly conditioned upon the accuracy and completeness of the data and information furnished by the buyer and upon the goods being properly installed, used, serviced and maintained by Buyer. Any description or model of the goods is for identification or illustrative purposes only and shall not be deemed to create any warranty, express or implied.

THE FOREGOING LIMITED WARRANTY SHALL EXTEND SOLELY TO BUYER AND NOT TO ANY OTHER PARTY. THE FOREGOING LIMITED WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED. SELLER HEREBY EXCLUDES AND DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IF BUYER SHALL FAIL TO PAY WHEN DUE ANY PORTION OF THE PURCHASE PRICE OR ANY OTHER PAYMENT REQUIRED FROM BUYER TO SELLER UNDER THIS CONTRACT, ALL WARRANTIES AND REMEDIES SET FORTH HEREIN SHALL BE DEEMED NULL AND VOID, AB INITIO. THE PARTIES ACKNOWLEDGE AND AGREE THAT THE EXCLUSIVE REMEDY UNDER THE FOREGOING LIMITED WARRANTY SHALL NOT HAVE FAILED OF ITS ESSENTIAL PURPOSE (AS THAT TERM IS USED IN THE UNIFORM COMMERCIAL CODE) PROVIDED THAT SELLER REMAINS WILLING TO REPAIR OR REPLACE DEFECTIVE GOODS WITHIN A COMMERCIALLY REASONABLE TIME. BUYER SPECIFICALLY ACKNOWLEDGES AND AGREES THAT THE PRICE CHARGED BY SELLER FOR THE GOODS IS BASED UPON THE LIMITATIONS OF SELLER'S WARRANTY OBLIGATIONS AND OTHER LIABILITIES AS SET FORTH HEREIN.

LIMITATION OF LIABILITY. NOTWITHSTANDING ANY OTHER PROVISION HEREOF, IN NO EVENT SHALL SELLER BE LIABLE TO BUYER OR TO ANY OTHER PARTY FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, LOST PROFITS, OR FOR ANY LOSSES, CLAIMS OR DAMAGES RELATING TO OR ARISING FROM THE USE OR OPERATION OF THE GOODS, AND IN NO EVENT SHALL ANY CLAIM OR RECOVERY OF ANY KIND EXCEED THE PURCHASE PRICE OF THE GOODS IDENTIFIED IN THE RELATED INVOICE.

## 5. SHORTAGE AND NONCONFORMITY

Any claim of shortage or that the goods do not conform with the specifications of the order or model must be made in writing within ten (10) days after delivery of the goods (as to which such claim is made) to Buyer or its nominees, but in no event shall the claim be later than within the time limit provided by the carrier or insurance company, otherwise such claim shall be deemed waived. Buyer may not return any goods claimed to be in non-conformity without Seller's prior written authorization. Goods returned without permission will not be accepted, including for credit, and will be returned to Buyer, F.O.B. Seller's plant. Any claim based on the receipt of damaged Goods must be filed with the carrier which delivered the goods. The samples, measurements, dimensions and weights contained in the Seller's catalogs, sales manuals, photographs and drawings constitute only an approximate guide. The Seller reserves the right to make any change which the Seller, in its absolute discretion, considers necessary. While the goods will be delivered principally according to specifications or standards or quantities agreed upon, insignificant deviations or insignificant changes in construction are permissible. The same applies to partial deliveries. In the event that Buyer has a verified claim of shortage or nonconformity of the goods to the specifications of the order or the model, and if such claim has been submitted within the required time limit as set forth above, the Seller shall, at its own expense, make up for the shortage of the goods, or replace or repair the goods, as the case may be, but in no event shall Seller be or become liable to Buyer or to any other person or persons for any loss in damage, direct or indirect, arising out of or caused by such incidents or for the loss of profits, business or good will. The liability of the Seller to Buyer, if any hereunder, for breach of warranty, contract, negligence or otherwise, shall in no event exceed the amount of the purchase price of the goods sold with respect to which any damages are claimed. Shipping dates are estimates unless parties expressly agree on time of the essence.

## 6. FORCE MAJEURE

The obligation of the Seller shall be modified or excused, as the case may be, for reasons of Acts of God, war, governmental law regulations, strikes or lock-outs, fire, breakdown of machinery, whether in its own business enterprise, or if for any other cause beyond Seller's control, the goods cannot be delivered or their delivery becomes delayed in whole or in part. In the above instances time for delivery shall be extended for the period of the delay caused, with the proviso, however, that either party may cancel in writing the undelivered portion of the order or contract if the delay exceeds six (6) months from the delivery date originally confirmed by Seller. In no event shall Seller become liable in the aforesaid instances to Buyer or any third party for consequential damages or business loss.

## 7. SHIPMENT AS UNIT

Each shipment by Seller shall be treated as a separate and distinct unit with respect, but only with respect to forwarding, terms of payment, and the making of claims by the Buyer: provided, however, that if the Buyer defaults in the payment of any obligation to Seller or any installments thereof, under any agreement between Buyer and Seller, or if Buyer refuses to accept any goods when tendered for delivery, the Seller may, on fifteen (15) days written notice to the Buyer, without prejudice to Seller's other lawful remedies, either defer further performance until the defaulted payments are made in full, or make future deliveries for cash in advance only, or treat the entire contract or contracts with Buyer as breached by the Buyer and pursue its remedies for breach.

## 8. BUYER'S REFUSAL OF DELIVERY

If Buyer refuses to accept delivery of any goods tendered for delivery, then Seller, without prejudice to Seller's other lawful remedies, may either store or cause such goods to be stored in a warehouse, for buyer's account and at Buyer's cost, risk and expense, or sell such goods (without notice) to any purchaser at public or private sale, and hold the Buyer liable for any difference between (a) the contract price of the goods, and (b) the price at which goods are resold less the costs and expense of such resale including brokerage commissions, or restocking charges.

## 9. GOODS IN TRANSIT

If prior to delivery or while the goods are in transit, Buyer or Seller becomes bankrupt or insolvent, or any petition in bankruptcy or for the reorganization or for a state court receivership is filed against Buyer or Seller, as the case may be, then the other party hereto may forthwith terminate this contract by giving written notice of such termination. Such termination shall not affect any claim for damages available to the Buyer, provided that if Buyer is then indebted to Seller, the amount of any such damage claim shall be abated to the extent that the indebtedness of Buyer to Seller, as actually paid in money, is abated by any order of judgement entered or any plan adopted in any bankruptcy, reorganization, receivership, or similar proceeding. Such termination shall not prejudice the Seller's rights to any amounts then due under the contract. If Buyer becomes bankrupt or insolvent or any petition in bankruptcy or for reorganizing or if a state court receivership is filed against Buyer, then, at its option Seller may take possession of any goods theretofore sold to Buyer, in connection with which the full purchase price has not been paid, analogous to the terms and provisions set forth in Paragraphs 11 and 12 hereinafter.

## 10. DELIVERY

(a) Any indicated dates of delivery are approximate only, but NORD Gear will attempt to meet them whenever possible. (b) NORD Gear will not be liable for any penalty clauses contained in any specifications or order submitted unless agreed to in writing by an authorized officer of NORD Gear Corporation. (c) Unless otherwise agreed, delivery of the goods to any carrier shall constitute delivery to the Buyer, and thereafter the risk of loss or damage to the goods shall be upon the Buyer. (d) If the Buyer does not give delivery instructions to the Seller at least (10) days prior to the delivery date ex factory confirmed by the Seller, the Seller may deliver the goods to a carrier of its own choosing, at Buyer's cost and risk, or, at Seller's option, may store the goods on the pier or any warehouse, at Buyer's cost and risk. Any purchase price in such event becomes due and payable within ten (10) days of such storage.

## 11. PAYMENT OF PURCHASE PRICE

Time of payment is of the essence under the contract. Unless otherwise provided, terms of payment are 30 days net from the date of invoice with a 1% discount if paid within 10 days of date of invoice. Upon default in any of the terms of the contract, or failure to comply with any of the conditions thereof, or upon seizure of the property under execution or other legal process, or if the Buyer becomes bankrupt or insolvent, or any petition for reorganization or for a state court receivership is filed against Buyer, or if the Buyer makes any assignment for the benefit of its creditors or otherwise sells, encumbers or disposes of the goods, or if for any other reason the Seller should deem itself insecure, the full amount of the purchase price then remaining unpaid shall at once become due and payable at the option of the Seller.

## 12. BUYER'S DEFAULT

Upon the Buyer's default, the Seller may dispose of the merchandise in any manner that it deems fit and, if it desires to resell same, may do so at private or public sale, with or without notice, and with or without the property being at the place of sale, subject, however, to applicable laws. The Seller or its assigns shall have the right to bid at such sale and may become the purchaser of the property. The proceeds of the sale shall first be applied to the expenses incurred in retaking, repairing, storing and selling the goods, reasonable attorney's fees included, and then shall be applied to the payment of the balance due under the contract. Any surplus amount shall be paid to the Buyer. If a deficiency results after the resale, the Buyer agrees to pay such forthwith, together with reasonable attorney's fees, for the recovery of the goods incurred by the Seller. If upon the Buyer's default, the Seller elects not to resell any goods which it may repossess, then the cost of repossession, including reasonable attorney's fees, shall forthwith be due and payable from Buyer to Seller. Buyer agrees to pay all reasonable costs and reasonable attorney's fees incurred by Seller in enforcing Seller's rights against Buyer, including Seller's right to payment of the purchase price of the goods and Buyer's payment of all other amounts owing to Seller required under this Invoice and Conditions of Sale.

## 13. SECURITY INTEREST AND TITLE

In states and localities which are governed by the Uniform Commercial Code, this contract shall serve as security agreement, reserving in Seller a security interest until full payment of purchase price. The provisions of the Uniform Commercial Code regarding security interest shall have preference and apply if inconsistent with other terms of the conditions of sale. In states and localities where the Uniform Commercial Code does not apply, title to the goods shall remain in the Seller or its assigns until full payment of the purchase price. Buyer agrees to execute forthwith any and all documents in such a way and form as Seller may need for filing or recording the security interest under the Uniform Commercial Code with the proper registers or offices, or for filing or recording the conditional sales contract.

## 14. SALES AND USE TAX

Buyer agrees to bear and pay any sales or use tax in connection with the purchase herein, and to hold the Seller harmless from payment. At the option the Seller, Buyer shall give evidence of payment or of exemption certificate.

## 15. INSURANCE

The Buyer shall keep the goods insured against damage by fire, water or other casualty as required by Seller, with a company acceptable to Seller, with loss payable to Seller for the total purchase price until the Seller is fully paid. Seller, if it so elects, may place said insurance at Buyer's expense; Seller may cancel such insurance at any time and without notice and may receive the return premium, if any.

## 16. MODIFICATION BY SELLER

Any contract may be assigned or transferred by the Seller, or the time for the making of any payment due by Buyer may be extended by Seller without derogation of any of the rights of the Seller or its assigns. Waiver by any party of any default shall not be deemed a waiver of any subsequent default.

## 17. RETURNED GOODS

No goods will be accepted for return unless authorized in writing by Seller. In all cases, transportation and restocking charges will be borne by Buyer.

## 18. PACKING

The Buyer will be charged for export packaging or other special packing desired. Cost for cartage to ship or transfer express will be added to the invoice. No credit will be allowed if no packing is required.

## 19. CHANGES/CANCELLATION

NORD Gear will not accept changes in specifications to a confirmed order unless such changes are requested in writing and confirmed back in writing. In addition, the purchaser must to agree to any additional charges that may arise from the change. Placing orders on hold or cancellation of orders require Seller's written approval, and are subject to cancellation and/or restocking charges.

## 20. BUYER'S RESPONSIBILITY AS TO MAINTENANCE

Buyer shall use and shall require its employees and agents to use all safety devices and guards and shall maintain the same in proper working order. Buyer shall use and require its employees and agents to use safe operation procedures in operating the equipment and shall further obey and have its employees and agents obey safety instructions given by Seller. If Buyer fails to meet the obligations herein, Buyer agrees to defend, indemnify and save Seller harmless from any liability or obligation with regard to any personal injuries or property damages directly or indirectly connected with the operation of the equipment. Buyer further agrees to notify Seller promptly and in any event not later than ten (10) days after notice or knowledge of any accident or malfunction involving Seller's equipment which has caused personal injury or property damages and to cooperate fully with Seller in investigating and determining the causes of such accident and malfunction. In the event that Buyer fails to give such notice to Seller or to cooperate with Seller, Buyer shall be obligated to defend, indemnify and save Seller harmless from any such claims arising from such accident.

## 21. MISCELLANEOUS PROVISIONS

(a) If for any reason a provision of a contract is legally invalid, then in such event the rest of the contract shall remain in full force and effect, except that the parties shall try to replace such invalid provision closest to their original mutual intentions. (b) This Invoice and these Conditions of Sale constitute the entire agreement between the parties regarding the subject matter hereof and supercedes all prior agreements, understandings and statements, whether oral or written, regarding such subject matter. No modification to, change in or departure from, the provisions of this Invoice and Conditions of Sale shall be valid or binding on Seller, unless approved in writing by Seller. No course of dealing or usage of trade shall be applicable unless expressly incorporated into this Invoice and Conditions of Sale. Any amendments to any contract or contracts between the parties shall be valid only upon the written consent of both parties.

## 22. NON ASSIGNMENT BY BUYER

Contract or contracts may not be assigned by the Buyer without prior written consent of the Seller.

## 23. APPLICABLE LAW AND VENUE

All contracts and their interpretation are governed by the applicable, substantive laws of the State of Wisconsin. Any litigation brought by the Buyer regarding this Invoice or goods purchased hereunder may only be brought in the Circuit Court for Dane County, Wisconsin.

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673

09.29.14

Nord Gear Company Terms 09/14

www.nord.com/docs



DRIVESYSTEMS

# NORD GEAR LIMITED

## TERMS & CONDITIONS OF SALE



WWW.NORD.COM

### 1. CONTRACT

Any contract between Nord Gear Limited, hereinafter designated as "Seller", and the party or parties accepting these terms and conditions of sale and any agent, officer, servant, employee or subcontractor of such party or parties, hereinafter designated as "Buyer", is subject to the terms and conditions of sale hereinafter set forth. Any deviation from such terms and conditions must be specifically set forth in writing and consented to by Seller.

### 2. CONFIRMATION

An order shall be deemed accepted only when duly confirmed by Seller, at Nord Gear Limited's home office in Brampton, Ontario, and upon such confirmation the orders shall become a contract binding upon the parties hereto, their successors and assigns.

### 3. PRICES

Prices shown are list prices and may be subject to applicable discounts. Unless otherwise agreed upon in writing, prices are FOB factory Brampton, Ontario. Prices and discounts are subject to change without notice until the order is accepted. Seller's prices do not include cost of any inspection permits required.

### 4. LIMITED WARRANTY

Seller warrants the goods sold hereunder to be free from defects in material and workmanship under normal use and service not arising from misuse, negligence, or accident, including but not limited to the use, installation, and transportation of the goods by Buyer, its agents, servants, employees, or by carriers. This warranty shall pertain to any part or parts of any goods to which Buyer or its assigns has within one year from date of delivery given written notice of claimed defects to Seller. Buyer shall be required to furnish Seller with details of such defects and this warranty shall be effective as to such goods which Seller's examination shall disclose to its satisfaction to have been defective and which at Seller's option shall promptly thereafter be returned to Seller or its nominees. EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE, SELLER HAS MADE NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, AS TO THE GOODS SOLD HEREUNDER, INCLUDING, BUT NOT LIMITED TO THEIR MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. ANY DESCRIPTION OR MODEL OF THE GOODS IS FOR IDENTIFICATION OR ILLUSTRATIVE PURPOSES ONLY AND SHALL NOT BE DEEMED TO CREATE AN EXPRESS WARRANTY. The Buyer's exclusive remedy for claims arising from defective or nonconforming goods shall be limited to the repair or replacement thereof at the Seller's sole option. THE SELLER SHALL NOT BE RESPONSIBLE OR LIABLE FOR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE SALE, DELIVERY, USE, PERFORMANCE, OR SERVICE OF THE GOODS SOLD UNDER THIS AGREEMENT. SELLER SHALL NOT BE LIABLE FOR ANY LOST PROFITS OR FOR ANY CLAIM OR DEMAND AGAINST SELLER BY ANY PARTY. IN NO EVENT WILL SELLER BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, EVEN IF SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SELLER'S AGGREGATE LIABILITY FOR DAMAGES UNDER THIS AGREEMENT, WHETHER ARISING FROM OR BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, TORT OR OTHER CAUSE OF ACTION, SHALL IN NO CASE EXCEED THE PURCHASE PRICE THAT BUYER PAYS FOR THE PARTICULAR GOODS INVOLVED. Seller shall in no event be liable to any person or firm (including any assignee or Buyer) except Buyer and its successors. Unless specifically authorized by Seller in writing, Seller shall not become responsible for any repair work done by Buyer or any other party on any goods sold. Any costs of the return of such goods to Seller shall be borne by Buyer. Goods sold but not manufactured by Seller are being warranted as to defects in material and workmanship consistent with the limited warranty policy of the original manufacturer of the goods and if there is not such a limited warranty policy, the warranty shall be limited to the provisions of Article 4 herein. Standards for the operating characteristics of the gearboxes and the gear motors are in conformity with Seller's tests. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. SELLER DOES NOT ASSUME, NOR DOES IT AUTHORIZE ANY PERSON TO ASSUME, ON ITS BEHALF, ANY OTHER OBLIGATION OR LIABILITY.

### 5. SHORTAGE AND NONCONFORMITY

Any claim of shortage or that the goods do not conform with the specifications of the order or model must be made in writing within ten (10) days after delivery of the goods (as to which such claim is made) to Buyer or its nominees, but in no event shall the claim be later than within the time limit provided by the carrier or insurance company, otherwise such claim shall be deemed waived. The samples, measurements, dimensions and weights contained in Seller's catalogs, sales manuals, photographs and drawings constitute only an approximate guide. Seller reserves the right to make any changes which Seller, in its absolute discretion, considers necessary. While the goods will be delivered principally according to specifications of standards or quantities agreed upon, insignificant deviations or insignificant changes in construction are permissible. The same applies to partial deliveries. In the event that Buyer has a verified claim of shortage or nonconformity of the goods to the specifications of the order or the model, and if such claim has been submitted within the required time limit as set forth above, Seller shall, at its own expense, make up for the shortage of the goods, or replace or repair the goods, as the cause may be, but in no event shall Seller be or become liable to Buyer or to any other person or persons for any loss in damage, direct or indirect, arising out of or caused by such incidents or for the loss of profits, business of good will. Shipping dates are estimates unless parties expressly agree on time of the essence.

### 6. FORCE MAJEURE

The obligation of Seller shall be modified or excused, as the case may be, for reasons of Acts of God, war, governmental law regulations, strikes or lock-outs, fire, breakdown of machinery, whether in its own business enterprise, or if for any other cause beyond Seller's control, the goods cannot be delivered or their delivery becomes delayed in whole or in part. In the above instances time for delivery shall be extended for the period of the delay caused, with the proviso, however, that either party may cancel in writing the undelivered portion of the order of contract if the delay exceeds six (6) months from the delivery date originally confirmed by Seller. In no event shall Seller become liable in the aforesaid instances to Buyer or any third party for consequential damages or business loss.

### 7. SHIPMENT AS UNIT

Each shipment by Seller shall be treated as a separate and distinct unit with respect, but only with respect to forwarding, terms of payment, and the making of claims by Buyer; provided, however, that if Buyer defaults in the payment of any obligation to Seller or any installments thereof, under any agreement between Buyer and Seller, or if Buyer refuses to accept any goods when tendered for delivery, Seller may, on fifteen (15) days written notice to Buyer, without prejudice to Seller's other lawful remedies, either defer further performance until the defaulted payments are made in full, or make future deliveries for cash in advance only, or to treat the entire contract or contracts with Buyer as breached by Buyer and pursue its remedies for breach.

### 8. BUYER'S REFUSAL OF DELIVERY

If Buyer refuses to accept delivery of any goods tendered for delivery, then Seller, without prejudice to Seller's other lawful remedies, may either store or cause such goods to be stored in a warehouse, for Buyer's account and at Buyer's cost, risk and expense, or sell such goods (without notice) to any purchaser at public or private sale, and hold Buyer liable for any difference between (A) the contract price of the goods, and (B) the price at which goods are resold less the costs and expense of such resale including brokerage commissions, or restocking charges.

### 9. GOODS IN TRANSIT

If prior to delivery or while the goods are in transit, Buyer or Seller becomes bankrupt or insolvent, or any petition in bankruptcy or for the reorganization or for appointment of a receiver is filed against Buyer or Seller, as the case may be, then the other party hereto may forthwith terminate this contract by giving written notice of such termination. Such termination shall not affect any claim for damages available to Buyer, to Seller, as actually paid in money, is abated by any order of judgment entered or any plan adopted in any bankruptcy, reorganization, receivership, or similar proceeding. Such termination shall not prejudice Seller's rights to any amounts then due under the contract. If Buyer becomes bankrupt or insolvent or any petition in bankruptcy or for reorganization or if a state court receivership is filed against Buyer, then, at its option, Seller may take possession of any goods theretofore sold or delivered, in connection with which the full purchase price has not been paid, analogous to the terms and provisions set forth in Paragraphs 11 and 12 hereinafter.

### 10. DELIVERY

(A) Unless otherwise agreed, delivery of the goods to any carrier shall constitute delivery to Buyer, and thereafter the risk of loss or damage to the goods shall be upon Buyer. (B) If Buyer does not give delivery instructions to Seller at least ten (10) days prior to the delivery date ex factory confirmed by Seller, Seller may deliver the goods to a carrier of its own choosing, at Buyer's cost and risk, or, at Seller's option may store the goods on the pier or on any warehouse at Buyer's cost and risk. Any purchase price in such event becomes due and payable within ten (10) days of such storage.

### 11. PAYMENT OF PURCHASE PRICE

Time of payment is of the essence under the contract. Upon default in any of the terms of the contract, or failure to comply with any of the conditions thereof, or upon seizure of the property under execution or other legal process, or if Buyer becomes bankrupt or insolvent, or any petitions for reorganization or for appointment of a receiver is filed against Buyer, or if Buyer makes any assignment for the benefit of its creditors or otherwise sells, encumbers or disposes of the goods, or if for any other reason Seller should deem itself insecure, the full amount of the purchase price then remaining unpaid shall at once become due and payable at the option of Seller. Interest on the delinquent payment from the due date thereof until paid shall be at a rate of two (2%) percent per month.

### 12. BUYER'S DEFAULT

Upon Buyer's default, Seller may dispose of the merchandise in any manner that it deems fit and, if it desires to resell same, may do so at private or public sale, with or without notice, and with or without the property being at the place of sale, subject, however, to applicable laws. Seller or its assigns shall have the right to bid at such sale and may become the purchaser of the property. The proceeds of the sale shall first be applied to the expenses incurred in retaking, repairing, storing and selling the goods; reasonable solicitor's fees included, and then shall be applied to the payment of the balance due under the contract. Any surplus amount shall be paid to Buyer. If a deficiency results after the sale, Buyer agrees to pay such forthwith, together with reasonable solicitor's fees, for the recovery of the goods incurred by Seller. If upon Buyer's default, Seller elects not to resell any goods which it may repossess, then the cost of repossession, including reasonable solicitor's fees, shall forthwith be due and payable from Buyer to Seller.

### 13. SECURITY INTEREST AND TITLE

In provinces which are governed by a Personal Property Security Act, this contract shall serve as a security agreement, reserving in Seller a security interest until full payment of the purchase price. The provisions of the Personal Property Security Act regarding security interest shall have preference and apply if inconsistent with other terms of the conditions of sale herein. In provinces where a Personal Property Security Act does not apply, title to the goods shall remain in the Seller or its assigns until full payment of the purchase price. Buyer agrees to execute forthwith any and all documents in such a way and form as Seller may need for filing or recording the security interest under a Personal Property Security Act with the proper registers or offices, or for filing or recording the Conditional Sales Contract herein.

### 14. SALES AND USE TAX

Seller's prices do not include sales, use, excise or other taxes payable to any governmental authority in respect of the sale of Seller's goods. Buyer shall pay, in addition to Seller's price, the amount of any such taxes or shall reimburse Seller for the amount thereof that Seller may be required to pay. At the option of Seller, Buyer shall give evidence of payment or of exemption certificate.

### 15. INSURANCE

Buyer shall keep the goods insured against damage by fire, water or other casualty as required by Seller, with a company acceptable to Seller, with loss payable to Seller for the total purchase price until Seller is fully paid. Seller, if it so elects, may place said insurance at Buyer's expense; Seller may cancel such insurance at any time and without notice and may receive the return premium, if any.

### 16. MODIFICATION BY SELLER

Any contract may be assigned or transferred by Seller, or the time for the making of any payment due by Buyer may be extended by Seller without derogation of any of the rights of Seller or its assigns. Waiver by any party of any default shall not be deemed a waiver of any subsequent default.

### 17. RETURNED GOODS

No goods will be accepted for return unless authorized in writing by Seller. In all cases, transportation and restocking charges will be borne by Buyer.

### 18. PACKING

Seller does not charge for standard packaging for domestic shipment. Buyer will be charged, however, for export packaging or other special packing desired. Cost for cartage to ship or transfer express will be added to the invoice. No credit will be allowed if no packing is required.

### 19. EXPORT ORDER

Export orders are to be accompanied by a confirmed irrevocable Letter of Credit in Seller's favor, in Canadian currency, with an accredited Canadian bank, subject to Seller's draft, with shipping documents attached.

### 20. CANCELLATION

Placing orders on hold or cancellation of orders require Seller's written approval, and are subject to cancellation and/or restocking charges.

### 21. BUYER'S RESPONSIBILITY AS TO MAINTENANCE

Buyer shall use and shall require its employees and agents to use all safety devices and guards and shall maintain the same in proper working order. Buyer shall use and require its employees and agents to use safe operating procedures in operating the equipment and shall further obey and have its employees and agents obey safety instructions given by Seller. If Buyer fails to meet the obligations herein, Buyer agrees to indemnify and save Seller harmless from any liability or obligation with regard to any personal injuries or property damages directly or indirectly connected with the operation of the equipment. Buyer further agrees to notify Seller promptly and in any event not later than ten (10) days after notice or knowledge of any accident or malfunction involving Seller's equipment which has caused personal injury or property damages and to cooperate fully with Seller in investigating and determining the causes of such accident and malfunction. In the event that Buyer fails to give such notice to Seller or to cooperate with Seller, Buyer shall be obligated to indemnify and save Seller harmless from any such claims arising from such accident.

### 22. MISCELLANEOUS PROVISIONS

(A) If for any reason a provision of a contract is legally invalid, then in such event the rest of the contract shall remain in full force and affect, except that the parties shall try to replace such invalid provision with a provision closest to their original mutual intentions. (B) Any amendments to any contract or contracts require the consent in writing by both parties. Headings in this document are for ease of reference only.

### 23. NON ASSIGNMENT BY BUYER

Contract or contracts may not be assigned by Buyer without prior written consent of Seller.

### 24. APPLICABLE LAW

This agreement shall be governed by the laws of the Province of Ontario and the applicable laws of Canada. Buyer and Seller agree that any judicial proceeding with respect to this agreement must be brought and maintained in the City of Toronto, in the Province of Ontario.

### 25.

This instrument sets forth the entire understanding and agreement of the parties hereto in respect of the subject matter hereof, and all prior undertaking between the parties hereto, together with all representations and obligations of such parties in respect of such subject matter, shall be superseded by and merged into this instrument.

### 26.

The provisions of this agreement shall bind and ensure to the benefit of the parties hereto and their respective heirs, executors, administrators, successors and (subject to any restrictions or assignment herein above set forth) assigns, as the case may be.

### 27.

The parties acknowledge that they have requested this document and all notices or other documents relating thereto be drafted in the English language.

Les parties reconnaissent qu'ils ont requis que ce contrat et tous les avis ou autres documents qui s'y rapportent soient rédigés en langue anglaise.

\*Terms and Conditions in French available upon request.\*

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

09.29.14

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673

www.nord.com/806

# Product Overview

We can match our NORDAC AC vector drives with our Inverter/Vector Duty Motors and UNICASE™ Speed Reducers to provide a total AC Motor Drive solution from one trusted source.

## UNICASE™ SPEED REDUCERS



### HELICAL IN-LINE

- Foot or Flange Mount
- Torque up to 205,000 lb-in
- Gear ratios – 1.82:1 to over 300,000:1



### NORDBLOC® HELICAL IN-LINE

- Foot or Flange Mount
- Torque up to 26,550 lb-in
- Gear ratios – 1.88:1 to over 370:1



### PARALLEL HELICAL CLINCHER™

- Shaft, Flange or Foot Mount
- Torque up to 797,000 lb-in
- Gear ratios – 4.26:1 to over 300,000:1



### RIGHT ANGLE HELICAL-BEVEL 2-STAGE

- Foot, Flange or Shaft Mount
- Torque up to 5,840 lb-in
- Gear ratios – 4.1:1 to 72:1



### RIGHT ANGLE HELICAL-BEVEL

- Foot, Flange or Shaft Mount
- Torque up to 283,000 lb-in
- Gear ratios – 8.04:1 to over 300,000:1



### RIGHT ANGLE HELICAL-WORM

- Foot, Flange or Shaft Mount
- Torque up to 27,585 lb-in
- Gear ratios – 4.40:1 to over 300,000:1



### MINICASE™ RIGHT ANGLE WORM

- Foot, Flange or Shaft Mount
- Torque up to 3,540 lb-in
- Gear ratios – 5:1 to 500:1



### FLEXBLOC™ WORM

- Modular bolt-on options
- Torque up to 4,683 lb-in
- Gear ratios – 5:1 to 3,000:1

## HIGH PERFORMANCE MOTORS & BRAKEMOTORS



### INVERTER/VECTOR DUTY

- Standard or Energy Efficient
- Integral, NEMA or Metric IEC
- 1/6 to 250 hp

## NORDAC AC VECTOR DRIVES



### TRIO SK300E

- Motor or remote mounted
- IP55 – washdown
- 380-460V, 3-phase, to 5hp
- 200-240V, 3-phase, to 3hp



### SK500/520/530E

- Compact, high performance
- 380-480V, 3-phase, to 10hp
- 200-240V, 3-phase, to 5hp
- 200-240V, 1-phase, to 3hp
- 110-120V, 1-phase, to 1.5hp



### SK700E

- Flexible high performance
- 380-460V, 3-phase, to 200hp



DRIVESYSTEMS

[www.nord.com](http://www.nord.com)

**WEST**  
Corona, CA (Los Angeles)  
Phone: 608.849.0190

**MIDWEST**  
Waunakee, WI (Madison)  
Phone: 608.849.7300

**EAST**  
Charlotte, NC  
Phone: 608.849.0140

**NORD Gear Corporation**  
National Customer Service Toll-Free: 888.314.6673  
[info.us@nord.com](mailto:info.us@nord.com)

**NORD Gear Limited**  
Toll-Free in Canada: 800.668.4378  
[info.ca@nord.com](mailto:info.ca@nord.com)

**CANADA**  
Brampton, ON (Toronto)  
Phone: 905.796.3606





# Installation, Operation and Maintenance Instructions

for AC Induction Motors  
56- 6800 Frames (NEMA)  
63 – 280 Frames (IEC)



*A REGAL-BELOIT COMPANY*

## **MARATHON ELECTRIC**

Contact Motor Customer Service at:

Phone: (715) 675-3311

[www.marathonelectric.com](http://www.marathonelectric.com)

**INSTALLER: PLEASE LEAVE THIS MANUAL FOR THE OWNER'S USE**  
**OWNER: READ AND SAVE THESE INSTRUCTIONS**

## **SAFETY INSTRUCTIONS**

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **WARNING**

Before installing, using, or servicing this product, carefully read and fully understand the instructions including all warnings, cautions, & safety notice statements. To reduce risk of personal injury, death and/or property damage, follow all instructions for proper motor installation, operation and maintenance.

These instructions are not intended as a complete listing of all details for installation, operation, and maintenance. If you have any questions concerning any of the procedures, STOP, and call the appropriate Regal-Beloit motor company.

## **Table of Contents**

### **1.0 INSTALLER / OWNER / OPERATOR RESPONSIBILITY**

- 1.1 Electrical Safety
- 1.2 Mechanical Safety
- 1.3 Environmental Safety

### **2.0 RECEIVING & INSPECTION**

- 2.1 Initial Inspection
  - 2.1.1 Packing List & Inspect
  - 2.1.2 Turn Motor Shaft
  - 2.1.3 Check Nameplate

#### **2.2 Handling**

- 2.2.1 Correct Lifting Angles

#### **2.3 Storage**

- 2.3.1 Bearing Lubrication
- 2.3.2 Shaft Rotation
- 2.3.3 Damp or Humid Storage Locations

### **3.0 INSTALLATION AND OPERATION**

#### **3.1 Location**

- 3.1.1 Selecting a Location
- 3.1.2 Ambient Temperature Limits
- 3.1.3 Construction Selection per Location
  - 3.1.3.1 Dripproof
  - 3.1.3.2 Totally Enclosed
  - 3.1.3.3 Hazardous Locations Motors

#### **3.2 Mounting Motor**

- 3.2.1 Rigid Base (Footed)
- 3.2.2 Rigid Base Hole Selection -6 or 8 Hole Bases
- 3.2.3 Vertical

#### **3.3 Application Assembly to Motor**

- 3.3.1 General: Proper Alignment

#### **3.3.2 Direct Coupling**

#### **3.3.3 Direct Connected**

#### **3.3.4 Belted**

#### **3.3.5 VFD Operation**

#### **3.3.6 Accessories**

##### **3.3.6.1 General**

##### **3.3.6.2 Brake Motors**

##### **3.3.6.3 Space Heaters**

##### **3.3.6.4 Thermal Protection General, Thermostats, Thermistors & RTDs**

##### **3.3.6.5 RTD Alarm & Trip Settings**

#### **3.3.7 Guards**

### **3.4 Electrical Connections**

#### **3.4.1 Power Supply / Branch Circuit**

##### **3.4.1.1 Branch Circuit Supply**

##### **3.4.1.2 Fuses, Breakers, Overload Relays**

##### **3.4.1.3 AC Power Supply Limits**

#### **3.4.2 Terminal Box**

##### **3.4.2.1 Conduit opening**

##### **3.4.2.2 Hazardous Locations**

#### **3.4.3 Lead Connections**

##### **3.4.3.1 Wire Size Requirements (Single Phase)**

##### **3.4.3.2 Extension Cords (Single Phase)**

#### **3.4.4 Ground Connections**

#### **3.4.5 Start Up**

##### **3.4.5.1 Start Up – No Load Procedure**

##### **3.4.5.2 Start Up – Load Connected Procedure**

##### **3.4.5.3 Jogging and/or repeated starts**

### **4.0 MAINTENANCE**

#### **4.1 General Inspection**

- 4.1.1 Ventilation
- 4.1.2 Insulation
- 4.1.3 Electrical Connections
- 4.2 Lubrication and Bearings
  - 4.2.1 Grease Type
  - 4.2.2 Bearing Operating Temperature

- 4.2.3 Lubrication Interval
- 4.2.4 Lubrication Procedure
- 4.2.5 Lubrication Example
- 4.3 Trouble Shooting
  - 4.3.1 General Trouble-Shooting Warnings
  - 4.3.2 Trouble-Shooting Cause / Corrective Action

motor is suitable for use on Pulse Width Modulated (PWM) type VFD power. In addition, the nameplate must be marked with the inverter rating; for example, "2:1 CT", "2 to 1 Constant Torque", etc.

## 1.0 INSTALLER/OWNER/OPERATOR RESPONSIBILITY:

### 1.1 ELECTRICAL SAFETY

#### **⚠ WARNING: ELECTRICAL SHOCK HAZARD**

Electrical connections shall be made by a qualified electrical personnel in accordance with all applicable codes, ordinances and sound practices. Failure to follow these instructions could result in serious personal injury, death and/or property damage. Only qualified personnel who are familiar with the applicable National Code (USA = NEC) and local codes should install or repair electrical motors and their accessories.

#### **⚠ WARNING: ELECTRICAL LIVE CIRCUIT HAZARD**

Do not touch electrically live parts. Disconnect, lockout and tag input power supply before installing or servicing motor (includes accessory devices). Use a voltmeter to verify that power is off before contacting conductors.

#### **⚠ WARNING: ELECTRICAL GROUNDING HAZARD**

Failure to properly ground motors, per the National Electrical Code (NEC) Article 430 and local codes may cause serious injury or death to personnel. For general information on grounding refer to NEC Article 250. (Also see "Ground Connections section 3.4.4").

#### **⚠ WARNING: AUTOMATIC RESET PROTECTOR HAZARD**

Do not use automatic reset protectors if automatically restarting the motor will place personnel or equipment at risk. Failure to follow this instruction could result in serious personal injury, death and/or property damage

#### **⚠ WARNING: MANUAL RESET PROTECTOR HAZARD**

If a tripped manual reset thermal protector is exposed to a temperature less than  $-7^{\circ}\text{C}$  ( $20^{\circ}\text{F}$ ) it may reset and restart the motor automatically. If an application requires a motor with a manual reset thermal protector that will be operated at temperatures less than  $-7^{\circ}\text{C}$  ( $20^{\circ}\text{F}$ ) contact the manufacturer to review the application / motor requirements. Failure to follow this instruction could result in serious personal injury, death and/or property damage

### 1.2 MECHANICAL SAFETY

#### **⚠ WARNING: LOOSE PARTS HAZARD**

Before starting the motor, remove all unused shaft keys and loose rotating parts to prevent them from flying off. Failure to follow these instructions could result in serious personal injury, death and/or property damage.

#### **⚠ WARNING: ROTATING PARTS HAZARD**

Keep extremities, hair, jewelry and clothing away from moving parts. Failure to follow these instructions could result in serious personal injury, death and/or property damage.

### 1.3 ENVIRONMENTAL SAFETY

#### **⚠ WARNING: HAZARDOUS LOCATIONS**

- (1) The NEC and the local authority having jurisdiction must be consulted concerning the installation and suitability of motors for use in Hazardous Locations. The local authority having jurisdiction must make the final determination of what type of motor is required. The application and operation is beyond the control of the motor manufacturer.
- (2) Division 1 Hazardous Locations motors can only be modified or reworked by the manufacturer or a facility that is Listed under UL's category "Motors and Generators, Rebuilt for use in Hazardous Locations". Failure to follow these instructions could result in serious personal injury, death and/or property damage.
- (3) Do not use a Hazardous Locations motor with a Variable Frequency Drive (VFD) unless the motor nameplate specifically states that the

## 2.0 RECEIVING AND INSPECTION

### 2.1 INITIAL INSPECTIONS

**2.1.1 CHECK PACKING LIST AND INSPECT** the packaging to make certain no damage has occurred in shipment. If there is visible damage to the packaging, unpack and inspect the motor immediately. Claims for any damage done in shipment must be made by the purchaser against the transportation company.

**2.1.2 TURN MOTOR SHAFT** by hand to be certain that it rotates freely. Note: Shaft seals and bearing seals may add drag.

**2.1.3 CHECK NAMEPLATE** for conformance with purchase order requirements and compliance with power supply and control equipment requirements.

### 2.2 HANDLING:


#### **⚠ WARNING: FALLING OBJECT HAZARD**

Eyebolts or lifting lugs, where provided, are intended for lifting only the motor and accessories mounted by the motor manufacturer (unless specifically stated otherwise on the motor). Utilizing the motor lifting provision to lift other components such as pumps and gear boxes could result in serious personal injury, death and/or property damage.

#### **⚠ WARNING: FALLING OBJECT HAZARD**

Before using the lifting provision, check the eyebolts and/or other lifting means to assure they are not bent or damaged and are completely threaded, seated & secured to the motor. Equipment to lift motor must have adequate lifting capacity. While lifting the motor DO NOT stand under or in the vicinity of the motor. Failure to follow these instructions could result in serious personal injury, death and/or property damage.

#### 2.2.1 LIFTING ANGLE LIMITATIONS

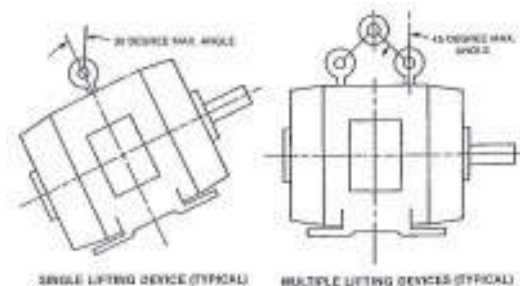

**2.3 STORAGE:** Motors, not put into service immediately, must be stored indoors in a clean, dry location. Avoid locations with large temperature swings that will result in condensation. Motors must be covered to eliminate airborne dust and dirt. If the storage location exhibits high vibration, place isolation pads under motor to minimize damage to motor bearings.



**2.3.1 BEARING LUBRICATION:** Bearings are grease packed at the factory; relubrication upon receipt of motor or while in storage is not necessary. If stored more than one year, add grease per lubrication instructions (Table 4-4) before start-up.

**2.3.2 SHAFT ROTATION:** It is recommended that the motor shaft be rotated 5 to 10 rotations every three months to distribute the grease in the bearings. This will reduce the chance for corrosion to form on the bearing rolling elements and raceways. Note: Shaft seals and bearing seals may add drag.

**2.3.3 DAMP OR HUMID STORAGE LOCATIONS:** Treat unpainted flanges, shafts, and fittings with a rust inhibitor. Apply appropriate power to the motor's space heaters (if so equipped)

### 3.0 INSTALLATION AND OPERATION

**⚠ WARNING:** Only qualified personnel who are familiar with the appropriate national code, local codes and sound practices should install or repair electrical motors and their accessories. Installation should conform to the appropriate national code as well as local codes and sound practices. Failure to follow these instructions could result in serious personal injury, death and/or property damage.

**⚠ WARNING: ELECTRICAL LIVE CIRCUIT HAZARD**

Do not touch electrically live parts. Disconnect, Lockout and Tag input power supply before installing or servicing motor (includes accessory devices). Use a voltmeter to verify that power is off before contacting conductors.

#### 3.1 LOCATION

**3.1.1 SELECTING A LOCATION:** Consideration should be given to environment and ventilation. Motors should be installed in an area that is protected from direct sunlight, corrosives, harmful gases or liquids, dust, metallic particles, and vibration. A motor with the proper enclosure for the expected operating condition should be selected. Provide accessible clearance for cleaning, repair, service, and inspections (See section 3.1.3 for construction clearances). The location should be considered for possible future motor removal / handling. The free flow of air around the motor should not be obstructed.

**3.1.2 AMBIENT TEMPERATURE LIMITS:** The ambient temperatures of the air inlet to the motor should not exceed 40°C (104°F) or be less than -30°C (-22°F) unless the motor nameplate specifically states an ambient temperature outside of these limits. The ambient inside an enclosure built around the motor shall not exceed the nameplate ambient. For ambient temperatures outside of these limits consult the motor manufacturer.

**⚠ CAUTION: INSULATION DEGRADATION WARNING**

Insulation at high temperatures ages at an accelerated rate. Each 10°C increase in temperature reduces the insulation life by one half.

**⚠ WARNING: HAZARDOUS LOCATIONS AMBIENT LIMIT:** Division 1 Hazardous Locations motors shall **NOT** be operated below -25°C (-13°F) ambient. (Low temperatures reduce the component mechanical properties.)

#### 3.1.3 CONSTRUCTION SELECTION per LOCATION:

**3.1.3.1 DRIPPROOF (OPEN) MOTORS** are intended for use indoors where the atmosphere is relatively clean, dry, and non-corrosive. Recommended a minimum clearance of ½ the shaft height between vent openings and the nearest obstruction.

**3.1.3.2 TOTALLY ENCLOSED MOTORS** are suitable for indoor or outdoor standard service applications.

**TEAO or AOM (Totally Enclosed Air Over)** motors must be mounted in the air stream. When the motor nameplate states a minimum airflow the motor must be mounted in an air stream meeting this minimum value.

**TEFC (Totally Enclosed Fan Cooled)** motors must meet a minimum distance of ½ the shaft height between the fan guard grill openings and the nearest obstruction.

**3.1.3.3 HAZARDOUS LOCATIONS MOTORS:** Hazardous Locations motors are intended for installations in accordance with NEC Article 500. For all installations involving Hazardous Locations motors, consult the applicable national codes, local codes, and the authority having jurisdiction.

**Division 1 Installations – includes Class I & II:** Use only motors that are UL Listed and CSA Certified or UL Listed and UL Certified for Canada. These motors bear a separate nameplate that includes the UL Listing Mark and CSA Certification Mark or includes the UL Listing Mark and the UL Mark for Canada. This plate also bears the phrase: "Electric motor for Hazardous Locations" and is marked with the Class, Group and Operating Temperature Code.

**Division 2 Installations – Class I only:** Use only motors that are CSA Certified and bear the CSA Certification Mark. These motors include a phrase on the main motor nameplate that indicates the motor is CSA Certified for Class I, Division 2 / Zone 2 locations.

**Division 2 Installation – Class II only:** Use only Class II motors as described above under "Division 1 Installations".


**⚠ WARNING: EXPLOSION HAZARD**

A motor should never be placed in an area with a hazardous process or where flammable gases or combustible materials may be present unless it is specifically designed and nameplated for this type of service. Hazardous Locations motors are intended for installations in accordance with NEC Article 500. For all installations involving Hazardous Locations motors, consult the NEC, local codes, and the authority having jurisdiction. Failure to follow these instructions could result in serious personal injury, death and/or property damage. (For other limitations see section 1.3)

#### 3.2 MOUNTING MOTOR:

**3.2.1 RIGID BASE (FOOTED):** The motor must be securely installed to a rigid foundation or a mounting surface to minimize vibration and maintain alignment between the motor shaft and the load's shaft. The mounting surfaces of the four mounting pads must be flat within 0.01 inches for 210 frame & smaller; 0.015 inches for 250 frame & larger. [IEC 0.25 mm for 130 frame & smaller, 0.38 mm for 160 frame & larger]. This may be accomplished by shims under the motor feet. For special isolation mounting, contact manufacturer for assistance

#### 3.2.2 RIGID BASE HOLE SELECTION -6 OR 8 HOLES

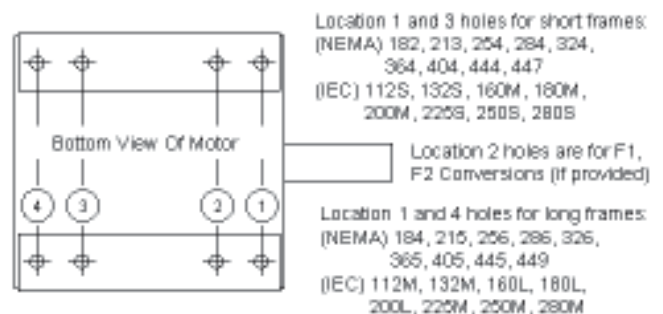

#### 3.2.3 VERTICAL MOUNTING:

**CAUTION: ENCLOSURE PROTECTION CAUTION:** Most Drip-proof rigid base (footed) motors do **NOT** meet "Drip-proof" requirements when mounted vertically. If the motor is located in unprotected environments, the addition of a drip cover may be available. Drip covers not available for cast iron rigid base motors.


**⚠ WARNING: FALLING OBJECT HAZARD**

The lifting provision on standard horizontal footed motors is not designed for lifting the motor in a vertical shaft up or shaft down position. (see 2.2.1 lifting angles). Lifting method / provisions for

mounting a rigid base (footed) motor vertically is the responsibility of the installer.

**VERTICAL SHAFT DOWN:** Most standard horizontal motors thru 449 Fr. (excluding brake motors) can be mounted in a vertical shaft down orientation. For vertical brake motors see section 3.3.6.2.

#### VERTICAL SHAFT UP:

 **WARNING: HAZARDOUS LOCATIONS VERTICAL MOUNT:** Hazardous locations motors must **NOT** be mounted vertically shaft up without approval by the motor manufacturer. Without proper retaining provisions the rotor may move axially and contact components, creating a spark hazard.

**Belted or Radial Load when mounted vertically:** The following frame sizes / constructions with applied (axial) down loads within the limit stated are acceptable when mounted vertical shaft up.

**Table 3-1 Belted or Radial Load Applications (All speeds)**

Frame Size	Enclosure	Construction	Shaft Up OK	Max Applied Down Load <sup>3</sup>
56	TEFC & ODP	Steel	Yes	25 lbs
140	TEFC	Steel & Cast Iron	Yes	25 lbs
	ODP	Steel	Yes	25 lbs
180	TEFC	All	Yes	35 lbs
	ODP	Steel	Yes	35 lbs
210	TEFC	All	Yes	40 lbs
	ODP	Steel	Yes	40 lbs
250	TEFC	All	Yes	40 lbs
	ODP	Steel	Yes	40 lbs
		Cast Iron	No <sup>2</sup>	N/A
280-320	320 TTFC models	Cast Iron	Eng <sup>1</sup>	N/A
	All Other TEFC	Cast Iron & Aluminum	Yes	30 lbs
	ODP	Cast Iron	No <sup>2</sup>	N/A
	TEFC & ODP	Steel	Build Up Only <sup>4</sup>	N/A
360 & Up	TEFC	Cast Iron	Build Up Only <sup>4</sup>	N/A
	ODP	Cast Iron	No <sup>2</sup>	N/A
	TEFC & ODP	Steel	Build Up Only <sup>4</sup>	N/A

Notes:

- <sup>1</sup> For TEFC model numbers beginning with 324TTFC or 326TTFC consult the motor manufacturer to determine if a build up motor is required.
- <sup>2</sup> The max applied down load is any applied load external to the motor, including such things as sheave weight, fan loads, axial belt force, pump load, etc. If the application is direct drive with no applied radial load, consult the motor manufacturer.
- <sup>3</sup> "Build-up only", refers to motors that are specifically ordered and built for shaft up applications. It does not imply that all build-up motors are suitable for shaft up applications.

### 3.3 APPLICATION ASSEMBLY TO MOTOR:

#### CAUTION: EQUIPMENT DAMAGE:

Do not connect or couple motor to load until correct rotational direction is established.

**3.3.1 GENERAL: PROPER ALIGNMENT** of the motor and driven equipment minimizes vibration levels, maximizes bearing life, and extends the overall life of the machinery. Consult the drive or equipment manufacturer for more information.

#### CAUTION: BEARING FAILURE

During assembly do NOT force components onto the shaft. Striking or hammering the component may result in bearing damage.

**3.3.2 DIRECT COUPLING:** Use flexible couplings if possible.

For applications that apply radial, axial or moment loading on the motor shaft see section 3.3.3.

#### CAUTION: BEARING FAILURE

Unless approved by the motor manufacturer do **NOT** direct couple a vertical shaft up or roller bearing motor. Direct coupling a vertical shaft up motor or a motor with a roller bearing may result in bearing damage.

**3.3.3 DIRECT CONNECTED:** Radial loading for direct connected equipment (gears, fans etc.) must be approved by the motor manufacturer unless within the maximum overhung load limits (Table 3-2). Combined loading (axial, radial and/or moments) must be approved by motor manufacturer. For belted loads see section 3.3.4.

**Table 3-2 Maximum Radial Load (lbf) @ Middle of the Shaft Extension Length**

Frame Number	Motor Rated RPM			
	3600	1800	1200	900
143T	106	166	193	210
145T	109	170	199	218
182T	187	230	261	287
184T	193	237	273	301
213T	319	317	470	510
215T	327	320	480	533
254T	500	631	729	793
256T	510	631	736	820
284T	-	866	990	1100
286T	-	871	1005	1107
324T	-	950	1100	1215
326T	-	950	1113	1230
364T	-	1078	1365	1515
365T	-	1078	1380	1540
404T	-	1388	1590	1762
405T	-	1400	1610	1780
444T	-	1580	1795	2005
445T	-	1520	1795	1985
447T	-	1455	1765	1985
449T	-	1640	1885	2130

Values based on 26,280 hrs B-10 Life

For "End of Shaft" Load multiply value by 0.88

To convert from lbf to N multiply value by 4.4482.

#### 3.3.4 BELTED:

The goal of any belted system is to efficiently transmit the required torque while minimizing the loads on the bearings and shafts of the motor and driven equipment. This can be accomplished by following four basic guidelines:

1. Use the largest practical sheave diameter.
2. Use the fewest number of belts possible.
3. Keep sheaves as close as possible to support bearings.
4. Tension the belts to the lowest tension that will still transmit the required torque without slipping. It is normal for V-belts to squeal initially when line starting a motor

##### 3.3.4.1 Sheave Diameter Guidelines:

In general, smaller sheaves produce greater shaft stress and shaft deflection due to increased belt tension. See Table 3-3 for recommended minimum sheave diameters. Using larger sheaves increases the contact with belts which reduces the number of belts required. It also increases the belt speed, resulting in higher system efficiencies. When selecting sheaves, do not exceed the manufacturer's recommended maximum belt speed, typically 6,500 feet per minute for cast iron sheaves. Determine belt speed by the following formula:

Figure 1



$$\text{BELT SPEED (Ft/min)} = \frac{\text{Shaft RPM} \times 3.14 \times \text{Sheave Dia (inches)}}{12}$$

#### 3.3.4.2 Number of Belts

In general, use the fewest number of belts that will transmit the required torque without slipping. See Table 3-3 for recommended maximum number of belts. Each belt adds to the tension in the system, which increases load on the shafts and bearings. Belts are most efficient when operated at or near their rated horsepower. If the sheaves have more grooves than the number of belts required, use the grooves closest to the motor.

#### 3.3.4.3 Sheave Location

Install sheaves as close to the housing as possible to increase the bearing life of the motor and driven equipment

#### 3.3.4.4 Belt Tension

##### ⚠ CAUTION: Equipment Failure Caution



Belt tensioning by feel is **NOT** acceptable. Tensioning by "feel" can be very misleading, and can damage motor and equipment. It is normal for V-belts to squeal initially when line starting a motor.

In general, belt tensions should be kept as loose as possible while still transmitting the required torque without slipping. Belt tensions must be measured with a belt tension gage. These inexpensive gages may be obtained through belt manufacturers, or distributors.

Proper belt tension is determined by measuring the force required to deflect the center of the belt a given distance. The proper deflection (in inches) is determined by dividing the belt span in inches by 64. Calculate the proper deflection and then see Table 3-3 for the required "Deflected Force" to achieve that deflection.

After tensioning the belt, rotate the sheaves for several rotations or operate the system for a few minutes to seat belts into the grooves, then re-tension the belts. New belts will stretch during use, and should be retensioned after the first eight hours of use.

Figure 2

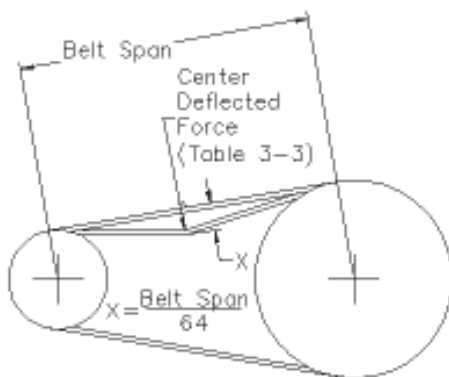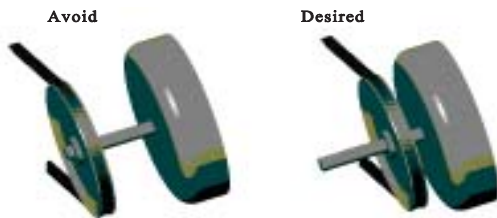

**Table 3-3 Recommended Minimum Sheave Diameters, Belt Type, Number of Belts and Deflected Force**

Motor Hp	1200 rpm				1800 rpm				3600 rpm			
	Min Sheave Dia (in)	Belt Type	Max # of Belts	Avg. Deflected Force (lbs)	Min Sheave Dia (in)	Belt Type	Max # of Belts	Avg. Deflected Force (lbs)	Min Sheave Dia (in)	Belt Type	Max # of Belts	Avg. Deflected Force (lbs)
0.75	2.2	3VX	1	2.4	2.2	3VX	1	2.2	2.2	3VX	1	1.6
1	2.4	3VX	1	4.0	2.2	3VX	1	3.1	2.2	3VX	1	1.6
1.5	2.4	3VX	2	3.1	2.4	3VX	2	2.1	2.2	3VX	1	2.5
2	2.4	3VX	3	2.8	2.4	3VX	2	2.9	2.4	3VX	1	2.7
3	3.0	3VX	2	3.3	2.4	3VX	3	2.9	2.4	3VX	2	2.3
5	3.0	3VX	3	4.0	3.0	3VX	3	3.7	2.4	3VX	3	2.5
7.5	3.8	3VX	4	4.7	3.0	3VX	4	4.1	3.0	3VX	2	4.2
10	4.4	3VX	4	5.4	3.8	3VX	4	4.3	3.0	3VX	3	3.8
15	4.4	3VX	5	5.4	4.4	3VX	4	5.4	3.8	3VX	3	4.4
20	5.2	3VX	6	6.0	4.4	3VX	6	4.8	4.4	3VX	3	5.0
25	6.0	3VX	7	5.6	4.4	3VX	7	5.2	4.4	3VX	4	4.7
30	6.8	3VX	7	5.9	5.2	3VX	7	5.3	<b>Contact Motor Manufacturer when Belting 3600 rpm Motors Greater than 25 HP</b>			
40	6.8	5VX	4	11.6	6.0	3VX	7	6.0				
50	8.2	5VX	4	14.6	6.8	3VX	8	5.9				
60	8.2	5VX	5	14.1	7.4	5VX	4	13.3				
75	10.0	5VX	5	14.5	8.6	5VX	4	14.3				
100	10.0	5VX	6	16.0	8.6	5VX	6	13				
125	12.0	5V	7	14.1	10.5	5V	6	13.1				
150	13.2	5V	7	15.4	10.5	5V	7	13.4				
200	15.0	5V	8	16.0	13.2	5V	8	13.1				
250	15.0	8V	6	27.6	14.0	5V	9	13.8				
300	16.0	8V	7	27.1	14.0	5V/8V	11 / 7	23.4				
350	16.5	8V	7	30.3	14.5	5V/8V	12 / 7	26.0				
400	17.5	8V	8	29.1	15.0	5V/8V	13 / 8	25.7				
450	18	8V	8	31.6	16.0	5V/8V	14 / 9	25.2				
500	18.5	8V	9	30.7	16.5	5V/8V	15 / 9	26.9				
600					17.5	8V	11	26.3				
700					19.0	8V	12	27.3				
800					20.0	8V	13	28.2				

**Notes:**

1. Horsepower is the nameplate motor horsepower, and RPM is the motor (driver) speed.
2. Minimum sheave diameters are from NEMA standards where applicable.
3. **For variable speed applications or values outside these recommendations, consult motor manufacturer.**
4. Selections are based on a 1.4 service factor, 5 to 1 speed ratio and various Power Transmission Manufacturers' catalogs.
5. These selections are for Narrow V-belt sections only. Consult manufacturer for details on conventional V-belt sections (A, B, C, D and E), or other belt types.
6. "Average Deflected Force is per section 3.3.4.4 of this document and is the force required to deflect the center of a belt 1/64 of the belt span distance. Tolerance on this force is  $\pm 1$  lbf for forces  $\leq 10$  lbs, and  $\pm 2$  lbs for forces  $> 10$  lbs as measured utilizing a belt tension gage.
7. When more than one belt is required the belts must be a matched set (matched for length).
8. If possible, the lower side of the belt should be the driving side to increase the length of wrap on the sheave).
9. For belted loads do not exceed 125% of 60 Hz operating RPM.

### 3.3.5 VFD (Variable Frequency Drives) OPERATION:



**WARNING: VFD Motors with Reset Thermal Protectors**  
UL Recognition, UL Listing, or CSA certification does not apply to motors that are equipped with a manual or automatic reset thermal protector when the motor is operated on VFD power.



**WARNING: Power Factor Correction Capacitors:**  
Power factor correction capacitors should never be installed between the drive and the motor.



**CAUTION: VFD / Motor Setup:**  
It is the responsibility of the startup personnel during set up of the VFD / motor system to properly tune the drive to the motor for the specific application per the VFD user manual. The correct voltage boost and volts per hertz settings are application dependent and unique to each motor design. Failure to connect over temperature devices (when provided) will void the warranty.

#### 3.3.5.1 Overspeed Capability:

Belted loads: Do not exceed 125% of 60 Hz operating RPM.

**Table 3-4 Maximum Safe Continuous Speed (RPM) For Coupled and Direct Connected Loads**

NEMA / [IEC] Frame Size	2-Pole	4, 6, or 8 Pole
56-180 [80-110]	7200 *	5400 *
210-250 [130-160]	5400 *	4200*
280 [180]	5400 *	3600
320 [200]	4500 *	3600
360 [225]	4500 *	2700
400-440 [250-280]	3600	2700
>440 [>280]	3600	1800

\* = Fan cooled motors (Totally Enclosed & Hazardous Locations Motors) are limited to a maximum safe continuous speed of 4000 RPM **For higher speeds or shortened duty cycle contact motor manufacturer**

**3.3.5.2 Cable Lengths:** For optimum insulation life, limit VFD to motor cable lengths of general purpose motors



to Table 3-5 values. Definite purpose VFD motors may accommodate longer cable lengths. For additional information contact motor manufacturer.

**Table 3-5 Max Cable Lengths General Purpose Motors**

These values are based on 3 kHz carrier frequency. Add suitable VFD output-side filters when exceeding the listed values.

Frame Size	230V	460 V	575 V
NEMA 56-320	600 ft.	125 ft.	40 ft.
NEMA 360-5011	1000 ft.	225 ft.	60 ft.
IEC 80-200	180 m.	40 m.	12 m.
IEC 225-280.	300 m.	70 m.	18 m.

**3.3.5.3 VFD Grounding:** Equipment grounding conductors may be run in the same conduit as the AC motor power leads. This wire must be used as the equipment ground for the motor and not as the fourth current carrying wire of a "WYE" motor circuit. The grounded metal conduit carrying the output power conductors can provide EMI shielding, but the conduit does not provide an adequate ground for the motor; a separate grounding conductor must be used. Grounding the motor neutral (WYE) of a VFD powered motor may result in a VFD ground fault trip. Improper grounding of an inverter fed motor may result in frame voltages in excess of 500 Volts. Refer to Grounding section 3.4.4

**3.3.5.4 VFD – Single Phase:**

**CAUTION: SINGLE PHASE MOTOR FAILURE:**

Single Phase motors are **NOT** suitable for use on VFD power. Connecting a Single Phase Motor to a VFD voids the warranty.

**3.3.5.5 Stray Voltage on Accessory Leads:**

VFD's will couple stray (common-mode) voltage to motor-mounted RTDs, thermistors, thermostats and space heaters. The leads of these elements must be properly insulated and control input circuits must be designed to withstand this common-mode voltage.

**3.3.6 ACCESSORIES / PROVISIONS:**

**3.3.6.1 General:** Carefully read and understand the accessory manufacturer's instructions, supplied with motor. Contact the manufacturer for additional information.

**3.3.6.2 Brake Motors:**

**CAUTION: Vertical Motor Premature Brake Failure**

Motors with brakes that are designed for vertical applications are equipped with springs to support the brake pressure plate. Mounting a horizontal brake motor vertically shaft up or down may require a pressure plate spring modification. Failure to modify the brake for the vertical application may result in premature brake failure. If in question, consult brake literature or brake manufacturer.

**Brake Solenoid Wiring:** Do NOT connect the brake solenoid to the output of a VFD. The brake solenoids must be wired to 50/60 Hz line power

**3.3.6.3 Space Heaters:**

Motors provided with space heaters have two leads that are brought into the conduit box or into an auxiliary box. These leads are marked "H1", "H2" ("H3", "H4" if a second space heater is supplied). See the space heater nameplate on motor for heater rating.

**WARNING: DIVISION 2 EXPLOSION HAZARD**

The space heater temperature rating when used in Class I, Division 2 motors shall **NOT** exceed 80% of the auto ignition temperature of the hazardous gas or vapor. See the space heater nameplate on motor for heater Temperature Code and heater rating. Failure to follow this instruction could result in serious personal injury, death and/or property damage

**3.3.6.4 Thermal Protection:**

**General Information:** When thermal protection is provided, one of the following will be stamped on the nameplate:

1. **"THERMALLY PROTECTED"** This motor has built in thermal protection. Thermal protectors open the motor circuit electrically when the motor overheats or is overloaded. The protector cannot be reset until the motor cools. If the protector is automatic, it will reset itself. If the protector is manual, disconnect motor from power supply. After protector cools (five minutes or more) press the reset button and reapply power to the motor. In some cases a motor is marked "Auto" and the connection diagram on the motor will identify T'Stat leads – see "2" below. (See warnings on Manual and Automatic reset protectors - section 1.1)

2. **"WITH OVERHEAT PROTECTIVE DEVICE"**: This motor is provided with an overheat protective device that does not directly open the motor circuit. Motors nameplated with this phrase have either thermostats, thermistors or RTD's. The leads to these devices are routed into the motor conduit box or into an auxiliary box. The lead markings are defined on the nameplate (normally "P1", "P2"). The circuit controlled by the overheat protection device must be limited to a maximum of 600 volts and 360 volt-amperes. See connection decal provided inside the terminal box cover. Failure to connect these over temperature devices (when provided) will void the warranty.

**WARNING: EXPLOSION HAZARD**

For Hazardous Locations motors provided with thermostats UL and the NEC require connection of thermostat leads into the control portion of a manual reset start circuit. Failure to follow this instruction could result in serious personal injury, death and/or property damage

**Resistance Temperature Detectors (RTD):** When winding and/or bearing RTDs are provided the RTD lead markings are defined on the nameplate. (Normally "R1", "R2", "R3" etc.)

**3.3.6.5 RTD Alarm & Trip Settings:**

Tables 3-6 & 3-7 are suggested initial RTD alarm and trip settings. For motors found to operate significantly below these values the settings may be reduced accordingly.

**Table 3-6 Winding RTD – Temperature Limit (°C)  
40 °C Max Ambient**

Motor Load	Class B Temp Rise ≤ 80°C		Class F Temp Rise ≤ 105°C	
	Alarm	Trip	Alarm	Trip
Up to 1.0 SF	130	140	155	165
>1.0 to 1.15 SF	140	150	160	165

**Table 3-7 Bearing RTD – Temperature Limit (°C)  
40 °C Max Ambient**

Ambient	Alarm	Trip
Up to 40°C	95	100
> 40°C	110	115
Bearings that are Heat Stabilized to 150 °C	130	135

**3.3.7 GUARDS:**

**WARNING: ROTATING PARTS HAZARD**

When devices are assembled to the motor shaft, be sure to install protective devices such as belt guards, chain guards, and shaft covers. These devices must protect against accidental contact with extremities, hair, and clothing. Consider the application and provide guarding to protect personnel. Remove all unused shaft keys and loose rotating parts to prevent them from flying off and causing bodily injury. Failure to follow this warning could result in serious personal injury, death and/or property damage.



### 3.4 ELECTRICAL CONNECTIONS:

#### **WARNING: ELECTRICAL HAZARDS**

Before proceeding read Section 1-1 on Electrical Safety. Failure to follow the instructions in Section 1-1 could result in serious personal injury, death and/or property damage

#### 3.4.1 POWER SUPPLY / BRANCH CIRCUIT

##### **WARNING: POWER SUPPLY INCOMPATIBILITY HAZARD**

Check power supply to make certain that voltage, frequency and current carrying capacity are in accordance with the motor nameplate. Failure to match motor nameplate values could result in serious personal injury, death and/or property damage

##### **WARNING: BRANCH CIRCUIT SUPPLY HAZARD**

Motor and control wiring, fusing, overload protection, disconnects, accessories and grounding must always conform to the applicable electrical codes as well as local codes and sound practices.

**3.4.1.1 Branch Circuit Supply** to a motor should include a disconnect switch, short circuit current fuse or breaker protection, motor starter (controller) and correctly sized thermal elements or overload relay protection.

#### 3.4.1.2 Fuses, Breakers, Overload Relays

Short Circuit Current Fuses or Breakers are for the protection of the branch circuit. Starter or motor controller overload relays are for the protection of the motor. Each of these should be properly sized and installed per the applicable electrical codes as well as local codes and practices.

##### **WARNING: PROTECTIVE DEVICE DISABLED HAZARD**

DO NOT bypass or disable protective devices. Protection removal could result in serious personal injury, death and/or property damage

#### 3.4.1.3 AC Power Supply Limits

Motors are designed to operate within the following limits at the motor terminals:

- 1- AC power is within +/- 10 % of rated voltage with rated frequency applied. (Verify with nameplate ratings) **OR**
- 2- AC power is within +/- 5% of rated frequency with rated voltage **OR**
- 3- A combined variation in voltage and frequency of +/- 10% (sum of absolute values) of rated values, provided the frequency variation does not exceed +/-5% of rated frequency.
- 4- For 3 phase motors the line to line full load voltage must be balanced within 1%.
- 5- If the motor is rated 208-230V, the voltage deviations must be calculated from 230V.

#### **CAUTION: Reduced Motor Performance**

Operation outside of these limits will degrade motor performance and increase operating temperature.

### 3.4.2 TERMINAL BOX:

**3.4.2.1 Conduit Opening:** For ease of connections, motors are typically provided with large terminal boxes. Most motors have conduit access in 90 degree increments, the terminal box conduit opening is typically provided via knockouts, holes with covers, or the terminal box is rotate-able. Fabricated conduit boxes may have a removable plate for the installer to provide correctly sized hole(s).

#### 3.4.2.2 Hazardous Locations Motors:

##### **WARNING: EXPLOSION HAZARDS**

(1) **Terminal Boxes mounted to motor with a pipe nipple:** If a pipe nipple mounted terminal box is removed or rotated it must be reassembled with a minimum of five full threads of engagement.

(2) **Component Removal:** Do not set a terminal box component on its machined surfaces. Prior to component reassembly wipe clean all machined surfaces.

(3) **Machined Surface Gap (Hazardous Locations Terminal Boxes):** The gap between mating surfaces with the machined terminal box MUST BE LESS THAN 0.002 inches. This gap must be checked with a feeler gage along the entire perimeter. If there is visible damage to the mating surfaces, or if the gap between these surfaces exceeds 0.002 inches, DO NOT complete the installation and contact the motor manufacturer. Failure to follow these instructions could result in serious personal injury, death and/or property damage

### 3.4.3 LEAD CONNECTIONS

Electrical connections to be made per nameplate connection diagram or separate connection plate. In making connections follow the applicable electrical code as well as local codes and practices.

##### **WARNING: ELECTRICAL CONNECTION HAZARD**

Failure to correctly connect the motor leads and grounding conductor can result in injury or death. Motor lead connections can short and cause damage or injury if not well secured and insulated.

#### 3.4.3.1 Wire Size (Single Phase) Requirements

The minimum wire size for Single Phase, 115 & 230 Volt Circuits must meet table 3-8 for a given distance between motor and either Fuse or Meter Box.

**Table 3-8 Minimum Wire Gage Size Single Phase  
115 & 230 Volt Circuits**

Distance (Feet) - Motor to Fuse or Meter Box								
Motor	100 Ft.		200 Ft.		300 Ft.		500 Ft.	
HP	115	230	115	230	115	230	115	230
1/4	14	14	10	12	8	10	6	8
1/3	12	14	10	12	6	10	4	8
1/2	10	12	8	10	6	8	4	6
3/4	10	12	6	10	4	8	2	6
1	8	10	6	8	4	6		4
1 1/2	4	10	0	8		6		4
2		8		6		4		2
3		8		6		4		2
5		6		4		2		0

#### 3.4.3.2 Extension Cords (Single Phase Motors):

Where an extension cord(s) is utilized to provide power to the motor the extension cord(s) must be...(1) the proper gauge size per table 3-8, (2) in good working condition (3) properly grounded.

### 3.4.4 GROUND CONNECTION(S):

##### **WARNING: ELECTRICAL GROUNDING HAZARD**

For general information on grounding (USA) refer to NEC Article 250. Improper grounding of an inverter fed motor may result in frame voltages in excess of 500 Volts. In making the ground connection, the installer must make certain that a good electrical connection is obtained between motor and grounding lead. Failure to properly ground motors, per the applicable national code (such as NEC Article 430) and local codes may cause serious injury or death to personnel.

**Primary "Internal" Ground:** A grounding conductor must be connected to the grounding terminal provided in the terminal housing. This grounding terminal is either a ground screw, ground lug, or a tapped hole to be used with a separately provided ground screw. The internal grounding feature is accessible inside the terminal housing and must be used as the primary grounding connection.

**Secondary "External" Ground:** Some motors are provided with a supplemental grounding terminal located on the external surface of the motor frame or feet. This external terminal is for supplemental bonding connections where local codes permit or require such connection

### 3.4.5 START UP:

##### **WARNING: ELECTRICAL SHOCK HAZARD:**

Be certain that all connections are secure and the conduit box cover is fastened in place before electrical power is connected. Failure to follow these instructions could result in serious personal injury, death, and/or property damage.

Do not start more than twice in succession under full load. Repeated starts and/or jogs of induction motors can cause overheating and immediate failure. Contact the motor manufacturer if it is necessary to repeatedly start or jog the motor.

### **WARNING: LOOSE & ROTATING PARTS HAZARD**

Before proceeding read Section 1-2 on Mechanical Safety. Failure to follow the instructions in Section 1-2 could result in serious personal injury, death and/or property damage

### **WARNING: EXCESSIVE SURFACE TEMPERATURE HAZARD**

Motors with the temperature code stated on the nameplate are designed to operate within this limit. Improper application or operation can cause the maximum surface temperature to be exceeded. A motor operated in a Hazardous Location that exceeds this surface temperature limit increases the potential of igniting hazardous materials. *Therefore, motor selection, installation, operation, and maintenance must be carefully considered to ensure against the following conditions:* (1) Motor load exceeds service factor value, (2) Ambient temperature above nameplate value, (3) Voltages outside of limits (3.4.1.3), (4) Loss of proper ventilation, (5) VFD operation exceeding motor nameplate rating, (6) Altitude above 3300 feet / 1000 meters, (7) Severe duty cycles, (8) Repeated starts, (9) Motor stall, (10) Motor reversing, and (10) Single phase operation. Failure to follow these instructions could result in serious personal injury, death and/or property damage.

### **CAUTION: HOT SURFACE**

Normal motor surface temperatures may exceed 90 ° C (194° F). Touching the motor frame may cause discomfort or injury. Surface temperatures should only be measured with suitable instruments and not estimated by hand touch.

#### **3.4.5.1 Start Up - No Load Procedure**


- 1. Check Instructions:** Before startup carefully read and fully understand these instructions including all warnings, cautions, and safety notice statements.
- 2. Motor out of storage after more than three months:**  
Check winding insulation integrity with a Megger. If winding resistance to ground is less than 1.5 Meg-ohms consult the local authorized service shop before energizing the motor.
- 3. Check Installation: Mechanical** - Check tightness of all bolts and nuts. Manually rotate the motor shaft to ensure motor shaft rotates freely. Note: Shaft & bearing seals will add drag.  
**Electrical** - Inspect all electrical connections for proper terminations, clearance, mechanical tightness and electrical continuity. Be sure to verify connections are made per the nameplate connection diagram or separate connection plate. Replace all panels and covers that were removed during installation before energizing the motor.
- 4. Energize Motor: Check Rotation**  
If practical check motor rotation before coupling to the load. Unlock the electrical system. Momentarily provide power to motor to verify direction of rotation. If opposite rotation is required, lock out power before reconnecting motor. If motor has a rotational arrow only operate the motor in the rotation identified. Reapply power to ensure proper operation.
- 5. Record No Load Amps, Watts & Voltage:**  
Recommend - To establish a baseline value check and record the no load amps, watts, and voltage.


#### **3.4.5.2 Start Up – Load Connected Procedure**


- 1. Check Instructions:** Before startup carefully read and fully understand these instructions including all warnings, cautions, & safety notice statements.
- 2. Coupling Installation:** Check that the connected equipment is properly aligned and not binding. Check that all guards and protective devices are properly installed.
- 3. Energize Motor:** When all personnel are clear of the machine, apply power and verify that the load is not transmitting excessive vibration back to the motor through the shaft or the foundation. Verify that motor amps are within nameplate rating. For repeated starts see 3.4.5.3. The equipment can now be fully loaded and operated within specified limits as stated on the nameplate.

#### **3.4.5.3 Jogging and/or Repeated Starts**

## **4.0 MAINTENANCE:**

 **WARNING: Hazardous Locations Motor Repair HAZARD:**  
Division 1 Hazardous Locations motors can only be modified or repaired by the manufacturer or a facility that is Listed under UL's category "Motors and Generators, Rebuilt for use in Hazardous Locations". Failure to follow these instructions could result in serious personal injury, death and/or property damage.

 **WARNING: ELECTRICAL SHOCK HAZARD**  
Electrical connections are to be made by qualified electrical personnel in accordance with all applicable codes, ordinances and sound practices. Failure to follow these instructions could result in serious personal injury, death and/or property damage. Only qualified personnel who are familiar with the applicable national codes, local codes and sound practices should install or repair electric motors and their accessories.

 **WARNING: ELECTRICAL LIVE CIRCUIT HAZARD**  
Do not touch electrically live parts. Disconnect, lockout and tag input power supply before installing or servicing motor (includes accessory devices).

### **4.1 GENERAL INSPECTION**

Inspect the motor approximately every 500 hours of operation or every three months, whichever occurs first. Keep the motor clean and the ventilation and fin openings clear. The following steps should be performed at each inspection:

**4.1.1 VENTILATION:** Check that the ventilation openings and/or exterior of the motor is free of dirt, oil, grease, water, etc, which can accumulate and block motor ventilation. If the motor is not properly ventilated, overheating can occur and cause early motor failure.

**4.1.2 INSULATION:** Use a "Megger" periodically to ensure that the integrity of the winding insulation has been maintained. Record the Megger readings. If winding resistance to ground is less than 1.5 Meg-ohms consult the local authorized service shop before re-energizing the motor.

**4.1.3 ELECTRICAL CONNECTIONS:** Check all electrical connectors to be sure that they are tight.

### **4.2 LUBRICATION & BEARINGS:**

The lubricating ability of grease (over time) depends primarily on the type of grease, the size of the bearing, the speed at which the bearing operates and the severity of the operating conditions. Longer bearing life can be obtained if the listed recommendations are followed:

NOTE: If lubrication instructions are provided on the motor nameplate, the nameplate instructions will supersede these instructions. Motors marked "Permanently Lubricated" do not require additional service.

### **CAUTION: BEARING / MOTOR DAMAGE WARNING**

Lubricant should be added at a steady moderate pressure. If added under heavy pressure bearing shield(s) may collapse. Over greasing bearings greatly increases bearing friction and can cause premature bearing and/or motor failure.

**4.2.1 GREASE TYPE (unless nameplate states otherwise):**  
**Nameplate Ambient Temperature between -30°C (-22°F) to 65°C (150°F) inclusive:** Recommended grease for standard service conditions is Mobil Polyrex® EM. Equivalent and compatible greases include: Texaco Polystar RB, Rykon Premium #2, Pennzoil Pen 2 Lube, Chevron SRI & Mobil SHC 100.

**Nameplate Ambient Temperature below -30°C (-22°F):** Special low temperature grease is recommended, such as Aeroshell 7 or Beacon 325 for ball bearings and Mobil SHC 100 for roller bearings.

**Nameplate Ambient Temperature above 65°C (150°F):** Dow Corning DC44 or equivalent, a special high temperature grease is required. Note that Dow Corning DC44 grease does not mix with other grease types.

For RTD settings see Table 3-7.

#### 4.2.2 BEARING OPERATING TEMPERATURE:

##### CAUTION: HOT SURFACE

The external surface temperature of the end shield (bracket) bearing hub may reach 100° C (212° F) during normal operation. Touching this surface may cause discomfort or injury. Surface temperatures should only be measured with suitable instruments and not estimated by hand touch.

#### 4.2.3 LUBRICATION INTERVALS: (For motors with regreasing provisions)

Eq. 4.2 Lubrication Interval = [(Table 4-1) hrs] x [Interval Multiplier (Table 4-2)] x [Construction Multiplier (Table 4-3)]

**Table 4-1 Lubrication Intervals (Hours)** These values are based on average use.

NEMA / [IEC] Frame Size	Operating Speed – RPM (See Table 3.4 for Maximum Operating Speed)					
	<7200	<5400	<4500	<3600	<1800	<1200
56-180 [80-110]	2500 Hrs.	4000 Hrs	5000 Hrs	6000 Hrs.	17000 Hrs.	20000 Hrs.
210-250 [130-160]		2500 Hrs	4000 Hrs	5000 Hrs.	12000 Hrs.	16000 Hrs.
280 [180]		2000 Hrs	3000 Hrs	4000 Hrs.	10000 Hrs.	14000 Hrs.
320 [200]			2000 Hrs	3000 Hrs.	9000 Hrs.	12000 Hrs.
360 [225]			1500 Hrs	2000 Hrs.	8000 Hrs.	10000 Hrs.
400-440 [250 – 280]				1500 Hrs.	4000 Hrs.	7000 Hrs.
>440 [>280]				1000 Hrs.	3000 Hrs.	5000 Hrs.

**Seasonal Service:** If motor remains idle for more than six months, Lubricate at the beginning of the season, then follow lubrication interval.

**Do not exceed maximum safe operating speed Table 3-4 without manufacturer's approval**

**Table 4-2 Service Conditions**

**Use highest level Multiplier:** Maximum Ambient Temperature and Contamination are independent factors

Severity of Service	Maximum Ambient Temperature	Atmospheric Contamination	Multiplier
Standard	Less than 40° C (104° F)	Clean, Slight Corrosion, indoors, less than 16 hrs per day	1.0
Severe	Above 40° C (104° F) to 50° C	Moderate dirt or Corrosion or outdoors or more than 16 hrs per day	0.5
Extreme	Greater than 50° C or Class H Insulation	Severe dirt or Abrasive dust or Corrosion	0.2

**Table 4-3 Construction Multiplier**

Construction	Multiplier
Angular Contact or Roller Bearing	0.5
Vertical Motor	0.5
All others	1.0

**Table 4-4 Relubrication Amounts**

Frame Size		Volume		
NEMA	IEC	Cu. In.	Fluid oz	ml
48-56	80	0.25	0.14	4.0
143-145	90	0.25	0.14	4.0
182-184	110	0.50	0.28	8.0
213-215	130	0.75	0.42	12.5
254-256	160	1.00	0.55	16.0
284-286	180	1.50	0.83	25.0
324-326	200	2.00	1.11	33.0
364-365	225	3.00	1.66	50.0
404-405	250	3.80	2.11	62.0
444-449	280	4.10	2.27	67.0
>449	>280	4.50	2.50	74.0

For regreasing while operating multiply volume by 125%.

#### 4.2.4 LUBRICATION PROCEDURE: (For Motors with Regreasing Provisions)

##### **CAUTION: BEARING DAMAGE WARNING**

Added grease must be compatible with the original equipment's grease. If a grease other than those stated in 4.2.1 is to be utilized contact the motor manufacturer. Nameplate information supersedes section 4.2.1 (GREASE TYPE). New grease must be free of dirt. Failure to follow these instructions and procedure below may result in bearing and/or motor damage.

For an extremely dirty environment, contact the motor manufacturer for additional information.

##### **LUBRICATION PROCEDURE:**

1. Clean the grease inlet plug or zerk fittings prior to regreasing.
2. (If present) Remove grease drain plug and clear outlet hole blockage.

##### **CAUTION: GREASE DRAIN PLUGGED:**

Old grease may completely block the drain opening and must be mechanically removed prior to regreasing. Forcing a blocked drain open by increased greasing pressure may collapse bearing shields and / or force excess grease through the bearings and into the motor.

3. Add grease per Table 4-4
4. Re-install grease inlet and drain plugs (if removed).

##### **WARNING: EXPLOSION HAZARD**

Do NOT energize a Hazardous Locations motor without all grease fittings properly installed.

#### 4.2.5 EXAMPLE: LUBRICATION

Assume - NEMA 286T (IEC 180), 1750 RPM Vertical motor driving an exhaust fan in an ambient temperature of 43° C and the atmosphere is moderately corrosive.

1. Table 4-1 list 10,000 hours for standard conditions.
2. Table 4-2 classifies severity of service as "Severe" with a multiplier of 0.5.
3. Table 4-3 lists a multiplier value of 0.5 for "Vertical"
4. (Eq. 4.2) Interval = 10,000 hrs x 0.5 x 0.5 = 2500 hrs

Table 4-4 shows that 1.5 in<sup>3</sup> of grease is to be added.

**Relubricate every 2,500 hrs of service with 1.5 in<sup>3</sup> of recommended grease.**

#### 4.3 TROUBLE-SHOOTING

##### **WARNING: READ INSTRUCTIONS:**

Before trouble-shooting a motor, carefully read and fully understand the warnings, cautions, & safety notice statements in this manual.

##### **WARNING: Hazardous Locations Motor Repair:**

Motors nameplated for use in Division 1 Hazardous Locations can only be disassembled, modified or repaired by the plant of manufacturer or a facility that is Listed under UL's category "Motors and Generators, Rebuilt for use in Hazardous Locations". Failure to follow these instructions could result in serious personal injury, death and/or property damage

##### **CAUTION: DISASSEMBLY APPROVAL REQUIRED:**

Motor disassembly must be performed by a party approved by the motor manufacturer. To disassemble the motor without approval voids the warranty.

##### **4.3.1 GENERAL TROUBLE-SHOOTING WARNINGS**

1. **DISCONNECT POWER TO THE MOTOR BEFORE PERFORMING SERVICE OR MAINTENANCE.**
2. **Discharge all capacitors before servicing motor.**
3. **Always keep hands and clothing away from moving parts.**
4. **Be sure required safety guards are in place before starting equipment.**
5. **If the problem persists contact the manufacturer.**

### 4.3.2 Motor Trouble-shooting Cause / Corrective Action - Table 4-5

Issue:		Likely Cause:	Corrective Action:
<b>Motor fails to start upon initial installation:</b>			
	A.)	Supply voltage is too low or is severely unbalanced (one phase is low or missing).	(1) Check power supply fuses (2) Match motor lead wiring to nameplate connection diagram and supply voltage (3) Ensure that steady state supply voltage at motor terminals is within limits (see section 3.4.1.3). Correct as needed (4) Obtain correct motor to match actual supply voltage.
	B.)	Motor leads are miswired at conduit box.	
	C.)	Driven load exceeds motor capacity	(1) Verify that motor & load turn freely (2) Disconnect motor from load & ensure motor turns freely. Note: Roller bearings make noise when motor is uncoupled and shaft is rotated (3) Verify that motor starts when disconnected from load (4) Remove excessive / binding load if present.
	D.)	Load is jammed.	
	E.)	Fan guard is bent and making contact with fan	Replace fan guard & fan (if blades are damaged)
	F.)	VFD with power factor capacitors installed	Remove power factor correction capacitors if equipped
	G.)	VFD with motor neutral lead grounded	Ensure that motor neutral lead is ungrounded
	H.)	VFD programmed incorrectly	(1) Repeat checks listed above (2) Verify that VFD current limit and starting boost are set correctly (5) Double-check motor and feedback parameter settings and VFD permissives (6) Repeat autotune (for vector drives) procedure (7) Consult VFD supplier.
<b>Motor has been running, then slow down, stalls, or fails to restart:</b>			
	A.)	Supply voltage has drooped or has become severely unbalanced	(1) Replace fuse or reset circuit breaker. Allow motor to cool down before resetting manual protector on motor. <b>Warnings</b> - See section 1.1 for automatic and manual reset protector warnings (2) Verify that rated and balanced supply voltage has been restored before restarting motor. Measure voltage during restart. Ensure that steady state supply voltage at motor terminals is within limits (see section 3.4.1.3).
	B.)	Motor is overloaded	(1) Verify that motor & load turn freely. Repair binding components as needed (2) Reduce driven load to match motor capacity or increase motor size to match load requirements.
	C.)	Motor bearings are seized	
	D.)	Load is jammed.	(1) Check fault codes on VFD and follow VFD troubleshooting procedures (2) Verify that VFD input voltage is balanced and within limits (3) Remove excessive mechanical load if present.
	E.)	VFD will not restart motor after tripping	
	F.)	Capacitor failure on single phase motor (if equipped)	<b>Warning: Potential Shock Hazard:</b> Contact service shop to check capacitor.
<b>Motor takes too long to accelerate:</b>			
	A.)	Motor leads are not connected correctly	Match motor lead wiring to nameplate diagram.
	B.)	Supply voltage has drooped or become severely unbalanced.	(1) Ensure that steady state supply voltage at motor terminals is within limits (see section 3.4.1.3). Correct as needed (2) Obtain correct motor to match actual supply voltage.
	C.)	Load exceeds motor capability	Determine correct motor size and contact motor representative to obtain replacement motor.
	D.)	Faulty start capacitor (Single Phase)	Motor may be too small for load. Record acceleration time. Start capacitors may fail if acceleration time exceeds 3 seconds.
	E.)	Mechanical Failure	(1) Check to make sure motor & load turn freely (2) Disconnect motor from load & ensure motor turns freely
<b>Motor rotates in the wrong direction:</b>			
	A.)	Incorrect wiring connection at motor	[Single Phase] Reconnect motor according to wiring schematic provided. Note: Some motors are non-reversible [Three Phase] Interchange any two power supply (phase) leads.
<b>Motor overheats or overload protector repeatedly trips</b>			
	A.)	Driven Load is excessive	(1) If motor current exceeds nameplate value, ensure that driven load has not increased. Correct as needed. (2) If new motor is a replacement, verify that the rating is the same as the old motor. If previous motor was a special design, a general purpose motor may not have the correct performance.
	B.)	Ambient temperature too high	Most motors are designed to operate in an ambient up to 40 °C. (See section 4.2.2 Hot Surface Caution)
	C.)	Motor cooling fins and/or vent openings blocked	Remove foreign materials – clear vent openings, fan guard air inlets and frame fins (TEFC motors)
	D.)	Insufficient Air Flow	TEAO (Totally Enclosed Air Over) motors: Measure airflow next to motor surface and obtain minimum requirements from motor manufacturer.



<b>E.)</b>	Motor is started too frequently	See section 3.4.5.3
<b>F.)</b>	Supply voltage too low, too high, or unbalanced	(1) Ensure that steady state supply voltage at motor terminals is within limits (see section 3.4.1.3) Correct as needed (2) Reconnect motor per input voltage (3) Obtain correct motor to match power supply.

### Motor Vibrates

<b>A.)</b>	Motor misaligned to load.	Realign load
<b>B.)</b>	Load out of balance (Direct drive application)	(1) Ensure that load is dynamically balanced: (2) Remove motor from load and inspect motor by itself. Verify that motor shaft is not bent. Rule of thumb is 0.002" runout for shafts extension lengths up to 3.00". Add 0.0005" per every additional inch of shaft length beyond 3.00".
<b>C.)</b>	Uneven tension on multiple belts	Mixing new with used belts. Replace multiple belt applications with a complete set of matched belts.
<b>D.)</b>	Driven load operating at resonant point / natural frequency.	(1) De-energize motor and record vibration as load coasts from 100% speed to 0 RPM. If vibration drops immediately, vibration source is electrical. If levels do not drop immediately, source is mechanical (2) Redesign system to operate below the resonant point (3) On VFD-driven loads, program skip frequencies to bypass resonant points (4) Increase carrier frequency to obtain <3% THD current (5) On variable torque loads reduce volts/hertz below base speed.
<b>E.)</b>	VFD torque pulsations	(1) Adjust VFD to obtain <3% THD current @ rated motor current (2) Adjust VFD stability for smooth operation. Vector drives may be unstable at light load.
<b>F.)</b>	Motor miswired at terminal box	Match motor lead wiring to nameplate connection diagram.
<b>G.)</b>	Uneven, weak or loose mounting support.	Shim, strengthen or tighten where required.
<b>H.)</b>	Motor bearings defective	Test motor by itself. If bearings are bad, you will hear noise or feel roughness. Roller bearings are normally noisy when operated without load. If sleeve bearing, add oil per nameplate instructions. For motors with regreasing provisions, add grease per relubricating instructions (see section 4.2.3). If noise persists contact warranty service.
<b>I.)</b>	Motor out of balance	Disconnect from load. Set motor on rubber pads on solid floor. Secure a ½ height key in shaft keyway and energize from balanced power supply @ rated voltage. Record vibration levels and compare with appropriate standards. If excessive vibration persists contact motor manufacturer.

### Bearings repeatedly fail.

<b>A.)</b>	Load to motor may be excessive or unbalanced	(1) If belt drive check system per section 3.3.4. (2) Other than belting, check loading on motor shaft. An unbalanced load will also cause the bearings to fail. (3) Check runouts of mating components, such as a C-face and pump flange.
<b>B.)</b>	Bearings contaminated.	Motor enclosure not suitable for environment. Replace with correct enclosure construction
<b>C.)</b>	Incorrect grease or bearings for ambient extremes.	See section 4.2.1
<b>D.)</b>	VFD bearing damage	Ground brush, common mode filter, or insulated bearings must be added. Contact motor manufacturer.

### Motor, at start up, makes a loud rubbing, grinding, or squealing noise.

<b>A.)</b>	Contact between rotating and stationary components	Belt squeal during across the line starting is normal: (1) Verify that supply voltage is within limits (see section 3.4.1.3). (2) Ensure that motor lead wiring matches nameplate connection diagram: (3) Isolate motor from load. (4) To locate point of contact turn motor shaft by hand. (5) If point of contact is not located contact motor service shop.
------------	--	--

### Start capacitors repeatedly fail.

<b>A.)</b>	The motor acceleration time is too long	Motor may be too small for load. Record acceleration time. Start capacitors may fail if acceleration time exceeds 3 seconds.
<b>B.)</b>	Motor is being started too frequently	Excessive starting will damage motor capacitors. Contact motor manufacturer if motor is started more than 20 times/hour or if acceleration time exceeds 3 seconds.
<b>C.)</b>	Motor voltage low	Verify that voltage at the motor terminals is within limits (see section 3.4.1.3).
<b>D.)</b>	Defective start switch inside motor	Motor internal switch failure overheats start capacitor. Contact service shop or motor manufacturer.

### Run capacitor fails.

<b>A.)</b>	High ambient temperature	Verify that the ambient does not exceed motor's nameplate value
------------	--------------------------	---

	<b>B.)</b>	Input voltage exceeds limit	Verify that voltage to the motor terminals is within limits (see section 3.4.1.3).
	<b>C.)</b>	Power surge to motor (caused by lightning strike or other high transient voltage).	If a common problem, install surge protector.



## Great Britain

SEEPEx UK Ltd.  
3 Armtech Row  
Houndstone Business Park  
Yeovil Somerset BA22 8RW  
Tel +44.1935.472376  
Fax +44.1935.479836  
sales@seepex.co.uk

## Austria

SEEPEx GmbH  
Vertriebsbüro Österreich  
Obermüllergasse 18  
3003 Gablitz  
Tel +43.2231.61085  
Fax +43.2231.6108520  
hfriedl@seepex.com

## Belgium

SEEPEx GmbH  
Bureau België  
Industriezone Klein Gent-Link 21  
Welvaartstraat 14-1 bus 15  
2200 Herentals  
Tel +32.14.501471  
Fax +32.14.501461  
seepex.be@seepex.com

## Denmark

SEEPEx Nordic A/S  
Krakasvej 7C  
3400 Hillerød  
Tel +45.49.192200  
Fax + 45.49.193200  
info.nordic@seepex.com

## France

SEEPEx France SARL  
1, Rue Pelloutier  
77183 Croissy Beaubourg  
Tel +33.1.64114450  
Fax + 33.1.64114489  
info.fr@seepex.com

## Hungary

SEEPEx GmbH  
Magyarországi iroda  
Hecskó Tamás okl.vill.mérn.  
Éva utca 5.  
7632 Pécs  
Tel +36.205806134  
Fax +36.72952587  
thecsko@seepex.com

## Ireland

SEEPEx UK Ltd.  
Branch Office Ireland  
29 Lackenfune  
Dungarvan  
Co. Waterford  
Tel +353.860450439  
sales@seepex.co.uk

## Italy

SEEPEx Italia S.r.l.  
Via Alberto da Giussano 23  
20145 Milano (MI)  
Tel +39.02.36569360  
Fax +39.02.92877855  
info.it@seepex.com

## Poland

SEEPEx GmbH  
Przedstawicielstwo w Polsce  
ul. Romana Maya 1  
61-371 Poznań  
Tel +48.61.6469270  
Fax +48.61.6469271  
info.pl@seepex.com

## Sweden

SEEPEx Nordic A/S  
Hamndalsvägen 58  
61633 Åby  
Tel +46.1166940  
Fax +46.1166941  
info.nordic@seepex.com

## Spain

SEEPEx GmbH  
Oficina de Representación en España  
C/Copenhagen, 12  
Edif. Tifan Oficina 207  
28232 La Rozas  
Madrid  
Tel +34.91.6361353  
Fax +34.91.6409371  
info.es@seepex.com

## The Netherlands

SEEPEx GmbH  
Bureau Nederland  
Visbystraat 13  
7418 BE Deventer  
Tel +31.570.516644  
Fax +31.570.516077  
seepex.nl@seepex.com

## Russia

SEEPEx Ltd. Ugreshskaya  
Str. 2 Bldg. 23  
115088 Moscow  
Tel +7.495.2874830  
Fax +7.495.2874830  
info.cis@seepex.com

## USA

SEEPEx Inc.  
511 Speedway Drive  
Enon  
Ohio 45323  
Tel +1.937.8647150  
Fax + 1.937.8647157  
sales.us@seepex.com

## China

SEEPEx Pumps (Shanghai) Co., Ltd.  
Xuanzhong Rd. 399, Building 13  
Nanhui Industrial Area  
201300 Shanghai  
Tel +86.21.38108888  
Fax +86.21.38108899  
info.cn@seepex.com

## India

SEEPEx India Pvt. Ltd.  
Office No. 305.  
Raheja Arcade Building  
Sector 11, C.B.D. Belapur  
Navi Mumbai 400614  
Tel +91.22.40240434/35  
Fax +91.22.40240436  
info.ind@seepex.com

## Japan

日本シーベックス株式会社  
German Industry Park  
1-18-2 Hakusan, Midori-ku  
Yokohama 226-0006  
Tel +81.46.2595931  
Fax +81.46.2595941  
info.jp@seepex.com

## Malaysia

SEEPEx (M) Sdn. Bhd.  
No. 2, Jalan 51/203A  
Kaw. Perindustrian Tiong  
Nam Seksyen 51  
46050 Petaling Jaya Selangor  
Darul Ehsan  
Tel +60.3.88009988  
seepex.m@seepex.com

## Australia

SEEPEx Australia Pty. Ltd.  
Unit 3, 4 Bounty Close  
Tuggerah Business Park  
NSW 2259  
Tel +61.2.43554500  
Fax +61.2.43554022  
info.au@seepex.com



*LEFT BLANK*





MANUFACTURER INSTALLATION OPERATION AND MAINTENANCE MANUAL  
AMARUQ WTP – NUNAVUT  
VEOLIA PROJECT: 5000 218 009

---

***SEEPEX***

***SERIES BN 17-06, PROGRESSIVE CAVITY PUMP (SLUDGE TREATMENT)  
(P5-011/012)***

---

**WATER TECHNOLOGIES**

*LEFT BLANK*

## Operating and Assembly Instruction Progressive Cavity Pump

Commission-no.  
868812 - 868813

Type  
BN 17-6L

Read instructions before  
beginning any work!

Always keep instructions  
handy on the worksite.

Original Instructions



<b>1</b>	<b>Safety.....</b>	<b>1</b>
1.1	General notes	
1.2	Safety and warning notes	
1.2.1	Warning notes	
1.2.2	Danger symbols	
1.2.3	Information symbols	
1.3	Dangers that can be caused by the machine	
1.4	Qualification of the personnel	
1.5	Authorized people	
1.5.1	Tasks and information for the owner/operators	
1.5.2	Safety notes for maintenance, inspection and assembly work	
1.6	Personal protective equipment	
1.7	Safety and protective devices	
1.8	Foreseeable misuse	
1.9	Designated use	
1.10	Warranty	
<b>2</b>	<b>Description of the pump.....</b>	<b>5</b>
2.1	General description	
2.2	Mode of action and pumping principle of the pump	
2.3	Constructive design	
<b>3</b>	<b>Technical Data.....</b>	<b>6</b>
3.1	Data sheet.....	8
3.2	Characteristic Curves.....	11
<b>4</b>	<b>Transport, Intermediate storage, Disposal.....</b>	<b>12</b>
4.1	Safety	
4.2	Transport	
4.2.1	Dimensions, weight and center of gravity	
4.2.2	Symbol	
4.2.3	Lashing points (AP) for lifting devices	
4.2.4	Unpacking the machine	
4.3	Temporary storage/corrosion protection	
4.4	Disposal	



<b>5</b>	<b>Assembly / Installation.....</b>	<b>15</b>
5.1	Mounting tools / lifting gear	
5.2	Space requirement	
5.2.1	Dimension for stator replacement	
5.3	Assembly of the complete mounted pump	
5.4	Power supply of the pump	
5.5	Pipelines	
5.5.1	Suction and pressure connection	
5.5.2	Pipeline dimensions	
5.5.3	Residue-free pipelines	
5.5.4	Tension-free assembly	
5.6	Dimensional Drawing.....	17
<b>6</b>	<b>Commissioning / De-Commissioning .....</b>	<b>18</b>
6.1	Commissioning report.....	18
6.2	Measures before commissioning.....	20
6.2.1	Checking pipelines	
6.2.2	Protective devices on the pump	
6.2.3	Electrical / hydraulic connections	
6.2.4	Direction of rotation check	
6.2.5	Additional devices - optional	
6.3	Initial commissioning/repeated commissioning	
6.3.1	Avoiding dry running of the pump	
6.3.2	Pressure in the suction and pressure connection	
6.4	De-commissioning	
6.4.1	Switching off the pump	
6.4.2	Emptying the pump	
6.4.3	Dismantling the pump	
6.4.4	Preservation/storage of the pump	
<b>7</b>	<b>Maintenance.....</b>	<b>25</b>
7.1	Preventative measures	
7.1.1	Pump down-time	
7.2	Lubrication	
7.2.1	Joint grease	
7.3	Inspection	
<b>8</b>	<b>Malfunctions, causes, rectification.....</b>	<b>27</b>
<b>9</b>	<b>Pump Dismantling / Reassembly .....</b>	<b>29</b>
9.1	Pump Dismantling / Reassembly .....	29
9.1.1	Prepare the pump for dismantling	
9.1.2	Dismantling	
9.1.3	Reassembly	

9.2	Rotating unit – individual parts .....	35
9.2.1	Dismantling	
9.2.2	Rotating unit (RTE) - prepare individual parts for reassembly	
9.2.3	Rotating unit (RTE) - individual parts - reassembly	
9.3	Holding band - assembly.....	39
9.3.1	Prepare the holding band	
9.3.2	Check the holding band	
9.3.3	Assembling the holding band	
9.3.4	Correct tension for the holding band (HBD)	
9.3.5	Cant up the holding band	
9.3.6	Shear the holding band	
9.3.7	Check the holding band after assembly	
9.4	Single acting mechanical seal .....	41
9.4.1	Safety	
9.4.2	Application conditions and material version	
9.4.3	Design	
9.4.4	Commissioning	
9.4.5	Monitoring during operation	
9.4.6	Dismantling of mechanical seal	
9.4.7	Reassembly of mechanical seal	
9.6	Sectional drawing shaft sealing.....	44
<b>10</b>	<b>Spare parts.....</b>	<b>46</b>
10.1	Order template for spare parts.....	48
10.2	Sectional drawing.....	51
10.2.1	Parts list.....	52
<b>11</b>	<b>Special tools .....</b>	<b>54</b>
<b>12</b>	<b>Related documents.....</b>	<b>56</b>
12.1	Accessories .....	58
12.1.1	Accessorie TSE.....	58
12.1.2	Drawing TSE	
12.1.3	Part list TSE	
12.2	Technical Information.....	72
12.4	Warranty Card.....	74
12.5	Terms and Conditions .....	76
<b>13</b>	<b>Appendix.....</b>	<b>79</b>
13.1	Manufacturer's documents / suppliers	
13.1.1	Gearbox.....	80

## Subsidiaries



## 1.1 General notes

- Always keep the operating and maintenance instructions close by the machine.
- If problems cannot be solved with reference to the operating and maintenance instructions, please contact the manufacturer.

Observe the following points in addition to these operating and maintenance instructions:




- Prohibition, warning and mandatory signs, warning notes on the machine
- Relevant laws and ordinances
- Statutory provisions on accident prevention
- Corresponding harmonized standards and regulations

## 1.2 Safety and warning notes

- Comply with safety and warning notes for safe and efficient use of the product.

Signal words for specific dangers and (possible) consequences are explained below. These are supplemented by symbols (pictograms) if necessary.

### 1.2.1 Warning notes

<b>NOTICE</b>	
<b>Caution for machine!</b> Possible danger. Material damage can occur.	
	<b>CAUTION</b>
<b>Caution for people and machine!</b> Possible danger. Minor injury or damage to property can occur.	
	<b>WARNING</b>
<b>Warning for people!</b> Possible danger. Death or serious injury can occur.	
	<b>DANGER</b>
<b>Danger for people!</b> Possible danger. Immediate risk of severe or fatal injury.	


## 1.2.2 Danger symbols



**Warning:**  
Suspended load.



**Warning:**  
Tipping over.



**Warning:**  
Hand injuries.



**Warning:**  
Dangerous electrical voltage.



**Warning:**  
Pull-in hazard.



**Warning:**  
Excess pressure.



**Warning:**  
Risk to the environment.



**Warning:**  
Hot surfaces.

## 1.2.3 Information symbols


*NOTICE*



**Observe operating and maintenance instructions.**



**Ensure environmental protection.**

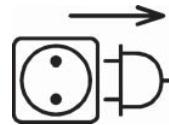

**Disconnect power plug before opening.**



**Wear eye protection.**



**Wear gloves.**

- Instruction to act/take measures
- List item

### 1.3 Dangers that can be caused by the machine

SEEPEx machines are built in accordance with the state of the art.

Nevertheless, there is a residual risk, because the machine works with:

- Mechanical movements that pose a danger
- Electrical voltages and currents

We have used design measures and applied safety technology to minimize the risk to the health of people posed by this danger.

### 1.4 Qualification of the personnel

This handbook is intended for:

- Owner
- Operators
- Setters
- Maintenance personnel

### 1.5 Authorized people

People authorized to undertake operation, set up and maintenance are instructed and trained specialists employed by the owner/manufacture.



Detailed technical knowledge is essential for performing any work on the machine.

The owner is responsible for:

- Personnel training
- Compliance with safety regulations
- Compliance with operating and maintenance instructions

The operator must:

- Have received instruction
- Read and understood the relevant parts of the operating instructions before starting work
- Know the safety devices and regulations

#### 1.5.1 Tasks and information for the owner/operators

- Regularly check and maintain the machine, replacing all parts in good time which no longer guarantee safe operation.
- It is essential to comply with the procedure described in the operating instructions for shutting down the machine.
- On completion of work, attach all safety and protective devices and make sure they are functioning.

#### 1.5.2 Safety notes for maintenance, inspection and assembly work

- Do not work on the machine or system unless it is stationary and depressurised.
- Switch off the master switch and pull out the power plug before starting work on live components.
- Comply with the procedure for shutting down the machine as described in the Shut-down chapter.
- Decontaminate (de-toxify) machines that are used for pumping media that can be harmful to health.
- Refer to the Initial start-up chapter before repeated start-up of the machine.



## 1.6 Personal protective equipment

- Wear personal protective equipment and/or additional equipment for your own safety.
- Avoid/limit risks by the use of collective technical protective equipment or by organisational measures at work.

## 1.7 Safety and protective devices

- Prior to start-up, bolt SEEPEX machines onto a concrete foundation so as to ensure stability.
- Starting and stopping devices must be clearly recognisable. Take appropriate measures to avoid defects.
- No protective device is necessary for checking and/or setting the shaft seal.
- Hot surfaces are identified with a danger symbol on the machine.


## 1.8 Foreseeable misuse

Serious personal injury and damage to property can be caused by:

- Incorrect use
- Incorrect installation or operation of the machine
- Impermissible removal of necessary protective equipment

## 1.9 Designated use

- Only use SEEPEX machines if they are in perfect condition and in compliance with the operating and maintenance instructions.
- Do not start up the machine unless the system in which the machine is installed is in accordance with the provisions of the applicable guidelines and statutory regulations.
- Equivalent sustained sound pressure level at workplaces of operating personnel C75 dB (A). Cavitation-free operation of the machine and screwed connection to concrete foundation are essential.
- SEEPEX machines are components that are exclusively intended for pumping media in accordance with the technical data (chapter 3.0). Written approval must be obtained from the manufacturer before other media are pumped.
- Refer to the information on the type plate and the operating instructions for technical data (chapter 3.0), and comply with them.
- The operating instructions are assigned to the SEEPEX machine based on the commission number.

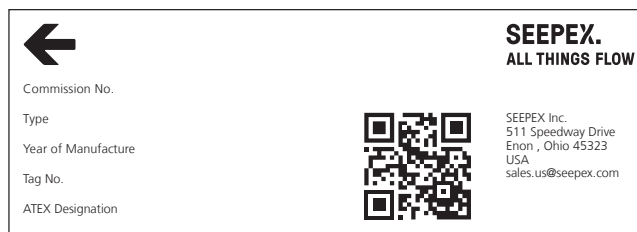

*Similar illustration*

## 1.10 Warranty

- Warranty in accordance with our terms and conditions of delivery and order confirmation.
- It is a condition of the machine warranty that the machine must correspond to the listed operating instructions in accordance with the type plate/data sheet.
- All wearing parts are excluded from the warranty.
- These operating instructions are subject to copyright. Reproduction is not permitted and will be punished. Contravention will be pursued through the courts.

### 2.1 General description

seepex pumps are members of the group of rotating displacement pumps.

- Characteristic features
  - Special configuration/arrangement of the rotor and stator pumping elements.
  - Motion sequence

### 2.2 Mode of action and pumping principle of the seepex pump


- Seal lines are created by the geometrical configuration/contact between both pumping elements.
- Seal lines provide total separation between the suction and pressure sides.

Result:

- Increased suction lift capability of the pump
- High pressure build-up irrespective of the rotation speed

### 2.3 Constructive design

No.	Designation
ANT	Drive
200	Lantern
307	Plug-in shaft
400	Coupling rod
SEA	Shaft seal
500	Suction casing
600	Rotor
RTE	Rotating unit
601	Stator
700	Pressure branch

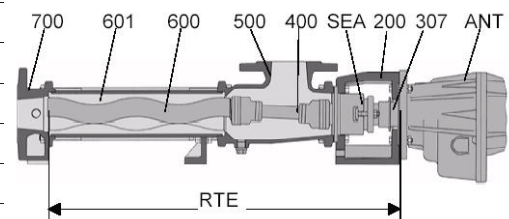



3.1 Data sheet

3.2 Characteristic Curves



## Progressive cavity pump

### BN 17-6L / A1-J0-L8-F0-GA

U 495 XXX001

#### Application data

Conveyed product	sludge
Flowability	flowable
Viscosity	low viscosity (<500 cP/mPas)
Solids content	not specified
Size of solids	not specified
Specific gravity	unknown, 1 kg/dm³ assumed
Product temperature	32°F - 113°F
pH value	5-9
Kind of operation	continuous
Operating hours	8h/day
Location	indoor, dry atmosphere
Altitude of installation	up to 1000 m assumed
Surrounding temperature	normal (32-113°F)

#### Performance data

	Capacity	Pressure	Speed	
	88 USGPM	50 psi	369 rpm	norm
Starting torque	160 lb.ft			
Req. power at pump shaft	4.8 HP			
Inlet pressure	flooded suction (up to 0,5bar)			
NPSHr	10.58 ft			

Tolerances according to SEEPEX standards.


#### Materials and executions

Installation	horizontal
Direction of rotation	counter clockwise (left)
Lantern - Design	with cover plates
Lantern - Material	EN-JL 1040 (gci-25)
Lantern - Flange diameter	250 mm
Suction casing - Design	standard
Suction casing - Material	EN-JL 1040 (gci-25)
Pressure branch - Design	standard
Pressure branch - Material	EN-JL 1040 (gci-25)
Position of branch	position 1
Suction connection	DN 4" ANSI B16.5 Class 150
Pressure connection	DN 3" ANSI B16.5 Class 150
Joint - Design	pin joint with joint sleeve, grease filled
Joint - Material	standard
Joint - Universal joint sleeve: material	NBR - Perbunan
Joint - Joint Grease	joint grease SEEPEX 30321
Coupling rod - Design	standard
Coupling rod - Material	1.4404 / AISI 316L
Rotor - Design	standard
Rotor - Material	1.0503 (C45) / AISI 1045
Rotor - Coating	ductile chromium coating
Stator - Design	standard with TSE, sensor sleeve 1.4404
Stator - Material	NBR - Perbunan
Shaft sealing	mechanical seal
Code	single acting mech. seal - GA
Shaft diameter	55 mm
Make	Burgmann
Type	MG1-G60 Q1Q1 VGG
Casing - material	1.4408 / ASTM A351 grade CF8M
Casing - connection standard	NPT
Plug-in Shaft - Design	standard
Plug-in Shaft - Material	1.4404 / AISI 316L
Plug-in Shaft - Drilling diameter	40
Plug-in Shaft - Drilling depth	75
Bolting - Design	standard
Painting - Number of colors	single-colored standard
Painting - Painted components	1 complete combination
Painting - Color	Standard Enamel (SEEPEX Blue)

<b>Drive</b>	
<b>Drive Type</b>	Gear & Motor
<b>Type</b>	Gear
<b>Make</b>	Nord
<b>Model</b>	SK32ALF-210TC
<b>Mounting position</b>	B5
<b>Ratio (i)</b>	4.43
<b>Flange diameter</b>	250 mm
<b>Shaft diameter</b>	40 mm
<b>Shaft length</b>	80 mm
<b>Shaft drawing</b>	716/0100-003B4
<b>Speed</b>	<b>Norm</b> 406 rpm
<b>Frequency</b>	60 Hz
<b>Type</b>	Motor
<b>Make</b>	Marathon Motors
<b>Model</b>	213THTL7736
<b>Rated output</b>	7.5 HP
<b>Rated speed</b>	1800 rpm
<b>Mounting position</b>	B3/B5
<b>Starting</b>	DOL (direct on line)
<b>Explosion proof</b>	Weatherproof
<b>Efficiency class</b>	IE1
<b>Winding protection</b>	Thermostats
<b>Voltage</b>	rated voltage 575V
<b>Frequency</b>	60Hz
<b>Thermal class</b>	F
<b>Enclosure</b>	TENV
<b>Baseplate</b>	
<b>Design</b>	baseplate for block pump, design with side feet
<b>Material</b>	steel, painted
<b>GPU Type Code</b>	B-ST-LS
<b>TSE</b>	
<b>Design</b>	standard design, complete - sensor sleeve fitted to the stator of the pump with integrated temperature sensor - connection head (IP55) - separate TSE control device suitable for mounting inside a control panel
<b>Voltage</b>	110-115V/50-60Hz
<b>Temperature coefficient</b>	NTC
<b>Material sensor sleeve</b>	1.4404
<b>Material connection head</b>	aluminium
<b>Packing</b>	
<b>Type of packing</b>	crate (US)
<b>Miscellaneous</b>	
<b>Design</b>	Tag each: P5-011, P5-012 Tag both: PI005
<b>Documentation</b>	



Characteristic Curves  
Size  
**17-6L**

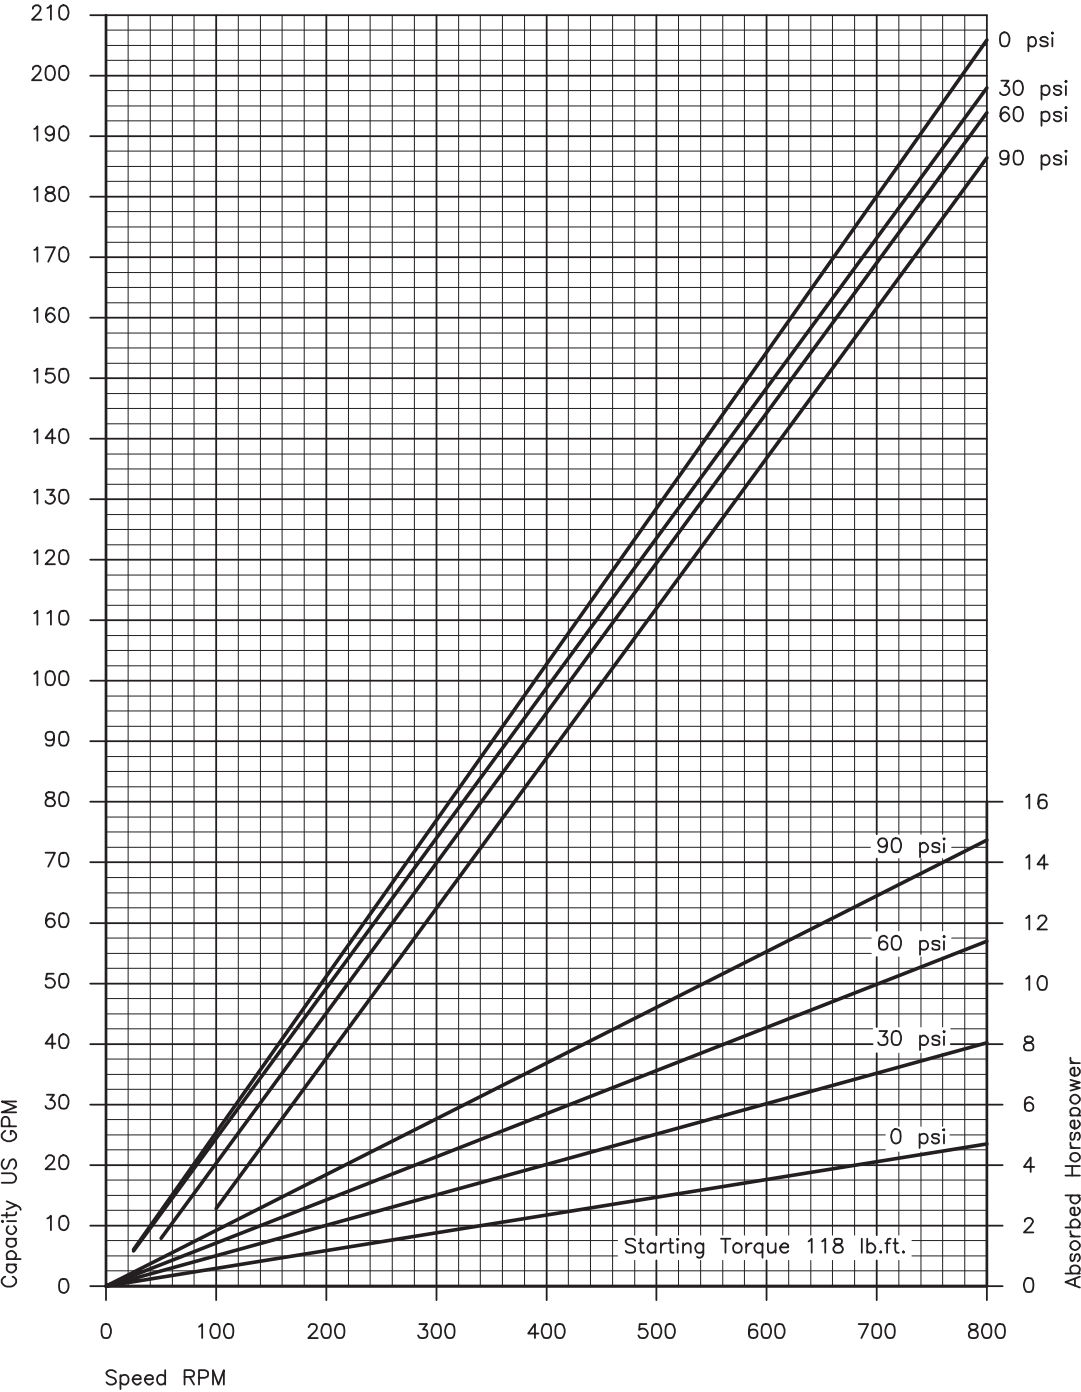

Values based upon water 68°F ; For notes on drive selection refer to PER

CHA.17-6L\_6, B 12.02us



## 4.1 Safety

<b>CAUTION</b>
<p><b>Damage to property/injuries due to incorrect transport.</b> Slight injury or damage to property can occur.</p> <ul style="list-style-type: none"> <li>➤ Comply with the safety notes and transport notes on the packaging.</li> <li>➤ Use suitable means of transport, lifting devices and tools.</li> <li>➤ Use protective equipment.</li> </ul>

## 4.2 Transport

### 4.2.1 Dimensions, weight and centre of gravity

- Note the dimensional drawing (chapter 5.6).

### 4.2.2 Symbol

- Meaning of symbol



Top




Fragile  
item



Against moisture  
protect



Centre of gravity

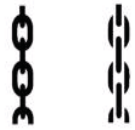


Lashing points


### 4.2.3 Lashing points (AP) for lifting devices

	<p style="text-align: center;"> <b>WARNING</b></p> <p><b>Warning of suspended load.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Use the lashing points (AP) for lifting devices.</li> <li>➤ Note the centre of gravity (dimensional drawing chapter 5.6).</li> </ul>
--	--

Lifting machine

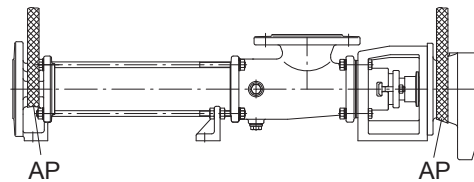

Industrial trucks

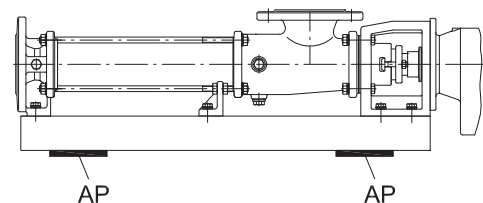

### 4.2.4 Unpacking the machine


- Comply with the symbols and notices on the packaging.
- Remove the screwed connection between the machine and packaging.
- Remove the machine with a lifting machine/industrial truck.

#### 4.3 Temporary storage/corrosion protection



- All SEEPEX machines have corrosion protection applied as standard prior to transport.

<i>NOTICE</i>
<p><b>Damage to property if corrosion protection is missing.</b> Property damage can occur due to corrosion.</p> <ul style="list-style-type: none"> <li>➤ Temporary storage must be in a dry, enclosed, frost-free room in order to provide protection against ambient influences.</li> <li>➤ Contact SEEPEX regarding the necessary corrosion protection for temporary storage.</li> </ul>

#### 4.4 Disposal

	<i>NOTICE</i>
	<p><b>Environmental protection.</b> Material damage can occur.</p> <ul style="list-style-type: none"> <li>➤ Drain the pumping medium and dispose of it in accordance with the regulations.</li> <li>➤ Dispose of the machine with regard to its composition and existing regulations.</li> </ul>

### 5.1 Mounting tools / lifting gear

	 <b>CAUTION</b>
	<p><b>Pump falling over.</b> Slight injury or damage to property can occur.</p> <ul style="list-style-type: none"> <li>➤ Adhere to the lifting tool's starting point.</li> <li>➤ Pay attention to the dimensions, weight and centre of gravity of the pump.</li> <li>➤ Use suitable mounting tools/lifting gear.</li> </ul>


### 5.2 Space requirement

The required space should be determined by considering the following factors:

- Dimensions and weight.
- Requisite transport and lifting equipment.
- Pipe routing – dismantling (dimension for stator replacement).

#### 5.2.1 Dimension for stator replacement (P)

- Refer to the dimensional drawing.

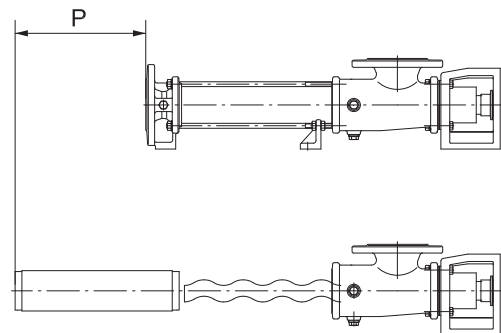

### 5.3 Assembly of the complete mounted pump



- Assemble according to technical data (chapter 3.).
- Note dimensional drawing.

#### Tension-free mounting of the pump



- Balance unevenness with suitable supports.
- Applies to mounting on foundations/load-bearing elements.
- Total areas of all pump bearing areas are resting on the surface.

#### Correct position of the drives

- All drives are set up ready for operation and mounted.
- Correct displacements of the drive during transport/installation of the pump by adjusting/fixing the drive.

	 <b>CAUTION</b>
	<p><b>Safety protection devices.</b> Slight injury or damage to property may result.</p> <ul style="list-style-type: none"> <li>➤ Connect safety protection devices and activate.</li> </ul>

#### 5.4 Power supply of the SEEPEX pump

	 <b>DANGER</b>
	<p><b>Line voltage and line frequency.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Note type plate on the pump.</li> <li>➤ Pay attention to manufacturer's directions (chapter 13.).</li> <li>➤ Pay attention to safety regulations.</li> </ul>

#### 5.5 Pipelines

##### 5.5.1 Suction and pressure connection

- Refer to the dimensional drawing for the position, nominal width and standard.
- Note direction of rotation/flow direction.

##### 5.5.2 Pipeline dimensions



- Adhere to specifications regarding pressure in the pressure respectively suction connection.
- Note technical data (chapter 3.).
- Nominal width of suction pipe = nominal width of suction connection of pumps.

##### 5.5.3 Residue-free pipelines

<b>NOTICE</b>
<p><b>Damage to property through assembly residue.</b> No claims under guarantee if violated.</p> <ul style="list-style-type: none"> <li>➤ Keep all pipelines free of foreign objects.</li> <li>➤ Remove weld spatters, screws, steel chips etc.</li> </ul>

##### 5.5.4 Tension-free assembly

- Assemble pipelines and other components in a tension-free manner on the pump.

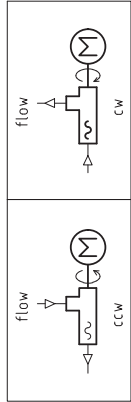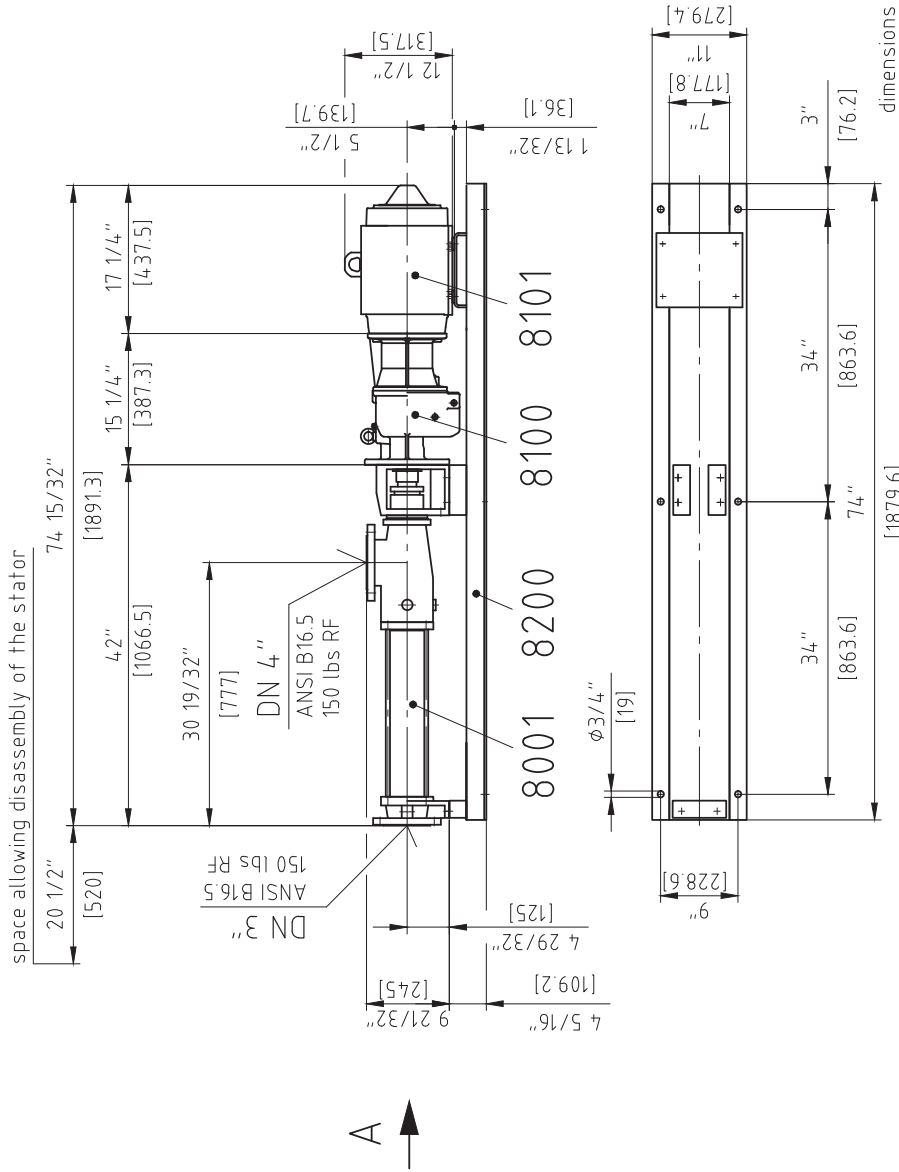

1	baseplate:	8200	Var.: 801-200/0100-C-753	52
1	motor: Marathon 213THL7736	8101		67
1	gear: Nord SK32F-210TC	8100		46
1	pump: BN 10-12 / 17-6L / 30-6LT / 15-12T	8001		57
Quant.	Denomination	Item	Material	Note
	2018	Day	Scale	Weight
	Drawn	cbo	1:20	222 kg
	Checked	lsh	EDP-No.	Denomination
			172018.dwg	dimensional drawing
				Drawing-no.
				262-C65/0100-C-746A4
				Weight / kg

**SEEPEX.**  
**ALL THINGS FLOW**





## Master Copy

### 6.1 Commissioning report

Send commissioning report online to  
[www.seepex.com](http://www.seepex.com)

**Must be specified with every order!**

**Commission:**

\_\_\_\_\_

**Model:**

\_\_\_\_\_

**From:**

Contact person: .....

Tel.: .....

Fax: .....

E-mail: .....

**Customer Service:**

SEPEX Inc.

511 Speedway Drive

Enon, Ohio 45323

service@seepex.com

**Address of plant:**

.....  
.....  
.....  
.....  
.....

Delivery date:

Date of installation:

Assembly check carried out on:

Please enter operational data:

Conveying liquid:

Temperature:

Fuse level/motor protection or power  
consumption

Frequency control

☐ no

☐ yes

If yes:

☐ Supplied by SEPEX

☐ Supplied by customer

Frequency:

Speed:

Power  
consumption:

Place, date

Signature / company stamp




## 6.2 Measures before commissioning


- Note the technical data (chapter 3.).

### 6.2.1 Checking pipelines

- Check flange screwed connections (SCH).

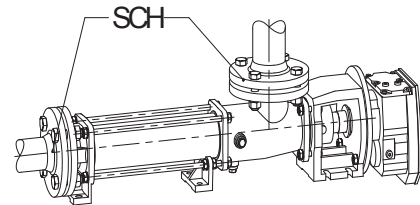

- Check threaded connections (G).

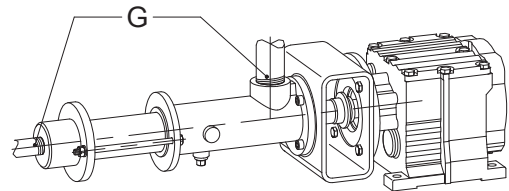

#### NOTICE

**Ensure the liquid can flow through without obstruction.**

Malfunction and/or irreparable damage to the pump.

- Open all shut-off elements before switching on the pump.

### 6.2.2 Protective devices on the pump


	<b>DANGER</b>
	<p><b>Missing protective device.</b> Danger of pulling in and crushing.</p> <ul style="list-style-type: none"> <li>➤ Equip the pump with a protective device. Protective devices provided for preventing contact with surfaces or moving parts must be regarded as suitable if contact is not possible in a test involving a test finger, with regard to the penetration possibility, strength and shock resistance.</li> <li>➤ Comply with national protection regulations.</li> <li>➤ In pumps with an open suction flange/feed hopper, attach touch protection. These safety clearances protect those persons who are attempting to reach danger areas without additional help and under the conditions defined for various situations of reaching up, reaching under or reaching through</li> </ul> <p>In shaft seals, touch protection is only necessary if there are components on the rotating shaft.</p>

### 6.2.3 Electrical/hydraulic connections

	<b>DANGER</b>	
	<p><b>Dangerous voltage.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Observe safety regulations.</li> <li>➤ Disconnect the pump from all sources of energy.</li> <li>➤ Prevent electrical connections from being switched on again.</li> </ul>	

#### 6.2.4 Direction of rotation check

- The pump direction of rotation determines the flow direction of the pumping medium.
- Note the direction of rotation arrow on the type plate.

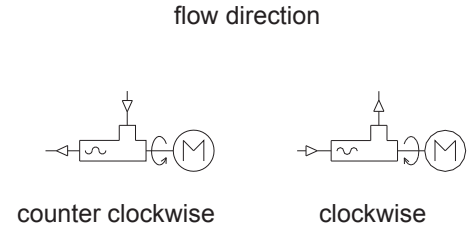

#### 6.2.5 Additional devices - optional

- Refer to additional devices (chapter 12.1).

#### 6.3 Initial commissioning/repeated commissioning



- Start up the pump.

<i>NOTICE</i>
<p><b>Dry running of the pump.</b> Malfunction and/or irreparable damage to the pump.</p> <ul style="list-style-type: none"> <li>➤ Fill the suction casing with liquid in order to lubricate the pumping elements.</li> </ul>

##### 6.3.1 Avoid dry running of the pump

<i>NOTICE</i>
<p><b>High temperature between rotor and stator.</b> Stator material burned. Complete failure of the pump</p> <ul style="list-style-type: none"> <li>➤ Make sure that the suction-side conveying capacity does not cavitate.</li> <li>➤ If this cannot be guaranteed on the machine side, assemble a SEEPEX dry running protection (DRP).</li> </ul>

##### 6.3.2 Pressure in the suction and pressure connection


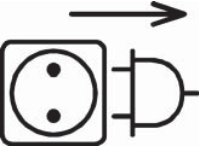
	 <b>CAUTION</b>
	<p><b>High pressure.</b> Malfunction and/or irreparable damage to the shaft seal or pump.</p> <ul style="list-style-type: none"> <li>➤ Maintain pressure in the suction connection in accordance with the technical data (chapter 3.).</li> <li>➤ Assemble an oil-filled contact pressure gauge to monitor and deactivate the pump.</li> </ul>

#### 6.4 De-commissioning

Protect the pump and additional devices against the following:

- Frost
- Deposit of solids
- Sedimentation from the liquid
- Corrosion of parts that come into contact with the medium

#### 6.4.1 Switching off the pump

	<b>! DANGER</b>	
<p><b>Dangerous voltage.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Observe safety regulations.</li> <li>➤ Disconnect the pump from all sources of energy.</li> <li>➤ Prevent electrical connections from being switched on again.</li> </ul>		


#### 6.4.2 Emptying the pump

<b>! CAUTION</b>
<p><b>Liquid draining out.</b> Minor injury or damage to property can occur.</p> <ul style="list-style-type: none"> <li>➤ Wear suitable protective clothing.</li> <li>➤ Refer to the technical data (chapter 3.) for the corresponding configuration of the pump housing.</li> </ul>

To drain the pump:


- If the pump housing has screwed plugs, remove the screwed plugs.
- Drain using a connection branch (suction casing, pressure branch) if the pump housing is coated or the housing does not have screwed plugs.
- Drain the residual liquid from the pump housing.
- Drain the pipelines on the suction and pressure sides, or shut off behind the pump connections.

#### 6.4.3 Removing the pump

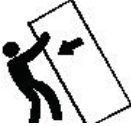	<b>! WARNING</b>	
<p><b>Risk of pump tipping or falling.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Support the drive unit to guarantee stability.</li> </ul>		


##### Pipeline dismantling

- Remove flange bolts (SCH) and flange seals (DFL).
- with/without base plate
- Remove bolts (SCH) from the pump feet.

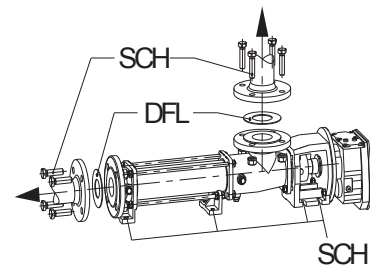

#### Pipeline dismantling

- Remove threaded connections (G).  
with/without base plate
- Remove bolts (SCH) from the pump feet.

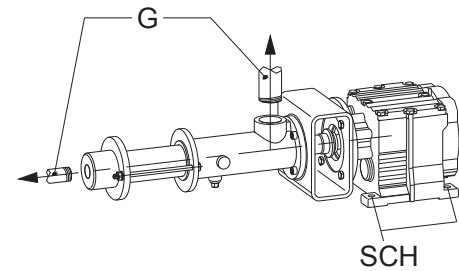

#### 6.4.4 Preservation/storage of the pump

##### NOTICE

**Damage to property due to lack of corrosion protection.**

Property damage can occur due to corrosion.

- Contact SEEPEX to discuss suitable preservation measures.
  - State the commission number of the pump.



## 7.1 Preventive measures




The maintenance personnel must have these operating instructions, follow them and also require corresponding qualifications.

	<b>⚠ DANGER</b>	
	<p><b>Dangerous voltage.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Observe safety regulations.</li> <li>➤ Disconnect the pump from all sources of energy.</li> <li>➤ Prevent electrical connections from being switched on again.</li> </ul>	

### 7.1.1 Pump down-time

<b>NOTICE</b>
<p><b>Pump down-time.</b> Production failure due to wear.</p> <ul style="list-style-type: none"> <li>➤ Acquisition of a set of wearing parts and a set of gaskets.</li> </ul>

## 7.2 Lubrication

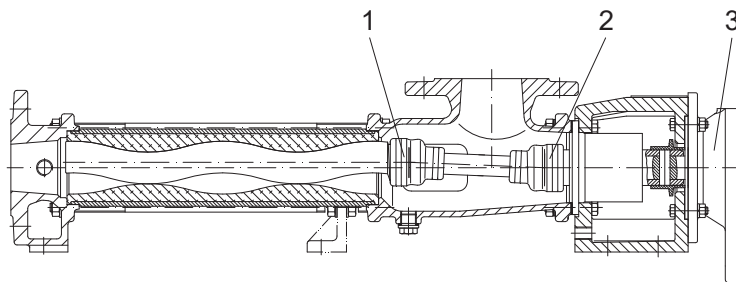

No.	Denomination	Lubricant	Lubricant change in operating hours	Fill volume
1	Pin joint	SEEPEX special grease (30321)	10,000 h	32 cm <sup>3</sup>
2	Pin joint	SEEPEX special grease (30321)	10,000 h	32 cm <sup>3</sup>
3	Drive	Refer to manufacturer's documentation (chapter 13._)		
Rotor/stator		Conveying medium	---	---
Shaft seal		Conveying medium	---	---

### 7.2.1 Joint grease

<b>NOTICE</b>
<p><b>Other grease types.</b> Malfunction and/or irreparable damage to the joints or the pump.</p> <ul style="list-style-type: none"> <li>➤ Exclusively use SEEPEX special grease.</li> </ul>

### 7.3 Inspection

Component	Interval	Action
Joints	Every 10,000 operating hours	Renew joint grease
Shaft seal	Every week	Visual check for leaks
Drive unit	Every 3,000 operating hours, at least every 6 months	Comply with manufacturer's documentation

Refer to technical data (chapter 3.) for application range of the pump.

Malfunction										Causes	Rectification
Pump is not sucking	Pump pumping unevenly	Conveying capacity is not achieved	Pressure head is not reached	Pump does not start up	Pump seized / pump does not pump	Pump is loud when running	Motor gets too hot	Premature stator wear	Shaft seal is leaky		
			X				X		X	Static friction between stator/rotor too great.	Apply lubricant (liquid soap) between stator and rotor.
X										Incorrect direction of rotation.	Check direction of rotation and swap over motor connections if necessary.
X	X	X			X	X				Suction pipe or shaft seal leaking.	Eliminate leaks.
X	X	X				X				Suction head too great.	Check the suction head, if necessary increase pipe cross section on suction pipe and use a larger filter, open suction-side valve fully.
X	X	X								Viscosity of conveying product too great.	Check/adapt (data sheet).
		X		X			X			Pump rotation speed incorrect.	Correct rotation speed (data sheet).
	X	X									Avoid air bubbles in the conveying product.
		X		X	X		X	X		Pressure head too great.	Check pressure head with pressure gauge, reduce pressure head by using larger pressure pipe crossed section or shortening the pressure pipe.
X	X	X			X				X	Pump running partially/ completely dry.	Check there is adequate conveying product available on the suction side. Dry running protection DRP.
						X	X			Check coupling.	If necessary, move pump in relation to drive, check wear on coupling gear, re-adjust coupling if necessary.
X		X								Rotation speed too low.	Increase rotation speed for low-viscosity media/large suction volume.


Malfunction									Causes	Rectification
Pump is not sucking	Pump pumping unevenly	Conveying capacity is not achieved	Pressure head is not reached	Pump does not start up	Pump seized / pump does not pump	Pump is loud when running	Motor gets too hot	Premature stator wear		
X	X					X			Rotation speed too high.	Reduce rotation speed for high-viscosity media, risk of cavitation.
						X			Joint play too large.	Check mounting of coupling rod bushing.
X		X		X	X			X	Foreign objects in pump.	Dismantle pump, remove foreign bodies, replace defective parts.
X		X	X		X				Stator/rotor worn.	Dismantle pump and renew defective parts.
X		X			X	X			Joint parts worn.	Renew joint parts, use SEEPEX pin joint grease.
X		X			X			X	Suction pipe blocked.	Clean the suction pipe.
X				X	X		X	X	Temperature of pumping liquid too high.	Check temperature, use an undersize rotor.
X		X		X			X	X	Gland packing too firm/worn.	Loosen packing gland or tighten. Renew unusable packing rings.
X				X	X			X	Solid content and/or grain size too great.	Reduce pump speed, install screen with permitted mesh width. Increase liquid proportion.
X				X				X	Sedimentation/gumming of solids when pump stationary.	Rinse through and clean the pump immediately.
X				X	X			X	Conveying product hardens when the temperature drops below a certain limit.	Heat the pump.
				X	X		X	X	Stator swollen and unable to withstand conveying product.	Select a suitable stator material, use an undersize rotor.
						X		X	Bearings in pump drive housing or drive unit defective.	Renew bearings.
								X	Mechanical seal defective.	Check sliprings and O-rings for wear/resistance, renew if necessary.

## 9.1 Pump Dismantling/Reassembly


Range: BN

Size: 05-24 up to 300-6L


### 9.1.1 Preparing the pump for dismantling


	<p>⚠ DANGER</p>
<p><b>Dangerous voltage.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Note safety regulations.</li> <li>➤ Disconnect motor from all sources of energy.</li> <li>➤ Secure electrical connections against restarting.</li> </ul>	

- Empty pipelines.
- Allow pipelines to cool down.
- Remove pipeline connections (suction side/pressure side).
- Note decommissioning (→ chapter 6.4).

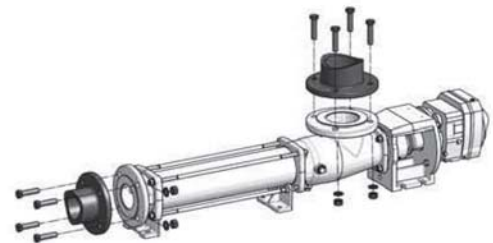


### 9.1.2 Dismantling

	<p>⚠ WARNING</p>
<p><b>Risk of pump tipping or falling.</b> Death or serious injury can occur.</p> <ul style="list-style-type: none"> <li>➤ Fasten the lantern (200) to secure the pump.</li> </ul>	

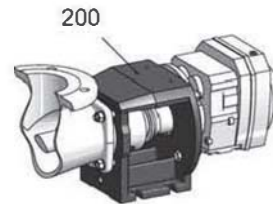


#### 9.1.2.1 Pressure branch (700) - Dismantling

- Prop up stator (601) with a support (S).
- Remove screw fitting (604, 606).
- Remove pressure branch (700).
- Remove tie bolt (602).

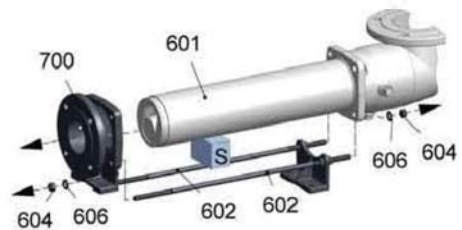


### 9.1.2.2 Stator (601) - Dismantling

- Raise/move splash ring (310).
- Remove the plug-in shaft pins (309).
- Insert tool (WS).
- Turn tool (WS) upwards.

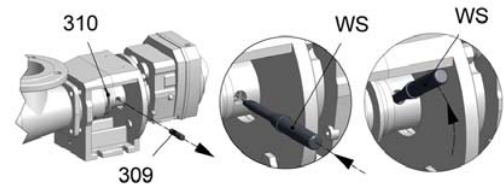


Tool (W2)/chain wrench

- Add lubricant (GM) to the opening on pressure branch side between the rotor (600) and the stator (601).
- Turn the stator (601) in the "left" rotating direction and remove.
  - Use tool (W2).
- Prop up the rotor (600) with support (S).

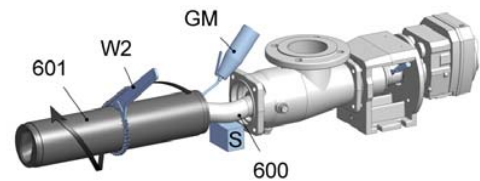

### 9.1.2.3 Suction casing (500) - Dismantling

- Put a protective cover (SH) on the rotor (600).
- Prop up rotor (600) with a support (S).
- Remove screw fitting (506, 507, 509).
- Remove suction casing (500) and casing gasket (501).
- Remove tool (WS).

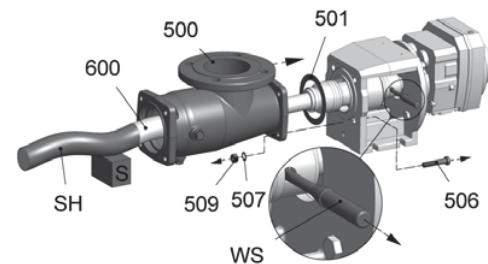

### 9.1.2.4 Rotating unit (RTE) - Dismantling




Tool (W10)/dismantling tool




Tool (W9)/mounting lever

#### with flush connection


- Remove the flush connection (SSÜ) on the shaft seal casing (SEA).

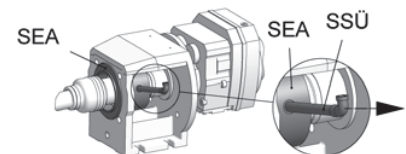


- Assemble tool (**W10**/dismantling tool).

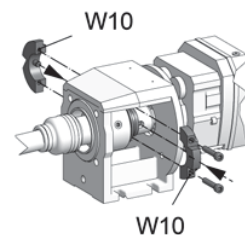


- Pull the rotating unit (**RTE**) with shaft seal (**SEA**) off from the output shaft of the drive (**ANT**).
  - Use tool (**W9**/mounting lever).

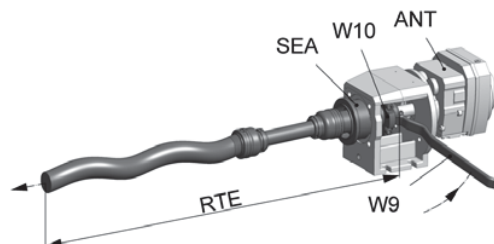

- Dismantle tool (**W10**/dismantling tool).

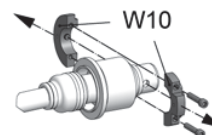


- Pull off the splash ring (**310**).
- Pull off the shaft seal casing (**SEA**).
  - Note dismantling shaft seal (→ chapter 9.4).

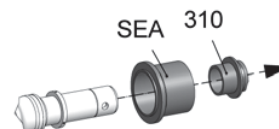


#### without flush connection


- Assemble tool (**W10**/dismantling tool).

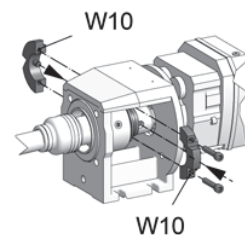

- Pull the rotating unit (**RTE**) with shaft seal (**SEA**) off from the output shaft of the drive (**ANT**).
  - Use tool (**W9**/mounting lever).

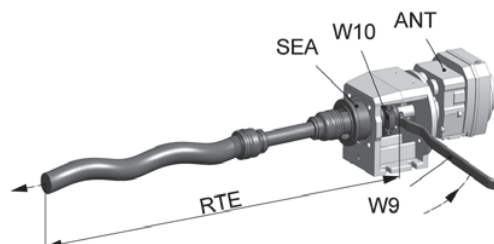


- Dismantle tool (**W10**/dismantling tool).

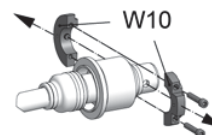




- Pull off the splash ring (310).
- Pull off the shaft seal casing (SEA).
  - Note dismantling shaft seal (→ chapter 9.4).

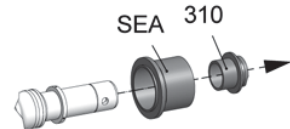

#### 9.1.2.5 Rotor (600), coupling rod (400), plug-in shaft (307) - Dismantling

- Joint (G) dismantling note rotating unit - individual parts (→ chapter 9.2).

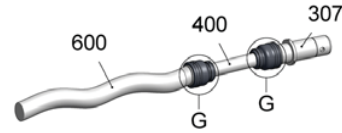

#### 9.1.2.6 Lantern (200)/drive (ANT) - Dismantling




#### CAUTION

##### Falling or tilting drive.

Slight injury can occur.

- Secure the drive (ANT).

- Remove the screw fitting (210, 212, 213).
- Remove the drive (ANT).

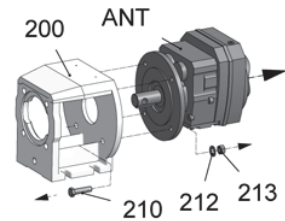

#### 9.1.3 Reassembly




#### WARNING

##### Risk of pump tipping or falling.


Death or serious injury can occur.

- Fasten the lantern (200) to secure the pump.

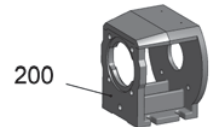


#### 9.1.3.1 Lantern (200)/drive (ANT) - Reassembly

- Clean the flange bearing surfaces (FLS), bolt circle (ZD) and the output shaft of the drive unit (ANT).
- Mount the drive (ANT) to the lantern (200) with screw fittings (210, 212, 213).

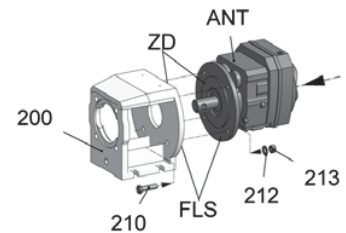



### 9.1.3.2 Rotor (600), coupling rod (400), plug-in shaft (307) - Reassembly

- Joint **(G)** reassembly note rotating unit - individual parts (→ chapter 9.2).

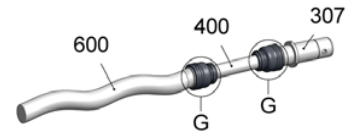


### 9.1.3.3 Rotating unit (RTE) - Reassembly

- Slide on shaft seal casing **(SEA)**.
  - Note reassembly shaft seal (→ chapter 9.4).
- Moisten splash ring **(310)** and plug-in shaft **(307)** with antiseize graphite petroleum.
- Slide splash ring **(310)** onto plug-in shaft **(307)**.
  - Observe fitting position of splash ring (see lettering).
- Apply antiseize graphite petroleum to the output shaft of drive **(ANT)**.
- Slide on rotating unit **(RTE)**.

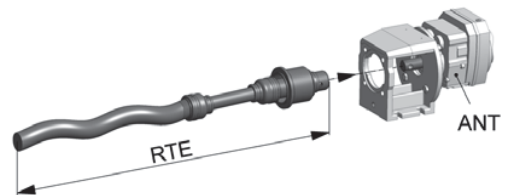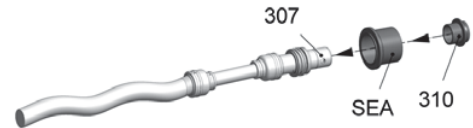


#### with flush connection

- Mount the flush connection **(SSÜ)**.

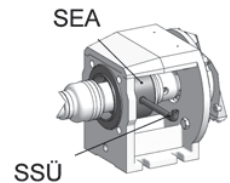

### 9.1.3.4 Suction casing (500) - Reassembly

- Put a protective cover **(SH)** on the rotor **(600)**.
- Prop up rotor **(600)** with a support **(S)**.
- Push on the casing gasket **(501)**.
- Mount and align the suction casing **(500)** with screw fitting **(506, 507, 509)**.
  - Use spirit level **(W)**.
- Remove the protective cover **(SH)**.

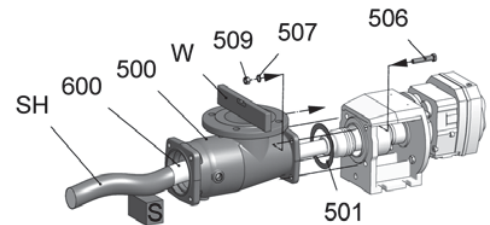

### 9.1.3.5 Stator (601) - Reassembly



- Insert tool **(WS)**.
- Turn tool **(WS)** down.






Tool (**W2**/chain wrench)

- Moisten outer surface of the rotor (**600**) with lubricant (**GM**).
- Moisten inner surface of the stator (**601**) with lubricant (**GM**).
- Prop up stator (**601**) with support (**S**).
- Turn stator (**601**) in the "right" rotating direction and slide onto rotor (**600**).
  - Use tool (**W2**).
- Remove tool (**WS**).
- Slide in plug-in shaft pin (**309**).


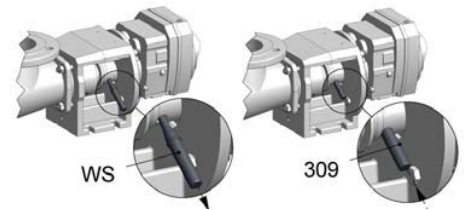
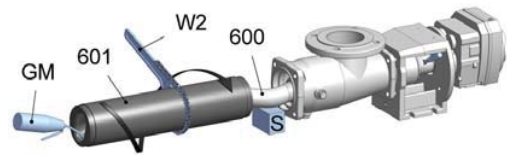


- Pay attention to the position of the splash ring (**310**).
- Insert the splash ring collar at a distance of 0.5 mm from the lantern (**200**).

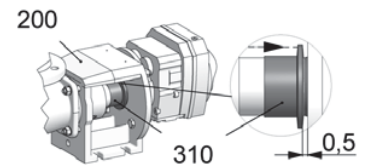

#### 9.1.3.6 Pressure branch (700) - Reassembly


- Prop up stator (**601**) with a support (**S**).
- Insert tie bolts (**602**) loosely into the suction casing (**500**).
- Push pressure branch (**700**) on to the stator (**601**).
- Insert tie bolts (**602**) loosely in the pressure branch (**700**).
- Remove the support (**S**).
- Mount screw fitting (**604, 606**).
- Tighten tie bolts (**602**) equally.

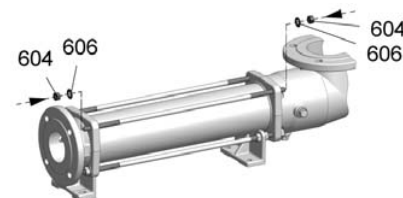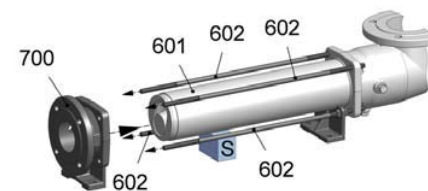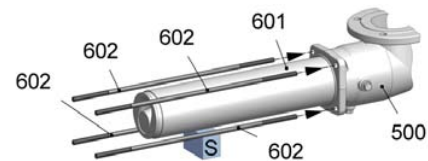


## 9.2 Rotating unit individual parts

### 9.2.1 Dismantling

#### 9.2.1.1 Holding band (406, 407) - dismantling


	<b>CAUTION</b>
<p><b>Risk of injury.</b> Possibility of parts spinning out.</p> <ul style="list-style-type: none"> <li>➤ Wear protective goggles.</li> </ul>	

- Detach holding band loop (SCL).
  - Use suitable tool (WM).
- Push out parts of holding band loop (SCL).
- Remove holding band (406, 407).
- Pull back universal joint sleeve (405).

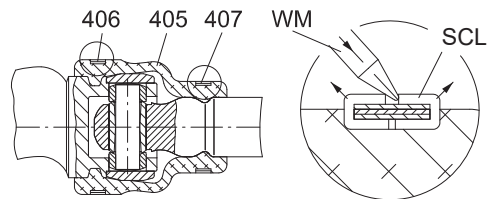

#### 9.2.1.2 Retaining sleeve (401) - dismantling


- Knock back retaining sleeve (401).
  - Use suitable tool (WM).

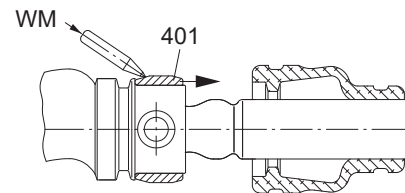

#### 9.2.1.3 Detach joint

 Tool (W5/drift)

- Eject coupling rod pins (402).
- Bend (A) the coupling rod (400). Knock guide bushing (403) out with tool (W5).
- Remove coupling rod (400).

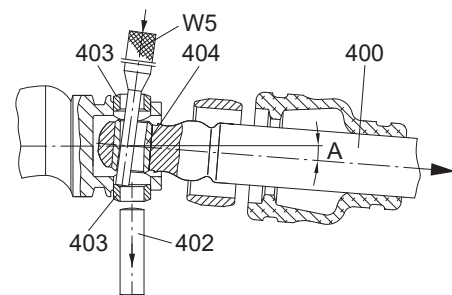


## 9.2.2 Rotating unit (RTE) - prepare individual parts for reassembly

### 9.2.2.1 Rotor (600)

- Remove any damage.
- Clean the rotor (600).


 Tool (W4/assembly mandrel)

- Press in the guide bushing (403) (depth = 2/3).
  - Use tool (W4).

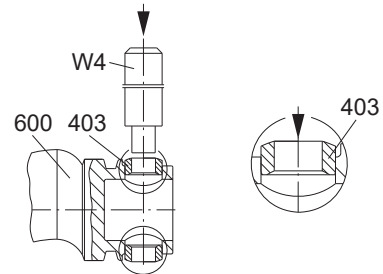


### 9.2.2.2 Coupling rod (400)

- Clean the coupling rod (400).
- Examine bore head for wear.
  - If wearing is detected on the bore head, replace the coupling rod (400).




### 9.2.2.3 Plug-in shaft (307)

- Remove any damage.
- Clean the plug-in shaft (307).

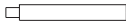 Tool (W4/assembly mandrel)

- Press in the guide bushing (403) (depth = 2/3).
  - Use tool (W4).

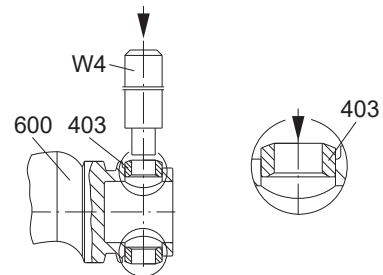

## 9.2.3 Rotating unit (RTE) - individual parts - reassembly

### NOTICE

#### Malfunction of the joints.

Malfunction and/or destruction of joints.


- Replace the coupling rod pins (402) and guide bushings (403) jointly.

#### 9.2.3.4 Coupling rod (400) – reassembly

- Slide the universal joint sleeve (405) and holding bands (406, 407) onto coupling rod (400).
- Fit the diameter and width of the holding band of the universal joint sleeve.
- Fill the joint head with SEEPEX joint grease.


#### Rotor (600)

- Insert coupling rod pins (402).
- Slide on retaining sleeve (401).
- Connect the rotor/coupling rod.

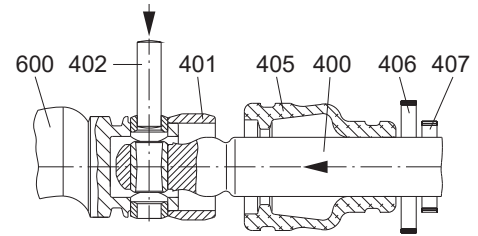


 Tool (W5/drift)

- Slide in the coupling rod pins (402).
- Knock the guide bushings (403) in.

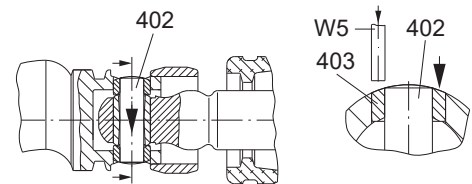


#### Plug-in shaft (307)

- Insert coupling rod pins (402).
- Slide on retaining sleeve (401).
- Connect the plug-in shaft/coupling rod.

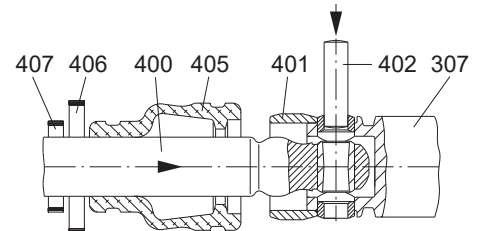

 Tool (W5/drift)


- Slide in the coupling rod pins (402).
- Knock the guide bushings (403) in.

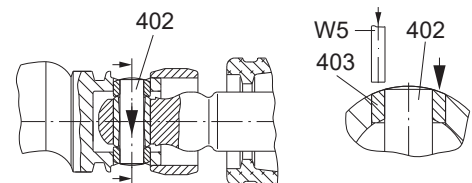

### 9.2.3.5 Retaining sleeve (401) - reassembly


 Tool (W4/assembly mandrel)

- Knock back retaining sleeve (401).
  - Use tool (W4).

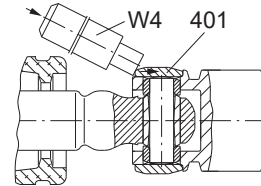


#### Rotor (600) unhardened material

- Secure retaining sleeve (401) in a displaced manner (2x180°).
  - Use suitable tool (WK).

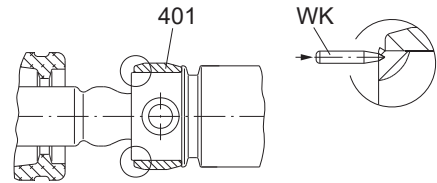


#### Rotor (600) hardened material

- Secure retaining sleeve (401) in a displaced manner (2x180°).
  - Use suitable tool (WK).

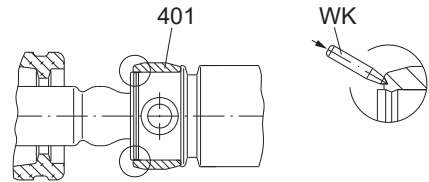


### 9.2.3.6 Universal joint sleeve (405) - reassembly


- Moisten the surface of the coupling rod (400)/ inner surface of the universal joint sleeve (405) with joint grease (maintenance, chapter 7.0).
- Slide on the universal joint sleeve (405).

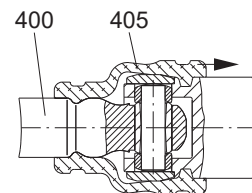

- Vent the interior of the joint.
  - Use suitable tool (WS).

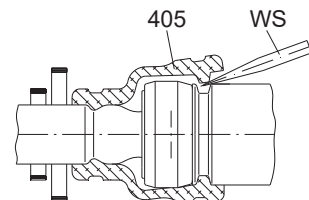

- Assemble holding band.
  - Holding band assembly (chapter 9.\_).

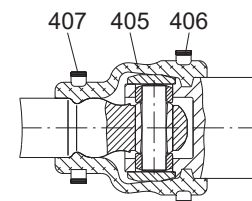


### 9.3 Holding band - assembly

#### 9.3.1 Prepare the holding band


- Only use prefabricated double-band holding bands.

#### 9.3.2 Check the holding band

- Bent-over holding band (HBD) is in contact with holding band loop (SCL) to avoid damaging universal joint sleeve.
- Press on holding band (HBD) using tool (WZ) if necessary.

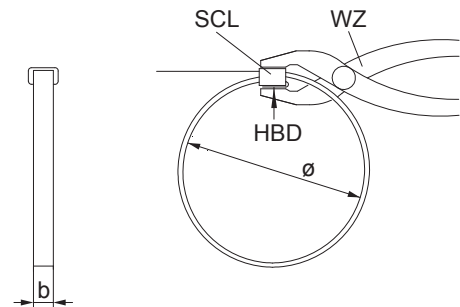


#### 9.3.3 Assemble the holding band



- Use tool (W3/mounting tool)


- Feed holding band into tool (W3).
- Hold ends of holding band with the eccentric lever (EX).
- Turn the crank (KU) until the holding band is strained and lies against the holding band loop (SCL).
- Carefully pull the holding band together until it is in contact with the circular groove of universal joint sleeve.

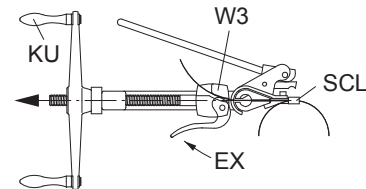

#### 9.3.4 Correct tension of the holding band (HBD)


##### Correct

The holding band (HBD) has drawn in the out shape of the universal joint sleeve and is firmly seated.

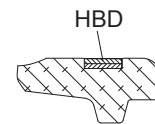

##### Incorrect


The holding band (HBD) is too loose, can slip off.

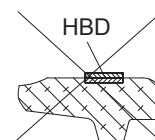




### Incorrect

The holding band (HBD) is too tight, universal joint sleeve will be damaged/sheared off.

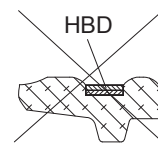

### 9.3.5 Cant up the holding band

- Swivel mounting tool (W3) approx. 60° upwards.
- Loosen crank (KU) by a half turn.
- Swivel cutting lever (SH) forward until the pressure piece is lying behind the holding band loop (SCL).

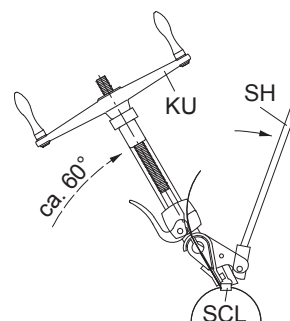

### 9.3.6 Shear the holding band (material: 1.4301; 1.4571)

- Hit the cutting lever (SH) with the inside of your hand.
  - Cant up and shear the end of the holding band behind the loop (SCL).
  - Carefully straighten up the holding band if it rises up on the sheared side.




#### NOTICE

**Universal joint sleeve damage.**  
Pin joint grease can emerge.

- Avoid hammering or knocking.



### 9.3.7 Check the holding band after assembly

- The holding band must lie in the groove of the universal joint sleeve.
- Replace the holding band if the holding band slips back through the loop.



## 9.4 Single acting mechanical seal

### 9.4.1 Safety


	 <b>WARNING</b>
	<p><b>Shaft seal is leaky.</b> Leakage may escape into the atmosphere.</p> <ul style="list-style-type: none"> <li>➤ Take safety measures to protect persons and the environment.</li> <li>➤ Wear suitable protective clothing.</li> <li>➤ Dispose of leakage appropriately.</li> <li>➤ Note applicable regulations when handling hazardous substances.</li> </ul>

### 9.4.2 Operating conditions and material combination

- Adjust to the relevant application
  - Refer to technical data (chapter 3).

### 9.4.3 Design

- Single acting mechanical seal

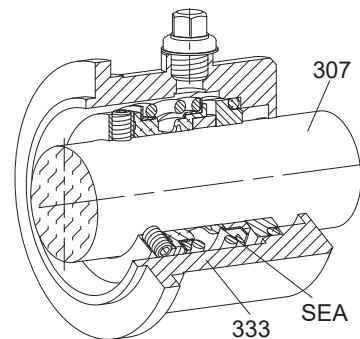

### 9.4.4 Commissioning

NOTICE
<p><b>Dry running of the mechanical seal.</b> Damage to property may result.</p> <ul style="list-style-type: none"> <li>➤ The mechanical seal must be laid in liquid medium before being commissioned.</li> </ul>

#### Circulation, flushing and/or flushing pipe


- Additional flushing or circulation pipes are not required where shaft sealing lies in medium.
- Flushing pipes may be possible under special circumstances and after speaking to SEEPEX.

NOTICE
<p><b>Shaft seal is not leakage free.</b> Damage to property through leakage.</p> <ul style="list-style-type: none"> <li>➤ Components which come into contact with leakage must be corrosion-resistant or otherwise suitably protected.</li> </ul>

#### Adjust shaft seal

- It is absolutely vital to adjust at the application site in a manner appropriate for the operating conditions.
- Refer to the sectional drawing of the shaft seal for setting measurements.
- Set the setting measurements of the shaft seal to the plug-in shaft (307).

#### 9.4.5 Monitoring during operation


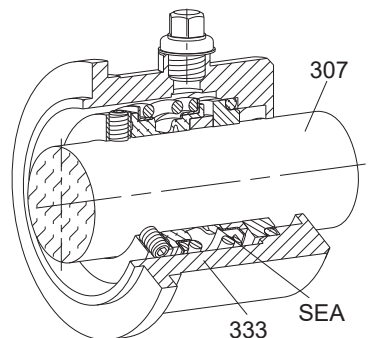
NOTICE	
<p><b>Shaft wear.</b> Damage to property may result.</p> <ul style="list-style-type: none"> <li>➤ Conduct a daily visual inspection.</li> <li>➤ Install a new shaft seal (SEA).</li> <li>➤ Possibly replace the plug-in shaft (307).</li> </ul>	

#### 9.4.6 Dismantling of the mechanical seal

Refer to data sheet (chapter 3.1) and sectional drawing of the shaft seal (chapter 9.\_) for design.



##### With axial locking device

- Clean plug-in shaft (307), remove edges/burrs.
- Moisten plug-in shaft (307) with lubricant (thinned liquid soap).
- Pull mechanical seal casing (333) from the plug-in shaft (307).
- Loosen the axial locking device of the mechanical seal (330/372); pull mechanical seal (330) from the plug-in shaft (307).
- Push counter ring of the mechanical seal (330G) with seal out of the mechanical seal casing (333).

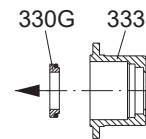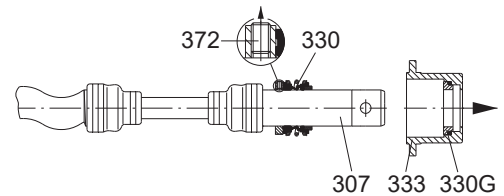

##### Without axial locking device

- Clean plug-in shaft (307), remove edges/burrs.
- Moisten plug-in shaft (307) with lubricant (thinned liquid soap).
- Pull mechanical seal casing (333) from the plug-in shaft (307).
- Pull the mechanical seal (330) from the plug-in shaft (307).
- Push counter ring of the mechanical seal (330G) with seal out of the mechanical seal casing (333).

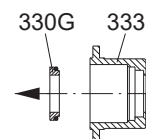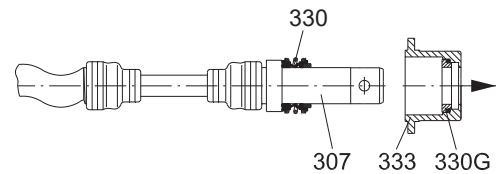

### 9.4.7 Reassembly of mechanical seal




Shaft sealings are high-quality precision parts.  
Their installation is therefore to be undertaken with care.  
Careful handling and the utmost of cleanliness are prerequisites.

- Assembly aids such as oil/grease are not permitted.


#### With axial locking device

- Clean the mechanical seal casing (333).
- Moisten the seal with lubricant (thinned liquid soap).
- Attach the counter ring and seal using even pressure into the mechanical seal casing (333).
- Clean the plug-in shaft (307), remove edges/burrs.
- Adjust the set collar (372) in accordance with sectional drawing of shaft seal (chapter 9.\_).
- Stick the set screw in and determine.
  - Use "medium-strength" adhesive.
- Moisten plug-in shaft (307) and elastomer parts of the mechanical seal (330) with lubricant (thinned liquid soap).
- Slide mechanical seal (330) onto the plug-in shaft (307) until the installation edge has been reached.

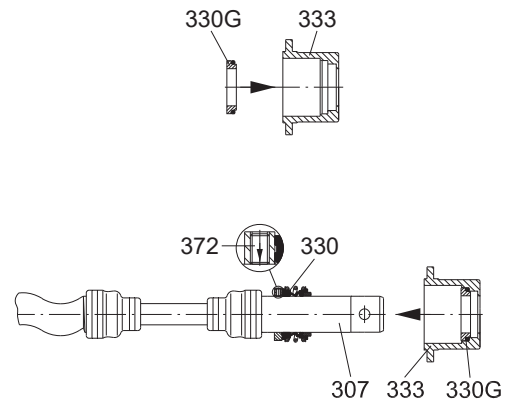

#### Without axial locking device

- Clean the mechanical seal casing (333).
- Moisten the seal with lubricant (thinned liquid soap).
- Attach the counter ring and seal using even pressure into the mechanical seal casing (333).
- Clean the plug-in shaft (307), remove edges/burrs.
- Adjust mechanical seal (330).
  - Note sectional drawing of shaft seal (chapter 9.\_).
- Moisten plug-in shaft (307) and elastomer parts of the mechanical seal (330) with lubricant (thinned liquid soap).
- Slide mechanical seal (330) onto the plug-in shaft (307) until the installation edge has been reached.

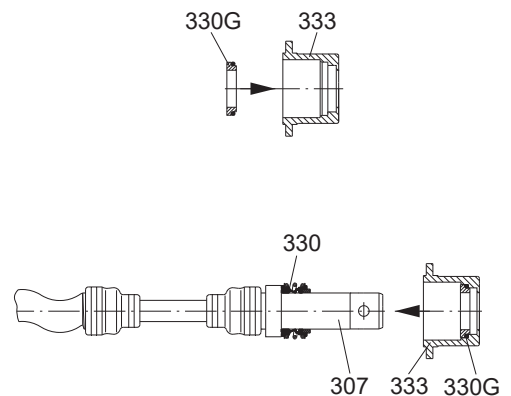







10.1 Spare parts list

10.2 Sectional drawing and parts list





## Version for copying

## 10.1 Spare parts list

Spare parts can be ordered online or requested from  
[www.seepex.com](http://www.seepex.com)

**Type: BN 05-24 to 300-6L**

☐ Request

☐ Order

**Sender:**

**Must be included in every order or enquiry!**

**Commission:**

**Type:**

Contact: .....

Tel.: .....

Fax: .....

E-mail: .....

**Customer Service:**

SEPEX Inc.

511 Speedway Drive

Enon, Ohio 45323

service.us@seepex.com

**Delivery address:**

.....  
 .....  
 .....  
 .....  
 .....

No.	Quantity	Component	Material	Comment
<b>Minor set of wearing parts</b>			<input type="checkbox"/>	
301	1	Set of packing rings		according to data sheet (chapter 3.1)
311	1	Rinse ring		
330	1	Mechanical seal		according to data sheet (chapter 3.1)
601	1	Stator		
<b>Major set of wearing parts</b>			<input type="checkbox"/>	
301	1	Set of packing rings		according to data sheet (chapter 3.1)
307	1	Plug-in shaft		
330	1	Mechanical seal		according to data sheet (chapter 3.1)
400	1	Coupling rod with coupling rod bushings		
402	2	Coupling rod pin		
403	4	Guide bushing		
405	2	Universal joint sleeve		
406	2	Holding band, large		
407	2	Holding band, small		
600	1	Rotor		
601	1	Stator		

Place, date

Signature / company stamp

Version for copying

No.	Quantity	Component	Material	Comment
<b>Set of gaskets</b>			<input type="checkbox"/>	
301	1	Set of packing rings		according to data sheet (chapter 3.1)
310	1	Splash ring		according to data sheet (chapter 3.1)
330	1	Mechanical seal		
501	1	Casing gasket		
503	3	Sealing ring		
511	2	O-ring/cleaning cover		
517	2	Sealing ring		
706	1	Sealing ring		
<b>Plug-in shaft &amp; shaft seal</b>			<input type="checkbox"/>	
301		Set of packing rings		according to data sheet (chapter 3.1)
307		Plug-in shaft		
309		Plug-in shaft pin		
310		Splash ring		according to data sheet (chapter 3.1)
330		Mechanical seal		according to data sheet (chapter 3.1)
<b>Coupling rod &amp; joint parts</b>			<input type="checkbox"/>	
400		Coupling rod with coupling rod bushings		
401		Retaining sleeve		
402		Coupling rod pin		
403		Guide bushing		
405		Universal joint sleeve		
406		Holding band, large		
407		Holding band, small		
401-407		Complete set of joint parts		
<b>Conveying elements</b>			<input type="checkbox"/>	
600		Rotor		
601		Stator		
<b>Miscellaneous parts</b>			<input type="checkbox"/>	
501		Casing gasket		
098		Pin joint grease		1 cartridge = 300 g (approx. 315 cm³) Grease quantity according to maintenance (chapter 7. _)

Place, date

Signature / company stamp





Qty.	Item	US	ES	FR
		range BN	serie BN	série BN
		sectional drawing no. 062-004B1	Plano seccional nº 062-004B1	plan no. 062-004B1
		denomination Qty. / Item	Denominación Ud. / Pos.	désignation Qté. / Poste
1	200	lantern	linterna	lanterne
1	202	type plate	placa de características	plaque signalétique
4	210	hexagon bolt	tornillo hexagonal	vis
	211	hexagon bolt	tornillo hexagonal	vis
4	212	spring washer	arandela grower	rondelle frein
4	213	hexagon nut	tuerca hexagonal	écrou
1	307	plug-in shaft	eje enchufable	arbre à broche
1	309	plug-in shaft pin	pasador eje enchufable	cheville pour arbre à broche
1	310	splash ring	aro deflector	bague de projection
1	400	coupling rod	tornillo alimentador	barre d'accouplement
2	401	retaining sleeve	casquillo cardan	douille d'articulation
2	402	coupling rod pin	pasador del eje cardan	axe d'articulation
4	403	guide bushing	casquillo director	douille de guidage
2	404	coupling rod bushing	casquillo del cardan	chemise d'axe
2	405	universal joint sleeve	mangón	manchette
2	406	holding band	abrazadera	collier de serrage
2	407	holding band	abrazadera	collier de serrage
1	500	suction casing	cuerpo de aspiración	carter d'aspiration
1	501	casing gasket	junta del cuerpo	étanchéité du carter d'aspiration
3	502	screwed plug	tapón roscado	bouchon de vidange
3	503	sealing ring	anillo retén	joint d'étanchéité
4	506	hexagon bolt	tornillo hexagonal	vis
4	507	fan type lock washer	arandela bloqueante	rondelle à dents chevauchantes extérieures
4	509	hexagon nut	tuerca hexagonal	écrou
2	°) 510	cleanout	tapa de registro	couvercle de nettoyage
2	°) 511	gasket	junta	étanchéité
8	°) 512	hexagon bolt	tornillo hexagonal	vis
2	°) 516	screwed plug	tapón roscado	bouchon de vidange
2	°) 517	sealing ring	anillo retén	joint d'étanchéité
1	600	rotor	rotor	rotor
1	601	stator	estator	stator
4	602	tie bolt	tornillo de sujeción	tirant
8	604	hexagon nut	tuerca hexagonal	écrou
8	606	washer	arandela	rondelle
1	607	trestle	soporte intermedio	piéd
1	700	pressure branch	brida de presión	bride de refoulement
1	705	screwed plug	tapón roscado	bouchon de vidange
1	706	sealing ring	anillo retén	joint d'étanchéité
	098	SEEPEx joint grease  type and filling quantity: see operating and assembly instruction	SEEPEx grasa de articulaciones Tipo y cantidad de llenado : Ver el manual de operacion y montaje.	SEEPEx graisse d'articulations  sommaire pour type et quantité: voir instructions de montage et de fonctionnement
		Wearing parts and sealings: see operating and assembly instruction	Partes de desgaste y sellado Ver el manual de operacion y montaje.	pièces d'usure et étanchéités: voir instructions de montage et de fonctionnement
		Tools: see operating and assembly instruction	Herramientas: Ver el manual de operacion y montaje.	Outils: voir instructions de montage et de fonctionnement
		shaft sealing see sectional drawing mechanical seal	para sellado de eje ver plano seccional del cierre mecánico.	dispositif d'étanchéité voir vue éclatée garniture mécanique
		drawn displaced	proyección detallada	plan séparé
	°)	option	Opcional	option



## Version for copying

Spare parts can be ordered online or requested from  
[www.seepex.com](http://www.seepex.com)

**Must be specified with every order!**

Commission:

Mark tool!

X

Sender:

Contact: .....

Tel.: .....

Fax: .....

E-mail: .....

**Customer Service:**




SEEPEx Inc.





511 Speedway Drive


Enon, Ohio 45323

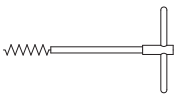service.us@seepex.com

**Delivery address:**

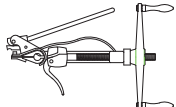For installation of:	Packing gland	Stator	Coupling rod bushings	
Tool no.	W1 <input type="checkbox"/>	W2 <input type="checkbox"/>	W14 <input type="checkbox"/>	
Denomination:	Packing lever	Chain pipe wrench + replacement chain	Pressing tool	
Order no.	PKZ	KRZ	PWZ	
				

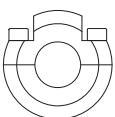For installation of:	Rotating unit			
	Holding band	Joint	Joint	Plug-in shaft
Tool no.	W3 <input type="checkbox"/>	W4 <input type="checkbox"/>	W5 <input type="checkbox"/>	W10 <input type="checkbox"/>
Denomination:	Mounting tool	Assembly mandrel	Drift	Dismantling tool
Order no.	MHB	MTD	DHS	AZV
				

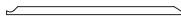For installation of:	General			
Tool no.	W9 <input type="checkbox"/>			
Denomination:	Mounting lever			
Order no.	MHL			
				





12.1 Additional components

12.2 Technical information

12.3 Manufacturer's documents shaft seal



## 1. General



### NOTICE

#### **Dry-running of the pump/temperature increase in the stator**

Damage to property and malfunction can be caused.

- Adhere to max. permissible operating temperature.
- Install dry-running protection device (TSE).

#### **Functional principle:**

- continuous monitoring of the temperature in the stator (temperature sensor)
- Shut off the pump when reaching the set category temperature.

#### **Operating mode:**

- existing temperature at the stator is compared to the category temperature in the TSE control device.
- Two relays switch within the TSE control device when reaching the shut-off value.
- The drive motor is shut off through potential-free alternating contacts.
- An alert is triggered.
- A required acknowledgement of the alert prevents an automatic reactivation of the pump.

## 2. Technical Data

### 2.1 Temperature sensor

- The temperature is measured at the stator through an NTC resistor with a protective sleeve.

Permissible temperature range: 0-150°C  
 Standard resistor: 10 kOhm at 25°C

Temp °C	0	10	20	25	30	40	50	60
Resistor Ohm	32,650	19,900	12,490	10,000	8,057	5,327	3,603	2,488

Temp °C	70	80	90	100	110	120	130	140
Resistor Ohm	1.752	1.255	915	678	510	389	301	235


### 2.2 Technical data - TSE control device

- The TSE control device is suitable for cabinet installation or wall mounting.

Types:	SGRTSE 230V ACB SGRTSE 115V ACB SGRTSE 24V ACB SGRTSE 24V DCB
Temperature range:	0-150°C
Input:	NTC temperature sensor 10 kOhm (at 25°C) with sensor breakage guard at -25°C
Relay output:	2 potential-free changeover contacts (K1, K2), switching capacity 500 VA at 110-230 V resistive load
Available operating voltage:	24V, 115V, 230V AC; 24V DC
Power drain:	max. 4 VA
Sensor circuit:	Open-circuit voltage max. 2.5 VDC Short-circuit current max. 0.5 mA DC
Display at the device:	Malfunction/dry-running Shut-off temperature
Operation at the device:	Setup shut-off temperature Reset alert
Housing material:	ABS
Fastening:	Installation on standard bar 35 mm in accordance with standard or screw connection in accordance with standard.
Protection:	Casing IP 40; terminals IP 20
Ambient temp.:	0-50!
Dimensions:	45x75x110 mm (WxHxD)
EMV (2004/108/EG):	CE conform in accordance with standard

## 2.3 Dimensions and wall mounting

- Installation depth = 110 mm

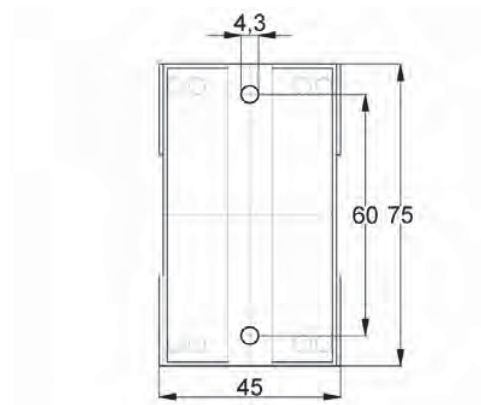

## 3. Electrical connection

### 3.1 Installation instructions

#### Check line voltage

- Check line voltage/nominal voltage against information on type plate before connection and commissioning.
  - Permissible mains voltage variations of the nominal equipment voltage +/-10%
- Electrical connections are in accordance with the connection map, the provisions of the local utility or the relevant VDE regulations.

#### Mains power failure

- Initiate appropriate measures to prevent the failures.
  - Filter failures through external mains filter.
  - Equip device internally with mains filter.
  - Install sensor leads shielded.
  - Ground shield on one side.

## 3.2 Connection diagram TSE control device

- Terminal assignment

1 + 3	Operating voltage
11 + 13	Operating hour counter potential-free contact
12 + 13	external potential-free contact
14 + 15	Temperature sensor
5, 6, 7	Relay output K1
8, 9, 10	Relay output K2

- The TSE control device can be released after dry-running by a button (closer) at terminals 12+13.
- Install button (closer).



## 3.3 Relay function

Actual temperature > shut-off temperature	(Malfunction/dry-running)
Contact 6-5 and 9-8	closed
Contact 6-7 and 9-10	open

- Relays K1 and K2 are in parallel and they work together.
  - K1: Switch-off condition integrated in motor contactor control.
  - K2: optional connection to the fault sensor or process computer (reserve).


# 4. Measures before commissioning

## 4.1 Check position of temperature control point at pump

- At the factory, the temperature sensor is always installed at the liquid inlet side.
- Check the specified installation position of the temperature control point when changing the direction of rotation and exchanging the stator.


### 4.1.1 Pump with "anti-clockwise rotation" - standard design

- Check suction casing side fitting position.

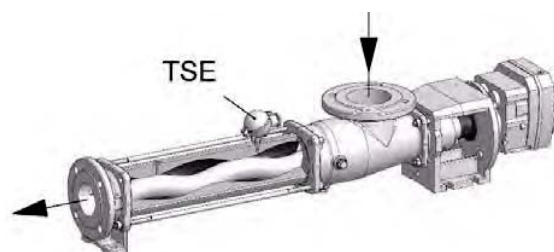

#### 4.1.2 Pump with "clockwise rotation" - special design.

- Pressure branch side fitting position.

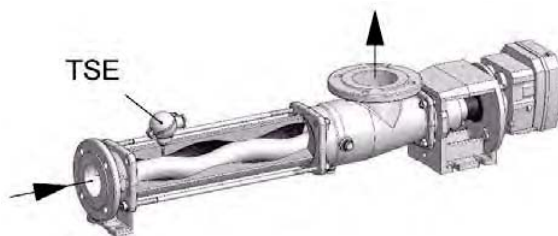

#### 4.1.3 Performance check

- Execute performance check before first commissioning.
- Switch on control voltage at terminals 1+3.
  - Digital display at TSE control device is illuminated.



- Keep "stator temp" button depressed and read temperature value.

- The function exists if the display is in accordance with the existing temperature.
- Observe deviations in case of functional failures.
  - Find malfunctions, causes and remedies (→ see chapter 8) in the operating and assembly instructions.

## 5. Commissioning and control

### 5.1 Set the switch-off temperature

- Set the switch-off temperature at the TSE control device as low as possible.
  - Shorter shut-off times after the dry-running occurs.
  - optimum stator protection

#### 5.1.1 Coarse setting of the shut-off temperature

- When delivered, the shut-off temperature is factory-set to 50°C.
- Maintain factory settings during commissioning or, in case of higher medium temperatures, set a value of 20-30°C above the temperature of the pumped medium.



- After the coarse setting, commission the pump for a max time of 60 min.
  - Subsequently, perform the fine adjustment of the shut-off temperature (→ chapter 5.1.2).



### 5.1.2 Fine adjustment of the shut-off temperature

- Start pump until the operating temperature in the stator is stabilized (approx. 30-60 min.).



- This will be shown on the display of the TSE control device when the pump is running and by pressing the button "stator temp.".

- Set the final shut-off temperature (→ chapter 5.1.3).
  - The shut-off temperature is 10°C higher than the operating temperature displayed.
  - Adhere to chapter 5.1.3.
  - Consider maximum medium temperature that can occur during operation.
- Check information in the data sheet for a medium temperature > 40°C.
- Rotor/stator - consider sizing.



- A consultation with the manufacturer is required if the temperature information in the data sheet and the actual value do not conform.

### 5.1.3 Adjust shut-off temperature at the control unit.

- Switch control voltage on.
  - After a self-test at the control unit, the currently set shut-off temperature will be shown on the display.



- Press briefly
  - Setup mode is displayed.
  - The display shows alternating "SET" and the shut-off temperature set last.



- Increase shut-off value.
  - The value changes initially by +1° each.
  - After approx. 3 sec. in +10° steps.



- Decrease shut-off value.
  - The value changes initially by -1° each.
  - After approx. 3 sec. in -10° steps.



- Press briefly
  - Operating mode is displayed.
  - Adjusted shut-off temperature was transmitted to the permanent memory and will be shown on the display.

- In setup mode, the device changes - without saving possibly changed settings - after 10 sec. into the operating mode.

## 5.2 Switch display from °C to °F



- Press button 10 seconds until the display changes.

- The selected temperature unit will be displayed next to the °C or °F symbol.

## 5.3 Release control unit after the dry-running

- The installed relays switch-off and remain locked in this position if the set temperature at the TSE control unit is exceeded.
  - Red LED appears (alert).
- Acknowledge alert/release relay in accordance with the following options:
  - actuate "reset" button at the TSE control unit for at least 1 sec.
  - Shut-off operating voltage at the TSE control unit (terminals 1-3).
  - Actuate external contact ("reset" button, closed for at least 1 sec.).



## 5.4 Call operating hour counter

- The TSE control unit includes an operating hour counter. This value can be called on the service level. The transition to the service level is only possible after a code number has been entered.



- Press approx. 5 sec until the "Cod" is displayed.
  - The display shows alternating "Cod" and 100.



- Press button sequence.
- Enter code "33".



- Press briefly
  - Code will be acknowledged.
  - Transfer to the service level.

Display alternating:

"Hi" and #value# • No function



- Press briefly
  - Transfer to next parameter/display value.

Display alternating:

"bh.Hi" and #value# • Operating hour counter (displayed value x 10,000)



- Press briefly
  - Transfer to next parameter/display value.

Display alternating:

"bh.Lo" and #value# • Operating hour counter (displayed value x 1)



- Return to the operating mode.

## 6. Stator change

### 6.1 General

- List the material of the installed TSE sensor sleeve when ordering a replacement stator.
- Do not readjust the sensor sleeve installed at the factory.

## 6.2 Dismantling/reassembly connection head and temperature sensor

- Adherence to associated drawing required.

### 6.2.1 Dismantling



- Do not reuse sensor sleeve after dismantling.

- Open cover of connection head.
- Remove connection wires at the temperature sensor.
- After loosening the screw at the side, pull off connection head from the threaded sleeve.
- Rotate threaded sleeve out of the stator.
- Remove clamp screw, rubber ring and temperature sensor from sensor sleeve.

### 6.2.2 Reassembly

- Do not readjust the sensor sleeve installed at the factory.
- Install threaded sleeve in the stator.
- Install sensor sleeve.
- Open cover of connection head.
- Install connection wires at the temperature sensor.
- Remove protective tube (transport guard of sensor sleeve).
- Slide thermistor sensor with clamp screw and rubber ring up to the base of the sensor sleeve and fixate.
- Screw threaded sleeve with two O-rings into threaded hole at the stator.
- When installing the connection head, route connection cable at the thermistor sensor from below through the hole in the terminal board.
- After fixating the connection head on the threaded sleeve, fasten connection cable at existing terminals and close connection head.

## 7. Functional failure

Causes for alerts and shut-offs of the pump without dry-running:



- Sensor or wire break
- Short-circuit sensor/wire
- Overshooting or undershooting of the measuring range (-25...150°C)

We recommend the following approach for checking the TSE control device and the sensor circuit incl. temperature sensor.

### 7.1 Performance check sensor circuit

- Remove the temperature sensor supply line at the TSE control device terminals 14+15.
- Connect resistor measuring unit (multimeter/ohmmeter).
- Determine electrical resistance with using the table (→ chapter 2.1) and compare with the temperature at the pump.
- Proceed as follows in case of resistor value deviations >10% from the target value:
  - disconnect connecting wire to the control unit at the connection head of the pump
  - Repeat measurement at the connection head of the TSE.
    - A defect at the temperature sensor exists in case of identical deviations.
  - Exchange the temperature sensor.
    - Observe chapters 6.2 - 6.3.
- In case of correct values, a defect of the connection cable or the connection terminals exists.

### 7.2 Performance check TSE control device

- A defect at the TSE control device is probable if the sensor circuit is functioning properly.
- To check, disconnect terminal 14+15 of the sensor supply line.
- Connect commercially available carbon film or metal film resistor in accordance with the following array:


Resistor Ohm	10,000	5,600	2,200	1,000	560	220
Switch temp. °C	25	39	63	87	107	143

- Switch on control voltage at terminals 1+3.
  - Digital display at TSE control device is illuminated.




- Keep "stator temp" button depressed and read temperature value.
  - Read value must be in accordance with the switching temperature allocated to the resistor used.
- Return TSE control unit for repair in case of display deviations of more than 5-10°C or in case of no display.



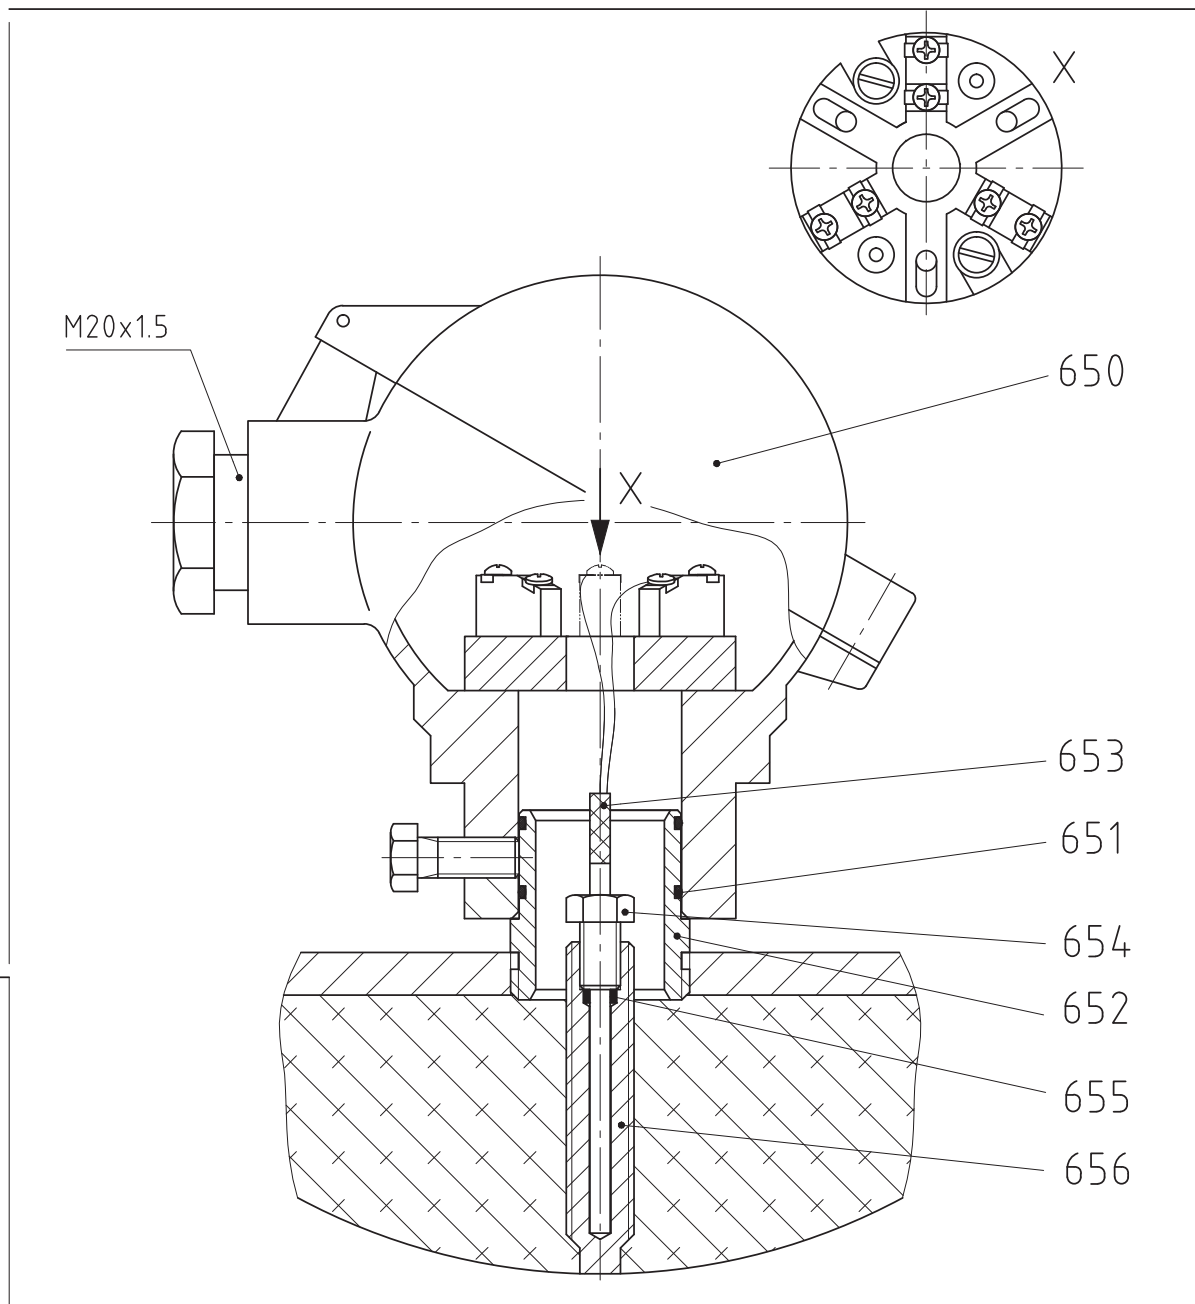

Stück Unit	Norm Standard	Pos./Item	Benennung/Denomination Zeichnungs-Nummer/Drawing-Number	Werkstoff/Material	Bemerkung/Remark	Gewicht Weight kg
---------------	------------------	-----------	--	--------------------	------------------	-------------------------

## SEEPEX. ALL THINGS FLOW

Allgemeintoleranzen für Maße ohne einzelne Toleranzeintragung DIN ISO 2768—mittel	Aus- gabe Issue	Änderung Modification	Name Name	Datum Date	Maßstab/Scale %	Werkstoff/Material	Gewicht/Weight
General tolerances for dimensions without specified tolerances DIN ISO 2768—average							
					Bezeichnung/Denomination		
					Schnittzeichnung TSE Anschlusskopf sectional drawing TSE connection head		

Urheberrechtsschutz: Diese Zeichnung ist unser Eigentum und uns nach dem Gesetz über Urheberrecht und verwandte Schutzrechte geschützt.  
Protection of Copyright: This drawing is our property and is protected acc. to the law referring to copyright and related protective laws.



Stck.	Pos.	DE	EN	FR
		TSE-Anschlusskopf	TSE connection head	TSE tête de connexion
		Schnittzeichnung Nr. 702-006A4	sectional drawing No. 702-006A4	plan no. 702-006A4
		Benennung Stck. / Pos.	denomination Qty. / Item	désignation Qté. / Poste
1	650	Anschlusskopf	connection head	tête de connexion
2	651	O-Ring	o-ring	joint torique
1	652	Gewindehülse	screw socket	douille fileté
1	653	Thermistorfühler	thermistor sensor	thermistance
1	654	Klemmschraube	clamping screw	vis de blocage
1	655	Gummiring	rubber ring	anneau de caoutchouc
1	656	Fühlerhülse	sensor sleeve	fourreau de sonde





## Technical data:

- NTC-resistance sensor fitted in stainless steel protection sleeve.
- Standard resistance: 10 k $\Omega$  at 25°C.

temp. °C	resistance $\Omega$	temp. °C	resistance $\Omega$	temp. °C	resistance $\Omega$	temp. °C	resistance $\Omega$
-20	97.080	23	10.920	66	2.011,0	109	525,00
-19	91.610	24	10.450	67	1.942,0	110	510,30
-18	86.490	<b>25</b>	<b>10.000</b>	68	1.876,0	111	496,70
-17	81.690	26	9.573,0	69	1.813,0	112	483,00
-16	77.180	27	9.167,0	70	1.752,0	113	470,00
-15	72.950	28	8.777,0	71	1.693,0	114	457,30
-14	68.980	29	8.407,0	72	1.636,0	115	445,00
-13	65.240	30	8.057,0	73	1.582,0	116	433,30
-12	61.730	31	7.723,0	74	1.530,0	117	421,70
-11	58.430	32	7.403,0	75	1.479,0	118	410,70
-10	55.330	33	7.097,0	76	1.431,0	119	400,00
-9	52.400	34	6.807,0	77	1.384,0	120	389,30
-8	49.650	35	6.530,0	78	1.340,0	121	379,30
-7	47.060	36	6.267,0	79	1.297,0	122	369,70
-6	44.620	37	6.017,0	80	1.255,0	123	360,00
-5	42.330	38	5.777,0	81	1.215,0	124	350,60
-4	40.160	39	5.547,0	82	1.177,0	125	341,70
-3	38.110	40	5.327,0	83	1.140,0	126	333,10
-2	36.190	41	5.117,0	84	1.104,0	127	324,70
-1	34.370	42	4.917,0	85	1.070,0	128	316,50
0	32.650	43	4.727,0	86	1.036,0	129	308,60
1	31.030	44	4.543,0	87	1.004,0	130	300,93
2	29.500	45	4.370,0	88	973,70	131	293,47
3	28.050	46	4.200,0	89	944,00	132	286,323
4	26.690	47	4.040,0	90	915,30	133	279,17
5	25.390	48	3.890,0	91	887,70	134	272,03
6	24.170	49	3.743,0	92	861,00	135	265,70
7	23.010	50	3.603,0	93	835,30	136	259,30
8	21.920	51	3.467,0	94	810,30	137	253,00
9	20.880	52	3.340,0	95	786,70	138	246,93
10	19.900	53	3.217,0	96	763,30	139	241,03
11	18.970	54	3.099,0	97	741,00	140	235,27
12	18.090	55	2.986,0	98	719,30	141	229,70
13	17.250	56	2.878,0	99	698,70	142	224,30
14	16.460	57	2.774,0	100	678,30	143	219,00
15	15.710	58	2.675,0	101	659,00	144	213,90
16	15.000	59	2.579,0	102	640,30	145	208,87
17	14.320	60	2.488,0	103	622,00	146	204,03
18	13.680	61	2.400,0	104	604,30	147	199,33
19	13.070	62	2.316,0	105	587,00	148	194,77
20	12.490	63	2.235,0	106	571,00	149	190,33
21	11.940	64	2.157,0	107	555,00	150	185,97
22	11.420	65	2.083,0	108	539,70		



# Warranty Card

## Complete and return to validate warranty

Please complete this card and return it to seepex Inc. By using this card, the valid warranty period will commence at the pump "start-up" date. If this card is not completed the warranty coverage period will commence on the date the pump is shipped from the seepex factory. This card must be completed and mailed no later than one year from the date of shipment.

### Client

User Entity: ..... Address of plant: .....  
 Contact Person: .....  
 Phone Number: .....  
 Fax Number: .....  
 E-mail Address: .....

### Technical Pump Data

Pump Model: .....  
 Pump Commission: .....

### Performance Data

Pumped Product: .....  
 Diff. Pressure: ..... Flow Rate: .....  
 Temperature: ..... Viscosity: .....  
 Solids Size: ..... Solids %: .....

### Inquiry

Was the appearance of the pump acceptable? ..... Yes ..... No  
 Did the pump suffer any freight damage? ..... Yes ..... No  
 Did the pump perform as expected? ..... Yes ..... No  
 Did you receive: - Data Sheets? ..... Yes ..... No  
                           - O&M Manuals? ..... Yes ..... No  
 Did you local seepex distributor contact your to arrange a start-up?..... Yes ..... No

### other comments

.....  
 .....

### Name of person completing card (please print)

Date: ..... Signature: .....



## TERMS & CONDITIONS OF SALE AND/OR REPAIR 01.16

The following terms and conditions shall apply to an order for all or any part of the articles covered by the accompanying offer unless a specific exception is included therein. Acceptance of any order by SEEPEx Inc. is expressly made conditional upon Buyer's acceptance of SEEPEx Inc. Terms and Conditions of Sale and/or Repair. All prior or future terms, conditions or negotiations (whether written or oral) by Buyer will therefore be considered void and inapplicable, unless otherwise agreed in writing. SEEPEx Inc. reserves the right, in its sole discretion, to refuse any order, unconditionally, for any reason, including but not limited to: expiration of the validity of the offer, errors in the offer, unacceptable payment risks, conflicts with contractual commitments made to other potential customers and the chance that a customer may try to enforce an implied warranty or merchantability of the products offered.

### 1. PRICES

#### 1.1.

Any prices quoted shall only be valid for orders placed within 30 days from the date of issue of the offer. Prices are Ex-Works SEEPEx Inc. plant (Enon, Ohio USA) in U.S. dollars, unless otherwise agreed. SEEPEx Inc. reserves the right to correct typographical or clerical errors.

### 2. TERMS

#### 2.1.

All orders are subject to approval by the SEEPEx Inc. Credit Department. Unless otherwise agreed, if payment for the invoice due is not made in full within thirty (30) days after shipment, late fees of eighteen percent (18%) per year (equivalent to a nominal monthly interest rate of 1.5%) will be applied on the unpaid balance until paid in full. The terms and conditions herein set forth are based upon tariffs, taxes, foreign exchange rates, delivery, and other conditions in effect on the date of the customer's order. In the event that such tariffs, taxes, foreign exchange rates, delivery, and/or other conditions should change prior to delivery of the goods, SEEPEx Inc. reserves the right to charge such increased duties, taxes, or charges to the customer.

#### 2.2.

Unless the order includes the appropriate exemption certificates and/or licenses, duties and taxes levied by Federal, State, or other governments are required to be charged automatically at the rate imposed at time of importation/shipment. Any change in law, regulations, or Government practice which causes a variation of any kind in the applicable charges from the amounts stated in the offer shall result in an equivalent change in the price quoted.

#### 2.3.

Until payment is made in full, SEEPEx Inc. shall retain the right, without notice, to repossess and/or retain the items, and/or dispose of them, for its benefit and hold the customer responsible for any loss. Customer agrees to enter into any agreements, contracts, or notices required confirming such rights.

### 3. SECURITY

#### 3.1.

In order to secure any obligations due to SEEPEx Inc. from the customer the customer grants to SEEPEx Inc. a security interest in:

- a) The merchandise covered by the customer's order (s), and
- b) All property and funds of the customer now or hereafter in SEEPEx Inc.'s possession, and in all additions and proceeds of such merchandise and/or property. The customer hereby authorizes SEEPEx Inc. to sign alone any financing statement or statements and to do all and any other things which may be necessary to perfect such security interest.

### 4. CANCELLATION

#### 4.1.

After acceptance, orders may be canceled only with the express approval of SEEPEx Inc. In the event of an approved cancellation, the customer shall remain responsible for payment for all work performed and/or material expenses incurred by SEEPEx Inc. as of the time of cancellation. SEEPEx Inc. reserves the right to cancel the order if SEEPEx Inc. determines, in its sole discretion, that the customer's financial condition renders the customer unable or unlikely to pay for the order as agreed.

### 5. RETURN

#### 5.1.

No credit will be allowed for returns unless SEEPEx Inc. has authorized such returns in writing in advance. A copy of this authorization must be returned with the item as the packing slip. All returns are subject to restocking charges and to the SEEPEx Inc. Return Goods Authorization (RGA) Policy, which is available on [www.seepex.com](http://www.seepex.com), and is incorporated herein by reference. SEEPEx Inc. will only issue credits for items that can be resold. Items that are special for a specific customer, including but not limited to: special hoppers, baseplates, electrical panels, gear reducers and electric motors are specifically excluded from consideration for credit. Any items not received in good condition or items that cannot be put back into stock will not be accepted. Any elastomer material with over three (3) years of fabrication will not be accepted for return and/or credit. Customers must pay for all freight associated with any return, including parts or equipment that may be considered to be covered by the limited warranty protection clause below. Outstanding RGA's that have declined repair will be scrapped automatically after ninety (90) days if no other written instructions are provided.

### 6. SHIPMENT

#### 6.1.

- a) Handling Charge: Customer shall be responsible for making all arrangements for shipment of the order with a suitable carrier. In the event that customer requests that SEEPEx Inc. make arrangements for shipment, then customer agrees to pay to SEEPEx Inc., in addition to the applicable shipping charges, a handling charge in the amount of 10% of the shipping charges with a minimum \$5.00 to a maximum charge of \$150.00, with special services requiring additional charges.
- b) New Articles: Where shipping instructions dictate no specific routing, SEEPEx Inc. will utilize its best judgement in determining routing but shall not be liable for any charges once the goods have reached their agreed upon point of delivery. If changes are made at customer's request in a) the agreed upon point of delivery, or b) in the routing selected by SEEPEx Inc. and if such changes involve additional costs to be incurred, such costs shall be borne exclusively by the customer, unless otherwise agreed in writing.
- c) Repair Work: All items for which the customer requests repair or other services by SEEPEx Inc. shall be delivered to and picked up from the SEEPEx Inc. plant (Enon, Ohio USA) unless otherwise agreed in writing. All costs of delivery shall be paid by the customer unless otherwise agreed to in writing prior to shipment.
- d) All Orders: On collect freight shipments, cartage charges from plant to carrier are the responsibility of the customer. Title to articles passes to customer upon delivery to carrier acting as customer's agent subject to any right of retention by SEEPEx Inc. All claims for shortage in, and damages in, shipment or otherwise must be reported to carrier immediately upon receipt with copy or report to ourselves within five (5) business days.

### 7. WARRANTIES & LIABILITY LIMITATIONS

#### 7.1.

- a) New Articles: SEEPEx Inc. warrants articles of our manufacture against defects in material and/or workmanship for a period of three (3) years from date of delivery, provided that the articles have been installed, maintained, and operated in strict accordance with SEEPEx Inc. recommendations and instructions.
- b) Repair Work: Defined herein as work and services performed by SEEPEx Inc. SEEPEx Inc. warrants all repair work and services that it performs against defects in workmanship and/or materials for a period of three (3) years from the date of delivery of the repaired articles.
- c) All Orders: All warranty claims shall be submitted promptly in writing to SEEPEx Inc. Any warranty replacement and/or repair shall be made Ex-Works SEEPEx Inc. plant (Enon, Ohio USA). SEEPEx Inc.'s warranty obligation shall be limited to the replacement and/or repair only of defective material and/or workmanship.

#### 7.2.

In no event shall SEEPEx Inc. be liable for any incidental or consequential loss or damage of whatever kind of nature including but not limited to loss of business income or profits, or damage resulting from delay in manufacture or delivery, loss of use or damage to any installation into which the article may be installed, whether arising out of contract or tort.

SEEPEx Inc.  
511 Speedway Drive  
Enon, Ohio 45323  
USA

T +1 937 864-7150  
[sales.us@seepex.com](mailto:sales.us@seepex.com)  
[www.seepex.com](http://www.seepex.com)

**7.3.**

SEEPEx Inc. shall not be liable for any loss or damage resulting from delay and/or late delivery due to causes beyond our reasonable control. Notwithstanding anything herein to the contrary, SEEPEx Inc.'s liability to customer on any cause of action shall be limited to the amount paid by the customer on the subject order. SEEPEx Inc. makes no warranties, express or implied, with respect to articles or products manufactured or provided by any party other than SEEPEx Inc., except to transfer to the customer, where permissible, any warranty provided to SEEPEx Inc. by the original manufacturer. On any claims for repairs and/or replacement under such warranty, all costs incurred by SEEPEx Inc. which are not underwritten by the original manufacturers shall be borne by the customer. Except as provided herein, SEEPEx Inc. expressly disclaims all representations, promises, or warranties, express or implied with respect to any products, articles, work, or services, including any warranties of merchantability and of fitness for a particular purpose. All warranties made by SEEPEx Inc. shall be void where the goods have been subject to misuse, neglect, damage or alteration. SEEPEx Inc. shall be held free and harmless from any dispute or claim anywhere arising from and relating to infringement of patent, design, trademark, or copyright of items, sold or repaired under this contract.

**8. PROPERTY RIGHTS AND RISKS**

**8.1.**

SEEPEx Inc. disclaims any liability or responsibility whatsoever with regard to loss or damages to the customer's property while in the possession, custody or control of SEEPEx Inc. for requested repairs or other services, and the customer expressly agrees to indemnify and hold SEEPEx Inc. harmless against any and all claims for such loss or damage.

**9. HAZARDOUS MATERIALS**

**9.1.**

Any hazardous materials or the existence of any hazards relative to the condition of any product tendered to SEEPEx Inc. for service or repair work must be disclosed by customer in writing in the RGA Request Form, whether or not required to be disclosed per federal law on the MSDS sheet. Customer shall defend, indemnify and hold SEEPEx Inc. harmless from and against any and all claims of injury or damage, including attorney's fees, caused by any hazardous condition or material on or about products accepted for service/repair. This obligation includes but is not limited to claims of bodily injury or death suffered by SEEPEx Inc. employees, or by other parties.

### 13.1 Manufacturer's documents / suppliers

- available






Intelligent Drivesystems



# B1000

Operating & Instruction Manuals  
For Gear Units

B1000

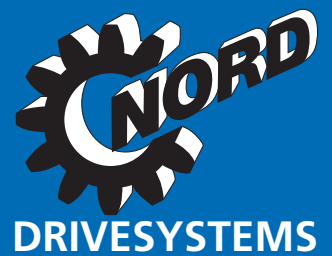



# TABLE OF CONTENTS



DRIVESYSTEMS

RETAIN FOR FUTURE USE

WWW.NORD.COM

TITLE	Document Number & Hyperlink
General Instructions	<a href="#">U10000</a>
Safety Notes	<a href="#">U10020</a>
Storage & Commissioning	<a href="#">U10040</a>
Unit Installation	<a href="#">U10060</a>
Solid Shaft Connections	<a href="#">U10250</a>
Keyed Hollow Shaft	<a href="#">U10270</a>
Shaft Fixing Kit	<a href="#">U10280</a>
Hollow Shaft With Shrink Disc	<a href="#">U10290</a>
NORD GRIPMAXX™	<a href="#">U10310</a>
Reducer Mounting Footed & Flange Mount Gear Units	<a href="#">U10500</a>
Clincher™ Shaft-Mount With Rubber Buffers	<a href="#">U10580</a>
Right Angle Shaft-Mount with Torque Arm (D)	<a href="#">U10600</a>
90.1 Helical-Bevel Shaft-Mount with Bottom Mount Torque Arm (K)	<a href="#">U10620</a>
Helical & Bevel Reducer Lubrication	<a href="#">U10750</a>
VL2 & VL3 Extended Bearing Lubrication	<a href="#">U10760</a>
Helical Worm Reducer Lubrication	<a href="#">U10770</a>
Minicase™ (SM) Worm Reducer Lubrication	<a href="#">U10790</a>
Minicase™ (SMI/SMID) Worm Reducer Lubrication	<a href="#">U10800</a>
FLEXBLOC™ Worm Reducer Lubrication	<a href="#">U10810</a>
Expansion Chambers Installation & Maintenance Manual	<a href="#">U10830</a>
Helical & Bevel Reducer Lubrication Types	<a href="#">U11000</a>
Helical Worm Reducer Lubrication Types	<a href="#">U11020</a>
Minicase™ (SM) Worm Reducer Lubrication Types	<a href="#">U11040</a>
Minicase™ (SMI/SMID) Worm Reducer Lubrication Types	<a href="#">U11050</a>
FLEXBLOC™ Worm Reducer Lubrication Types	<a href="#">U11060</a>
Standard In-Line Footed Oil Fill Quantities	<a href="#">U11500</a>
Standard In-Line Flanged Oil Fill Quantities	<a href="#">U11600</a>
Helical In-Line Footed Oil Fill Quantities	<a href="#">U11700</a>
Helical In-Line Flanged Oil Fill Quantities	<a href="#">U11800</a>
CLINCHER™ Oil Fill Quantities	<a href="#">U11900</a>
90.1 Helical-Bevel Footed Oil Fill Quantities	<a href="#">U12000</a>
90.1 Helical-Bevel Flanged Oil Fill Quantities	<a href="#">U12100</a>
92 Series Helical-Bevel Footed Oil Fill Quantities	<a href="#">U12200</a>
92.1/93.1 Series Helical Bevel Oil Fill Quantities	<a href="#">U12205</a>
92 Series Helical-Bevel Flanged Oil Fill Quantities	<a href="#">U12300</a>
Helical-Worm Footed Oil Fill Quantities	<a href="#">U12400</a>
Helical-Worm Solid Shaft/Flanged Oil Fill Quantities	<a href="#">U12500</a>
Helical-Worm Hollow Shaft Oil Fill Quantities	<a href="#">U12600</a>
Nordbloc Footed Oil Fill Quantities	<a href="#">U12700</a>
Nordbloc Flanged Oil Fill Quantities	<a href="#">U12800</a>



# TABLE OF CONTENTS



DRIVESYSTEMS

RETAIN FOR FUTURE USE

WWW.NORD.COM

TITLE	Document Number & Hyperlink
Nordbloc.1 Footed Oil Fill Quantities	<a href="#">U12900</a>
Nordbloc.1 Flanged Oil Fill Quantities	<a href="#">U13000</a>
Minicase™ (SM) Footed Oil Fill Quantities	<a href="#">U13100</a>
Minicase™ (SMI) Footed Oil Fill Quantities	<a href="#">U13150</a>
Minicase™ Flanged (SM) Oil Fill Quantities	<a href="#">U13200</a>
Minicase™ Flanged (SMI) Oil Fill Quantities	<a href="#">U13250</a>
FLEXBLOC™ Oil Fill Quantities	<a href="#">U13300</a>
Standard In-Line Oil Plug & Vent Locations	<a href="#">U14000</a>
Helical In-Line Oil Plug & Vent Locations	<a href="#">U14100</a>
CLINCHER™ Oil Plug & Vent Locations	<a href="#">U14200</a>
92 Series Helical-Bevel Oil Plug & Vent Locations	<a href="#">U14300</a>
92.1/93.1 Series Helical-Bevel Oil Plug & Vent Locations	<a href="#">U14305</a>
90.1 Helical-Bevel Oil Plug & Vent Locations	<a href="#">U14400</a>
Helical-Worm Oil Plug & Vent Locations	<a href="#">U14500</a>
Nordbloc Oil Plug & Vent Locations	<a href="#">U14600</a>
Nordbloc.1 Oil Plug & Vent Locations	<a href="#">U14700</a>
Minicase™ (SMI) Worm Oil Plug & Vent Locations	<a href="#">U14750</a>
FLEXBLOC™ Vent Locations	<a href="#">U14800</a>
Standard In-Line Parts List Drawings	<a href="#">U15000</a>
Helical In-Line Parts List Drawings	<a href="#">U15100</a>
CLINCHER™ Parts List Drawings	<a href="#">U15200</a>
CLINCHER™ VL2 & VL3 Parts List Drawings	<a href="#">U15210</a>
90.1 Helical-Bevel Parts List Drawings	<a href="#">U15300</a>
90.1 Helical-Bevel VL2 & VL3 Parts List Drawings	<a href="#">U15310</a>
92 Series Helical-Bevel Parts List Drawings	<a href="#">U15400</a>
Helical-Worm Parts List Drawings	<a href="#">U15500</a>
Nordbloc™ Parts List Drawings	<a href="#">U15600</a>
Troubleshooting	<a href="#">U19000</a>
Motors - AC Induction, Single and Polyphase	<a href="#">U30000</a>
Motor Brakes Installation & Maintenance	<a href="#">U35000</a>
Fast Acting Brake Rectifiers [GPE, GPU & PMG]	<a href="#">U35100</a>
Current Sensing Brake Relay [IR] Installation & Maintenance	<a href="#">U35200</a>
NEMA/IEC Inputs Adapters & Their Couplings	<a href="#">U45100</a>
NEMA or IEC Input Adapter Lubrication Options	<a href="#">U45250</a>
NEMA or IEC Input Adapter with Grease Fitting	<a href="#">U45255</a>
Solid Input Shaft [W]	<a href="#">U45300</a>
Motor Mount Platform [MK]	<a href="#">U45400</a>
Sugar Scoop	<a href="#">U45500</a>
NSD tuph Touch-Up Kit	<a href="#">U65100</a>
Terms & Conditions of Sale	<a href="#">Terms</a>



# BIM TO USER MANUAL CROSS REFERENCE



DRIVESYSTEMS

RETAIN FOR FUTURE USE

WWW.NORD.COM

Old BIM TITLE (No Longer Available)	New User Manual Document Numbers & Hyperlinks
BIM 1010 - Unibase Helical In-Line Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U11700 - Helical In-Line Footed Oil Fill Quantities</a> <a href="#">U11800 - Helical In-Line Flanged Oil Fill Quantities</a> <a href="#">U14100 - Helical In-Line Oil Plugs &amp; Vent Locations</a> <a href="#">U15100 - Helical In-Line Parts Lists Drawings</a>
BIM 1011 - NORDBLOC Helical Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U12700 - Nordbloc™ Footed Oil Fill Quantities</a> <a href="#">U12800 - Nordbloc™ Flanged Oil Fill Quantities</a> <a href="#">U14600 - Nordbloc™ Oil Plugs &amp; Vent Locations</a> <a href="#">U15600 - Nordbloc™ Parts Lists Drawings</a>
BIM 1012 - Standard Helical In-Line Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U11500 - Standard In-Line Footed Oil Fill Quantities</a> <a href="#">U11600 - Standard In-Line Flanged Oil Fill Quantities</a> <a href="#">U14000 - Standard In-Line Oil Plugs &amp; Vent Locations</a> <a href="#">U15000 - Standard In-Line Parts Lists Drawings</a>
BIM 1013 - NORDBLOC.1 Helical Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U12900 - Nordbloc.1™ Footed Oil Fill Quantities</a> <a href="#">U13000 - Nordbloc.1™ Flanged Oil Fill Quantities</a> <a href="#">U14700 - Nordbloc.1™ Oil Plugs &amp; Vent Locations</a>
BIM 1020 - Unibase Shaft Mount Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10580 - CLINCHER™ w/ Rubber Buffer</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U11900 - CLINCHER™ Oil Fill Quantities</a> <a href="#">U14200 - CLINCHER™ Oil Plugs &amp; Vent Locations</a> <a href="#">U15200 - CLINCHER™ Parts Lists Drawings</a>



# BIM TO USER MANUAL CROSS REFERENCE



DRIVESYSTEMS

RETAIN FOR FUTURE USE

WWW.NORD.COM



Old BIM TITLE (No Longer Available)	New User Manual Document Numbers & Hyperlinks
BIM 1030 - Unicase Helical Worm Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10770 - Helical-Worm Reducer Lubrication</a> <a href="#">U11020 - Helical-Worm Reducer Lubrication Types</a> <a href="#">U12400 - Helical-Worm Footed Oil Fill Quantities</a> <a href="#">U12500 - Helical-Worm Solid Shaft/Flanged Oil Fill Quantities</a> <a href="#">U12600 - Helical-Worm Hollow Shaft Oil Fill Quantities</a> <a href="#">U14500 - Helical-Worm Oil Plugs &amp; Vent Locations</a> <a href="#">U15500 - Helical-Worm Parts Lists Drawings</a>
BIM 1031 - MINICASE Worm Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10770 - Helical Worm Reducer Lubrication</a> <a href="#">U11040 - Minicase™ Worm Reducer Lubrication Types</a> <a href="#">U13100 - Minicase™ Foot Mount Oil Fill Quantities</a> <a href="#">U13200 - Minicase™ Flange Mount Oil Fill Quantities</a>
BIM 1033 - SI Design FLEXBLOC Worm Gearboxes Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10770 - Helical Worm Reducer Lubrication</a> <a href="#">U11060 - FLEXBLOC™ Worm Reducer Lubrication Types</a> <a href="#">U13300 - FLEXBLOC™ Oil Fill Quantities</a> <a href="#">U14800 - FLEXBLOC™ Oil Plugs &amp; Vent Locations</a>
BIM 1040 - 92 & 90.1 Helical-Bevel Installation & Maintenance Instructions	<a href="#">U10000 - General Instructions</a> <a href="#">U10020 - Safety Notes</a> <a href="#">U10040 - Storage &amp; Commissioning</a> <a href="#">U10060 - Unit Installation</a> <a href="#">U10250 - Solid Shaft Connections</a> <a href="#">U10500 - Reducer Mounting Footed &amp; Flange Mount Gear Units</a> <a href="#">U10750 - Helical &amp; Bevel Reducer Lubrication</a> <a href="#">U11000 - Helical &amp; Bevel Reducer Lubrication Types</a> <a href="#">U12000 - Bevel Footed Oil Fill Quantities</a> <a href="#">U12100 - Bevel Flanged Oil Fill Quantities</a> <a href="#">U12200 - 92 Series Helical-Bevel Footed Oil Fill Quantities</a> <a href="#">U12300 - 92 Series Helical-Bevel Flanged Oil Fill Quantities</a> <a href="#">U14300 - 92 Series Helical-Bevel Oil Plugs &amp; Vent Locations</a> <a href="#">U14400 - 90.1 Helical-Bevel Oil Plugs &amp; Vent Locations</a> <a href="#">U15300 - 90.1 Helical-Bevel Parts Lists</a> <a href="#">U15400 - 92 Series Helical-Bevel Parts Lists Drawings</a>
BIM 1001 - Hollow Shrink Disc Shaft Installation & Maintenance Instructions	<a href="#">U10290 - Hollow Shaft with Shrink Disc</a>
BIM 1002 - Keyed Shaft & Fixing Element Installation & Maintenance Instructions	<a href="#">U10270 - Keyed Hollow Shaft</a> <a href="#">U10280 - Shaft Fixing Kit</a>
BIM 1003 - Expansion Chambers Installation & Maintenance Instructions	<a href="#">U10830 - Expansion Chambers Installation &amp; Maintenance Manual</a>
BIM 1009 - Inputs	<a href="#">U45100 - NEMA IEC Inputs &amp; Their Couplings</a> <a href="#">U45250 - NEMA or IEC Input Adapter Lubrication Options</a> <a href="#">U45300 - Solid Input Shaft [W]</a> <a href="#">U45400 - Motor Mount Platform</a> <a href="#">U45500 - Sugar Scoop</a>
BIM 1004 - Motors	<a href="#">U30000 - Motors - AC Induction, Single and Polyphase</a>
BIM 1014 - Motor Brakes	<a href="#">U35000 - Motor Brakes Installation &amp; Maintenance</a>
BIM 1092 - Current Sensing Brake Relay [IR]	<a href="#">U35195 - Identification of Rectifier</a> <a href="#">U35200 - Current Sensing Relay</a> <a href="#">U35205 - Current Sensing Relay</a>
BIM 1095 - Fast Brake Rectifier [GPE & GPU]	<a href="#">U35100 - Fast Brake Rectifier</a>
BIM 9002 - GRIPMAXX™	<a href="#">U10310 - NORD GRIPMAXX™</a>





## 1. Importance of the operating instructions

These operating instructions are intended to provide general information and safety guidelines. It is the responsibility of the buyer, machine builder, installer and user of the NORD product to make sure that all the proper safety notes and operating instructions have been reviewed and understood. If the contents of this instruction or any applicable operating instructions are not understood, please consult NORD.

 **WARNING** 

Electric motors, gearmotors, electrical brakes, variable frequency drives, and gear reducers contain potentially dangerous high-voltage, rotating-components and surfaces that may become hot during operation. All work involved in the transport, connection, commissioning and maintenance of any NORD product must be carried out by qualified and responsible technicians.

## 2. Inspect incoming freight

Before accepting shipment from the freight company, thoroughly inspect the NORD equipment for any shipping and handling damage. If any goods called for in the bill of lading or express receipt are damaged, or if the quantity is short, do not accept until the freight express agent makes an appropriate notation on your freight bill or express receipt. If any concealed loss or damage is discovered later, notify your freight carrier or express agent at once, and request a formal review of your claim.

Claims for loss or damage in shipment must not be deducted from the NORD invoice, nor should payment of the NORD invoice be withheld awaiting adjustment of such claims, as the carrier guarantees safe delivery. NORD will try to assist in collecting claims for loss or damage during shipment; however, this willingness on our part does not remove the transportation company's responsibility in reimbursing you for collection of claims or replacement of material.

## 3. Obtaining detailed operating instructions


One can receive the detailed installation and maintenance instructions by entering a serial number (or NORD order number) at the appropriate location on the NORD web site.

- Record the serial number from your gearmotor, gear reducer, or motor nameplate, or record the serial number found on your order confirmation.
- Go to [www.nord.com/docs](http://www.nord.com/docs) to download the appropriate operating instructions.












EXAMPLE: [www.nord.com/docs](http://www.nord.com/docs)

### Unit documentation

Gear unit installation and maintenance instructions can be found by entering the sales order number in the search field below. The sales order number can be found on the gear unit's nameplate (see illustration) or on the order confirmation.





**Sales Order Number** 200836833-400  
**Model Type** SK9382AZSH-180MH/4 TW RD VZ  
**Mounting Position** M4

Type	Name	Pages	Size
	U10000 - General Instructions	2	(51.97 KB)
	U10040 - Storage	1	(36.77 KB)
	U10060 - Unit Installation	2	(60.94 KB)
	U10270 - Keyed Hollow Shaft	2	(70.52 KB)
	U10750 - Helical and Bevel Reducer Lubrication	2	(75.66 KB)
	U11000 - Helical and Bevel Lubrication Types	2	(58.10 KB)
	U11900 - Lubrication Capacity - Clincher Shaft Mounted	1	(894.56 KB)
	U14200 - Oil Plug and Vent Locations - Clincher Parallel Shaft	1	(125.83 KB)
	U15200 - Parts List - Clincher Parallel Shaft	12	(519.50 KB)
	Complete Manual for 200836833-400 (PDF Format)	31	(2.25 MB)
	All Manuals for 200836833-400 (ZIP Format)		(2.01 MB)

## 4. Intended use

NORD is a supplier of electric motors, gearmotors, reducers, electromechanical brakes, mechanical variators, and electrical variable frequency drives that are intended for commercial installations on larger systems and machines.

 **WARNING** 

NORD does not accept any liability for damage or injury caused by:

- Inappropriate use, operation or adaptation of the drive system.
- Unauthorized removal of housing covers, safety and inspection covers, guarding, etc.
- Unauthorized modifications to the drive system.
- Improper servicing or repair work on the drive system.
- Damage caused during shipment or transportation.
- Disregard of the important Safety Notes or Operating Instructions.



## 5. Notes concerning warranty and liability

All units are supplied according to the terms described in our standard "Conditions of Sale." The unit limited warranty is also defined in our "Conditions of Sale" and is located in the back of our product catalogs as well as the back of your order invoice.

All NORD Safety Notes and all related NORD Operating instructions shall be considered up-to-date at the time in which they were compiled by the buyer, machine builder, installer or user. NORD reserves the right to incorporate technical modifications and information updates to any safety/operating instructions that are within the scope of providing additional knowledge or clarification, communicating design changes, or product enhancements. Information updates may include any NORD product, or subsequent products purchased and supplied by NORD; No specific claims can be derived from the information or illustrations and descriptions contained in the safety notes or related operating instructions.



### WARNING



NORD assumes no liability for personal injury, equipment damage or malfunctions resulting from failure to comply with any installation safety notes. The applicable national, regional, and local work regulations and safety requirements must also be complied with. Failure to comply with any safety notes or regulations may result in serious injury, damage to property, or even death.





## 6. Checklist for installation and operation

- ☒ Verify that the purchased NORD product has been supplied with the expected accessories & options. Check the received goods and packing slip to make sure items are properly received.
- ☒ Make sure that you have all of the required Operating Instructions for your NORD electric motor, gearmotor, reducer, electromechanical brake, mechanical variable speed drives, or electrical variable frequency drives.
- ☒ Consult NORD if you feel you are missing any documentation or if you have questions.





## 1. Safety & information symbols



All work including transportation, storage, installation, electrical connection, commissioning, servicing, maintenance and repair must be performed **only by qualified specialists or personnel**. It is recommended that repairs to NORD Products are carried out by the NORD Service Department. Instructions related to operational safety will be emphasized as shown.

Symbol	Meaning
	<b>General Warning or Hazard</b> - Severe risk or danger of personal injury or death by working around dangerously high electrical voltage or moving machinery. Proper safety precautions must be taken.
	<b>Possible Harmful Situation</b> - Care must be taken to avoid the possibility of damaging the drive unit, driven machine, or the environment.
	<b>Important Note</b> - Useful note or tip to help assure trouble-free operation.
	<b>Material Disposal Note</b> - Important note concerning suggested material disposal.

## 2. Safety warnings

 GENERAL WARNINGS 
<ul style="list-style-type: none"> <li>All work involved in the transport, connection, commissioning and maintenance of any NORD product must be carried out by qualified and responsible technicians. All applicable national, regional, and local work regulations and safety requirements must also be complied with. <b>NORD assumes no liability for personal injury, accidental death, or equipment damage and malfunctions resulting from failure to comply with installation or operating instructions, safety notes, or any work regulations and laws!</b></li> <li>Gear unit installation and maintenance work may only be performed when no power is available to the prime mover or motor. Electric motors, electrical brakes, and variable frequency drives, contain potentially dangerous high-voltage. Prior to installation or maintenance, shut down the power at the circuit breaker or power switch. <b>While working on the drive, make sure the power from the prime mover is isolated or secured on "lock-out" to prevent accidental start-up and to safeguard against injury!</b></li> <li>Surfaces of motors and gear units may become hot during operation or shortly after start-up. In some instances additional protection against accidental contact may be necessary. <b>Use caution to avoid burns or serious injury!</b></li> </ul>

## 3. Observe published performance range & nameplate data

 HARMFUL SITUATION 
Observe the data on all reducer nameplates and verify published ratings for the NORD item/s in question. Do not operate any NORD equipment outside the published performance range. Failure to comply may result in damage to the drive unit, driven machine, or the environment.

### U.S. Nameplate

NORD GEAR CORPORATION-USA / WWW.NORD.COM

SK ①

S/N ②

RATIO ③

SF ④

TORQUE ⑤

LB-IN

SPEED ⑥

RPM

⑦ MTG POS

FOR GEAR LUBRICATION SEE MANUAL

UNIGASE™

- Model/Type
- Serial Number
- Gear Ratio
- Service Factor
- Torque Rating
- Output Speed RPM
- Mounting Position

### European Nameplate

Getriebebau NORD  
GrbH&Co KG  
D - 22934 Bargteheide

Type SK ①

No. ②

i= ③


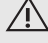
n2= ④ min<sup>-1</sup>

Siehe Wartungsanleitung  
See maintenance instructions  
Voir instructions d'entretien

- Model/Type
- Serial Number
- Gear Ratio
- Speed

## 4. Transportation and handling

Make sure that all eyebolts and lifting lugs are tight and lift only at designed points. Protect the mounting surface from possible damage during transportation.

 WARNING 
Do not attach other machinery or loads to the NORD assembly, since the supplied lifting bolts are not designed for this purpose.

If the gearmotor or assembly is equipped with two suspension eye bolts, then both locations should be used for transportation and placement of the unit; in this case the tension force of the slings must not exceed a 45° angle.

In some instances it may be appropriate to use additional lifting straps or slings in order to assure safe transportation of the assembly. Always use sufficiently rated handling equipment and ensure that adequate safety measures are taken to protect personnel from injury during transportation. Once the NORD assembly is properly installed, remove the transportation fixtures.



## 7. DISPOSAL



### MATERIAL DISPOSAL



Properly dispose of all used gear units and internal parts in accordance with all local regulations. In particular, all lubricants must be properly collected and disposed.

For confirmation of specific materials used in a specific reducer or gearmotor assembly, please consult NORD with the appropriate unit identification or serial number.

Components	Material
Gear wheels, shafts, rolling bearings, parallel keys, snap rings, spacers, shims, etc.	Steel
Gear housing and housing components	Cast iron or Aluminum (depending on type and size)
Worm gears	Bronze alloy
Radial seals, sealing caps, and rubber components	Elastomers with some steel
Coupling components	Plastic or Elastomer with Steel
Housing gaskets and flat oil seals	Asbestos-free sealing or gasket material (various types used)
Gear Oil	Mineral, SHC-Synthetic or PG-Synthetic (can vary)

## 1. Storage



### IMPORTANT NOTE



For storage periods longer than 9 months, or for storage in less than desirable conditions, please consult NORD for recommendations.

Storage for up to 9 months is possible, so long as the following conditions are observed:

- Store the gear unit in its actual mounting position in accordance with the specified oil fill-level, in a clean and dry temperature controlled area. Avoid temperature fluctuations within the range of 0°C and 40°C (32°F to 104°F) and avoid relative humidity conditions in excess of 60%.
- Protect all exposed or unpainted shaft and flange surfaces with an anti-corrosion agent or grease.
- Store in a location free from shock and vibration, to avoid false brinelling of bearing elements and raceways.
- Whenever possible, rotate the shafts periodically, by hand if necessary, to help prevent brinelling (bearing damage) and to help keep the shaft seals pliable.
- Avoid direct exposure to the sun or UV light and aggressive or corrosive materials in the environment (ozone, gases, solvents, acids, caustic solutions, salts, radioactivity, etc).

## 2. Commissioning

Prior to gear unit start-up, complete the following:


- Please check your gear unit for a vent and if applicable to your product, remove the sealing plug to activate.




### WARNING



To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start up.

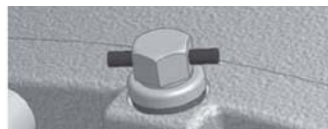

Sealed vent

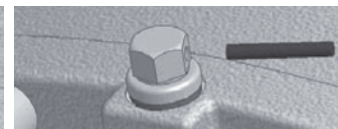

Activated vent

- Check the lubricant and be sure the gear unit is filled with the proper oil type, to the proper level, as determined by the mounting position.



### IMPORTANT NOTE



Some smaller gear units are supplied as maintenance free/lubricated for life gear units. Oil level may not be checked on some of these units.

- Check the condition of all shaft seals and all assembled flange gasket areas. If any change is detected in the shape, color, hardness or permeability, or if any leaks are detected, the corresponding shaft seals and/or gaskets must be replaced.
- Remove all anti-corrosive metal protectant from otherwise bare metal surfaces. Follow product manufacturers directions and warnings during surface protection removal.
- Check the resistance of all motor and brake windings to verify the integrity of the winding insulation and inspect all terminal box openings and wire connection areas to verify that all components are dry and free of corrosion.

## 3. Long-Term Storage


By taking special precautions, problems such as seal leakage and reducer failure due to the lack of lubrication, improper lubrication quantity, or contamination can be avoided. The following precautions will protect gear reducers during periods of extended storage:

- Store the gear unit in its actual mounting position in accordance with the specified oil fill-level, in a clean and dry temperature controlled area. Avoid temperature fluctuations within the range of 0°C and 40°C (32°F to 104°F) and avoid relative humidity conditions in excess of 60%.
- Fill the reducer full with oil that is compatible with the product normally used or recommended during service.
- Apply grease to all unpainted or unprotected shafts, bores, keyways, flange surfaces, tapped holes, and to the exterior of all oil seals.
- Store in a location free from shock and vibration, to avoid false brinelling of bearing elements and raceways.
- Once every few months rotate the input shaft approximately 10-20 revolutions to redistribute the weight of gears and shafts and to prevent brinelling of the bearings and drying of the seal track.
- Avoid direct exposure to the sun or UV light and aggressive or corrosive materials in the environment (ozone, gases, solvents, acids, caustic solutions, salts, radioactivity, etc.)


## 4. Commissioning After Long-Term Storage

- Please check your gear unit for a vent and if applicable to your product, remove the sealing plug to activate.

⚠	<b>WARNING</b>	⚠
To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start up.		

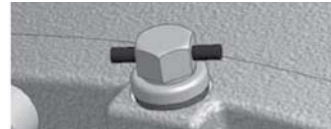

Sealed vent

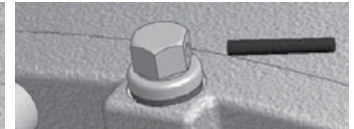

Activated vent

- Remove all anti-corrosive metal protectant from otherwise bare metal surfaces. Follow product manufacturers directions and warnings during surface protection removal.
- Drain the reducer and refill it with the proper type and amount of lubricant.
- Observe start-up and initial operation to make sure there are no seal or gasket leaks, or unusual sounds, vibration or heat rise during operation.
- Check the resistance of all motor and brake windings to verify the integrity of the winding insulation and inspect all terminal box openings and wire connection areas to verify that all components are dry and free of corrosion.

## 1. Installation site

Drives must be properly installed if they are to produce the rated torque. Improper installation may lead to oil leaks, reduced life, or even catastrophic failure. NORD gear drives and motors are intended to be installed at a suitable mounting site under the following conditions:

- Unimpeded airflow to and around the units.
- Accessibility to oil drain, level and breather plugs.
- On brakemotors, allow adequate space for removing the fan guard and replacing and adjusting the brake.
- Mounting surfaces must be flat, torsionally rigid, and dampened against vibration.
- Unless special measures are taken, the immediate vicinity around the gear drive or motor should not be exposed to any aggressive or corrosive substances, contaminated air, ozone, gases, solvents, acids, alkalis, salts, radioactivity, etc.

## 2. Mounting position

Reducer mounting position charts illustrate the standard mounting positions for horizontal and vertical mounting. All gear units are assembled with the oil fill-level, oil-drain and vent plugs installed in their proper locations, **according to the customer-specified mounting position**. For mounting orientations other than shown consult NORD Gear.

STOP
*HARMFUL SITUATION*
STOP

The gear reducer may not receive proper lubrication if the unit is not mounted in the position for which it is designed. Observe the mounting position designated on the reducer nameplate, or specified in the order acknowledgement. Consult NORD prior to changing mounting position in the field. While it is often possible to simply relocate the oil fill-level and vent locations, and adjust the oil fill amount, in some cases, different mounting positions may lend themselves to different internal construction features.

## 3. Reducer mounting

- The support foundation must be straight, level and flat. Whether the gear unit is foot-mounted or flange-mounted, NORD recommends that the straightness and flatness of the customer-supplied support foundation follow **Table 1**.
- The gear unit must be properly aligned with the driven shaft of the machine in order to prevent additional stress or load forces from being imposed upon the gear unit.
- To facilitate oil drainage it may be desirable to elevate the gear box foundation above the surrounding support structure.
- All bolting surfaces must be clean and free from contamination and corrosion.

**Table 1: Recommended Straightness and Flatness of Customer-Supplied Support Foundation**

Above (in)	To & Including (in)	General Tolerance on Straightness & Flatness ISO 2768-2, Tolerance Class K
0.00	0.39	+/- 0.002 in
0.39	1.18	+/- 0.004 in
1.18	3.9	+/- 0.008 in
3.9	11.8	+/- 0.016 in
11.8	39	+/- 0.024 in
39	118	+/- 0.031 in

Above (mm)	To & Including (mm)	General Tolerance on Straightness & Flatness ISO 2768-2, Tolerance Class K
0	10	+/- 0.05 mm
10	30	+/- 0.1 mm
30	100	+/- 0.2 mm
100	300	+/- 0.4 mm
300	1000	+/- 0.6 mm
1000	3000	+/- 0.8 mm

**Straightness:** Based upon the length of the corresponding line.

**Flatness:** Based upon the longer lateral surface or the diameter of the circular surface.

STOP
*HARMFUL SITUATION*
STOP

The responsibility for the design and construction of the support foundation is with the user. The foundation must be adequate to withstand normal operating loads and possible overloads while maintaining alignment to attached system components under such loads. **Motors and drive components mounted on prefabricated base plates can become misaligned during shipment. Always check alignment after installation.**

## 4. Steel foundation

An engineered structural steel foundation should be designed to provide adequate rigidity and prevent loads from distorting the housing or causing misalignment of internal gears and shafts. When foot-mounting the gear reducer, a base plate or sole plate with suitable thickness (generally equal or greater than the thickness of the drive feet) should be securely bolted to steel supports and extend under the entire gear drive assembly. When flange-mounting the gear unit, the bulk head plate must be engineered to minimize buckling distortions and support the cantilevered weight of the gear unit or gear motor.


STOP
*HARMFUL SITUATION*
STOP

Do not weld on the gear unit or use the gear unit as an earth or ground connection for any welding procedure as this may cause permanent damage to the bearings and gears.

## 5. Concrete foundation

If a concrete foundation is used, allow the concrete to set firmly before bolting down the gear drive. Grout structural steel mounting pads and bolts of sufficient size into the concrete, to adequately distribute the load stress onto the concrete foundation.

Figure 1: Concrete Foundation

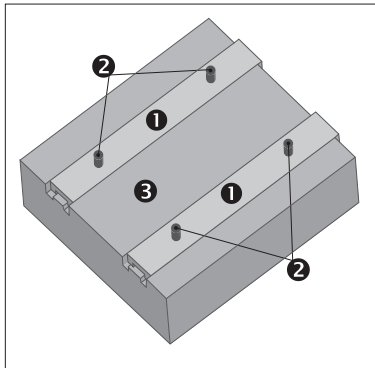

- ① Grouted Structural Steel Mounting Pads
- ② Mounting Bolts
- ③ Concrete Foundation

## 6. Bolt connections for footed & flange mounted units

NORD footed reducers and flange-mount reducers (with B5 flange) have clearance designed into the mounting holes to allow for some minor adjustments in alignment. Bolt size, strength and quantity should be verified to insure proper torque reaction capacity whatever the mounting arrangement. Tightening torque for gear reducer mounting bolts, and recommended fastener grades, are provided in Table 2.

Table 2A: Tightening Torque for Inch Reducer Mounting Bolts

Thread Size (in)	Grade SAE 5 / ASTM A449		Grade SAE 8	
	(lb-ft)	(Nm)	(lb-ft)	(Nm)
1/4-20	7.1	9.6	10.0	13.6
5/16-18	16	21	22	30
3/8-16	28	37	39	53
1/2-13	69	93	98	132
5/8-11	138	188	195	264
3/4-10	247	334	348	472
7/8-9	396	537	558	757
1-8	592	802	833	1,130
1 1/8-7	-	-	1,233	1,672
1 1/4-7	-	-	1,717	2,327
1 3/8-6	-	-	2,267	3,073
1 1/2-6	-	-	2,983	4,045
1 3/4-5	-	-	4,458	6,045

- Calculated tightening torques are based a conventional 60°, clean and dry (un-lubricated) thread, with thread-friction and head-friction equal to 0.15.
- When using inch-fasteners, NORD recommends a minimum Grade SAE 5 (ASTM A-449) for sizes up to 1-8 UNC, and Grade SAE 8 for all larger sizes.

Table 2B: Tightening Torque for Metric Reducer Mounting Bolts

Above (mm)	ISO Grade 8.8		ISO Grade 10.9		ISO Grade 12.9	
	(lb-ft)	(Nm)	(lb-ft)	(Nm)	(lb-ft)	(Nm)
M4	2.4	3.2	3.5	4.7	4.1	5.5
M5	4.7	6.4	6.9	9.3	8.1	11
M6	8	11	12	16	14	19
M8	20	27	29	39	34	46
M10	39	53	58	78	67	91
M12	68	92	100	135	110	155
M14	107	145	159	215	180	250
M16	170	230	247	335	290	390
M18	240	325	343	465	400	540
M20	339	460	487	660	570	770
M22	465	630	664	900	770	1,050
M24	583	790	848	1,150	960	1,300
M27	848	1,150	1,217	1,650	1,440	1,950
M30	1,180	1,600	1,660	2,250	1,950	2,650
M36	2,050	2,780	2,884	3,910	3,470	4,710
M42	3,297	4,470	4,639	6,290	5,560	7,540
M48	4,940	6,700	7,010	9,500	8,260	11,200

- Calculated tightening torques are based on a conventional 60°, clean and dry (un-lubricated) thread, with thread-friction and head-friction equal to 0.15.
- When using metric-fasteners, NORD recommends a minimum ISO Grade 8.8 bolt.

## 7. Mounting the prime mover

When the motor is not flange mounted or integrally mounted to the gearbox, it is important to properly secure and align the gear drive with respect to the driven machine before attempting to align the prime mover or motor.

- After the main gear drive is properly aligned and bolted in place, align the prime mover with respect to the reducer input shaft.
- Use shims under the feet of the prime mover as needed, and secure in place with the proper mounting bolts. Dowel pins may be field-installed to help prevent misalignment and ensure proper realignment if removed for service.



### IMPORTANT NOTE



When using a high speed coupling connection between the prime mover and the reducer, check alignment per the coupling manufacturers recommendations. If the coupling is misaligned, the reducer alignment or shimming is incorrect. Re-align the gear reducer and re-check the high-speed coupling alignment before re-aligning the motor.



## 1. Solid shaft diameter tolerance

Reducer input and output shaft extensions have a diameter tolerance as specified in Table 1.

Table 1: Solid Shaft Diameter Tolerance

Above ø (in)	To & Including ø (in)	Tolerance (in)	
0.375	1.750	+0.0000 / -0.0005	
1.750	7.500	+0.0000 / -0.0010	

Above ø (mm)	To & Including ø (mm)	Tolerance (mm)	ISO 286-2 Fit Class
10	18	+0.012 / +0.001	k6
18	30	+0.015 / +0.002	k6
30	50	+0.018 / +0.002	k6
50	80	+0.030 / +0.011	m6
80	120	+0.035 / +0.013	m6
120	180	+0.040 / +0.015	m6
180	190	+0.046 / +0.017	m6

## 2. Fitting drive elements onto the reducer solid shaft

Solid input and output shaft extensions are provided with a drill and tap feature as indicated in Table 2. When installing drive elements such as coupling hubs, pulleys, sprockets, or gears, NORD recommends using the threaded hole in the end of the shaft, along with a suitable assembly device fitted into the threaded hole.

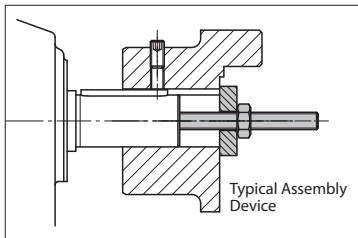


Table 2: Solid Shaft End - Threaded Holes

Above ø (in)	To & Including ø (in)	Tap size & Depth (in)
0.375	0.500	10-24 x 0.43 in
0.500	0.875	1/4-20 x 0.59 in
0.875	0.938	5/16-18 x 0.71 in
0.938	1.100	3/8-16 x 0.87 in
1.100	1.300	1/2-13 x 1.10 in
1.300	1.875	5/8-11 x 1.42 in
1.875	3.500	3/4-10 x 1.73 in
3.500	5.125	1-8 x 2.63 in
5.125	7.500	1 1/4 - 7 x 3.15

Above ø (mm)	To & Including ø (mm)	Tap Size & Depth (mm)
10	13	M4 x 10 mm
13	16	M5 x 12.5 mm
16	21	M6 x 16 mm
21	24	M8 x 19 mm
24	30	M10 x 22 mm
30	38	M12 x 28 mm
38	50	M16 x 36 mm
50	85	M20 x 42 mm
85	130	M24 x 50 mm
130	190	M30 x 60 mm



### HARMFUL SITUATION



**DO NOT DRIVE** or **HAMMER** the coupling hub, pulley, sprocket, or gear into place. An endwise blow to the reducer shaft can generate damaging axial forces and cause damage to the reducer housing, bearings or internal components.



### WARNING



To avoid serious injury the user must provide suitable safety guards for all rotating shafts and shaft components such as couplings, chain drives, belt drives, etc. All guarding must adhere to local regulations and safety standards.

## 3. Installing interference-fit hubs to the reducer shaft

Prior to installing any interference-fit hubs to the reducer shaft, consult with the manufacturer to determine proper assembly and fit. Interference-fits usually require heating the coupling, sprocket or gear hub, per the manufacturer's recommendations. Coupling hub installation typically follows ANSI/AGMA 9002-A86. Always make sure the reducer shaft seals are protected from the heat source. Apply uniform heat to the drive element hub to prevent distortion. NORD does not recommend heating the drive element hub beyond 212°F to 275°F (100°C to 135° C).



### WARNING



When using heat to mount a drive element hub, do not use open flame in a combustible atmosphere or near flammable materials. Use suitable protection to avoid burns or serious injury.



### HARMFUL SITUATION



When using external chain or belt drives, make sure the reducer is sized so that the shaft and bearings have adequate capacity. To avoid unnecessary bearing loads and additional shaft deflection, mount all power take-off devices (sprockets, pulleys, etc.) so that the applied load center is as close to the gear housing as possible and check component alignment and tension of any belts or chains per the manufacturer's recommendation. Do not over tighten the belts or chains.

## 4. Coupling installation

The performance and life of any coupling depends upon how well it is installed. Coupling hubs are typically mounted flush with the shaft ends, unless specifically ordered for overhung mounting. Shaft couplings should be installed according to the coupling manufacturer's recommendations for gap, angular and parallel alignment. To help obtain critical shaft alignment coupling hubs may be installed to the machine shafts prior to final shimming or tightening of the foundation bolts. Proper coupling alignment allows for thermal and mechanical shaft movement during operation and ensures that only torque (no radial load) is transmitted between the mating shafts.

### Coupling gap and angular alignment

The shaft gap must be sufficient to accommodate any anticipated thermal or mechanical axial movement. When setting the coupling gap, insert a spacer or shim stock equal to the required spacing or gap between the coupling hub faces. Measure the clearance using feeler gauges at 90-degree intervals, to verify the angular alignment.

### Parallel (or offset) alignment

Mount a dial indicator to one coupling hub, and rotate this hub, sweeping the outside diameter of the other hub. The parallel or offset misalignment is equal to one-half of the total indicator reading. Another method is to rest a straight edge squarely on the outside diameter of the hubs at 90° intervals and measure any gaps with feeler gauges. The maximum gap measurement is the parallel or offset misalignment.


### Check alignment

After both angular and parallel alignments are within specified limits, tighten all foundation bolts securely and re-check critical alignment. If any of the specified limits for alignment are exceeded, realign the coupling.

## 5. Installing sheaves (pulleys), sprockets and gears

To avoid unnecessary bearing loads and additional shaft deflection, mount all power take-off devices (sprockets, pulleys, gears, etc.) so that the applied load center is as close to the gear housing as possible, as shown in **Figure 2**.

**Figure 2: Sprocket or Gear Mounting**

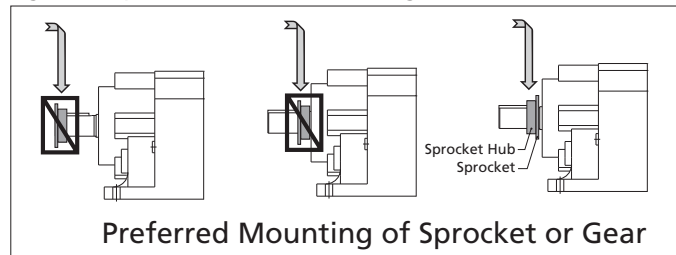

Align the driver sheave or sprocket with the driven sheave or sprocket by placing a straight-edge length-wise across the face of the sheaves or sprockets. Alignment of bushed sheaves and sprockets should be checked only after bushings have been tightened. Check horizontal shaft alignment by placing one leg of a square or a level vertically against the face of the sheave or sprocket.

Always check component alignment and tension any belts or chains per the manufacturer's recommendation. The ideal belt or chain tension allows proper wrap of the driver and driven wheels, while maintaining the lowest possible tension of the belts or chain, so that no slipping occurs under load conditions. Check belt or chain tension frequently over the first 24 to 48 hours of operation.

STOP	<i>HARMFUL SITUATION</i>	STOP
<p>When using external chain or belt drives, make sure the reducer is sized so that the shaft and bearings have adequate capacity. To avoid unnecessary bearing loads and additional shaft deflection, mount all power take-off devices (sprockets, pulleys, etc.) so that the applied load center is as close the gear housing as possible and check component alignment and tension of any belts or chains per the manufacturer's recommendation. Do not over tension the belts or chains.</p>		

## 6. Outboard pinion gear alignment

Align outboard pinion gears and adjust the gear tooth clearance according to the manufacturer's recommendations, checking for acceptable outboard pinion tooth contact. The foundation bolts may have to be loosened and the gear unit moved slightly to obtain proper gear tooth contact. After the unit is moved to correct tooth contact, the prime mover may need to be realigned.



## 1. Keyed hollow shaft design

NORD uses high quality carbon steel to manufacture hollow-shafts. Upon request, NORD can provide alternate materials, such as stainless steel. NORD hollow shafts are designed with a bore relief (reduced contact area) between the mating shafts.

The bore relief provides a cavity to hold an anti-seize assembly paste. It also acts as a design feature intended to help prevent corrosion and to facilitate gearbox removal from the solid shaft.

NORD furnishes dual keys designed to be used in each of the bore land areas, as opposed to supplying a single long key. The dual keys are intended to simplify assembly onto the machine's solid shaft.



### IMPORTANT NOTE



If a single shaft key or dual shaft keys are supplied by others, the key/s must engage the full bore-land length at each end of the hollow shaft.

## 2. Key and keyway dimensions

Unless otherwise indicated, inch keys and keyways follow the ANSI B17.1 standard and metric keys and keyways follow the DIN6885-1 standard. Inch bores will typically utilize square keys but in some instances the larger hollow shaft bore sizes utilize the alternate rectangular key shown in the ANSI B17.1 standard.

Key slots for the solid machine shaft should be made with a Class 2, transitional-fit class (slightly loose to slightly tight). Key slots in the female shaft are designed to be a low clearance fit. These suggested practices should allow for easier assembly with the mating solid shaft, without allowing excessive clearance which could cause keys to work loose during reducer operation.



### IMPORTANT NOTE



If the key fit is too tight, light filing of the key sides and hand-fitting of the keys may be required.

## 3. Keyed hollow-shaft bore tolerances

Standard keyed hollow-shaft bore tolerances are shown in the following table.

**Table 1 - Keyed hollow bore tolerances**

Above	To and Including	Bore Diameter Tolerance
ø [in]	ø [in]	ø [in]
0.4375	1.6250	+0.0010 / -0.0000
1.6250	3.2500	+0.0012 / -0.0000
3.2500	7.0000	+0.0014 / -0.0000

Above	To and Including	Bore Diameter Tolerance
ø [mm]	ø [mm]	ø [mm]
10	18	+0.018 / -0.000
18	30	+0.021 / -0.000
30	50	+0.025 / -0.000
50	80	+0.030 / -0.000
80	120	+0.035 / -0.000
120	180	+0.040 / -0.000
180	190	+0.035 / -0.000

Metric hollow bore tolerances per ISO286-2, Class H7

## 4. Suggested solid shaft (machine shaft) tolerances

NORD recommends a close fit of the customer-supplied solid shaft or machine-shaft, for the following reasons:

- To help minimize the potential for fretting and corrosion.
- To help prevent excessive free play in the shaft connection that could lead to excessive load stress on the driven system, the gear drive, or both.

**Table 2 - Suggested solid shaft tolerances**

Above	To and Including	Shaft Diameter Tolerance	
ø [in]	ø [in]	Uniform Load	Shock Load
ø [in]	ø [in]	ø [in]	ø [in]
0.4375	0.8750	+0.0000 / -0.0005	+0.0000 / +0.0005
0.8750	4.5000	+0.0000 / -0.0010	+0.0000 / +0.0010
4.5000	7.0000	+0.0000 / -0.0012	+0.0000 / +0.0015

Above	To and Including	Shaft Diameter Tolerance	
ø [mm]	ø [mm]	Uniform Load ①	Shock Load ②
ø [mm]	ø [mm]	ø [mm]	ø [mm]
10	18	+0.000 / -0.011	+0.012 / +0.001
18	30	+0.000 / -0.013	+0.015 / +0.002
30	50	+0.000 / -0.016	+0.018 / +0.002
50	80	+0.000 / -0.019	+0.021 / +0.002
80	120	+0.000 / -0.022	+0.025 / +0.003
120	180	+0.000 / -0.025	+0.028 / +0.003
180	190	+0.000 / -0.029	+0.033 / +0.004

① Uniform load: Mating shaft diameter tolerance per ISO286-2, class h6

② Shock load: Mating shaft diameter tolerance per ISO286-2, class k6

As indicated in Table 2, different solid shaft tolerances are suggested depending upon the load type.

- If the machine load conditions are considered “Uniform” a clearance fit is allowed.
- If the machine load conditions are considered to have “Shock Load” a light clearance to interference fit condition is suggested.

Typically the machine builder will have good knowledge as to the load type. As an alternate method to classify load type, one could follow the “Mass Acceleration Factor Selection Method” that is discussed in NORD’s product catalog/s.

Straightness, roundness, and diameter tolerance variations of both shafts should be controlled as accurately as possible. When mating, solid shaft design features are not controlled, reducer installation may be very difficult without ordering special hollow-bore design features to accommodate.

STOP	<b>HARMFUL SITUATION</b>	STOP
<p>The supporting solid shaft or driven machine shaft must be of adequate size and strength to withstand normal operating loads and peak loads without damage to itself or any of the system components.</p>		


## 5. Suggested solid-shaft mating shaft surface finish

Controlling the mating shaft surface finish helps to assure proper fit and assembly while minimizing the possibility of corrosion and fretting. NORD recommends that the mating solid shaft surface should be at least 125 micro-inches (3.2 microns) or smoother.

## 6. Assembly to the machine shaft

- Clean and remove any dirt, grease, or rust-preventative coatings from both the reducer hollow shaft and the machine shaft.
- Make sure the edges of both the reducer hollow shaft and machine shaft are free from any nicks or burrs. If nicks or burrs are present remove them using an abrasive material such as an emery cloth.
- Before installing the gear reducer onto the machine shaft, apply an anti-seize compound or anti-corrosive lubricant to the mating shafts as shown in Figure 1. Assembly and subsequent dismantling will be aided by the anti-seize agent.

Figure 1 – Application of anti-seize to the mating shafts

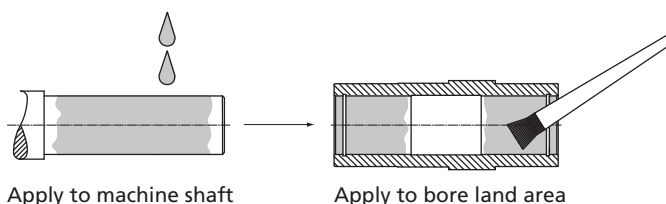

- Fit the shaft key/s into place on the machine shaft. Depending upon the key slot design on the machine shaft, it may be necessary to stake or Loctite® the key/s into place so they do not slide axially while fitting the reducer to the shaft.
- Lift the gear unit assembly into place and align it carefully with respect to the machine shaft.
- Fit the gear unit assembly onto the machine shaft using a suitable pulling device.
- Secure the reducer onto the machine shaft in an axial direction, to prevent the reducer from shifting or walking out of place during operation.

STOP	<b>HARMFUL SITUATION</b>	STOP
<p>Do not use excessive force or try to hammer the gear unit into place. The housing, shafting, bearings or gear wheels may become damaged.</p>		

## 7. Securing the reducer onto the machine shaft

There are slight shaft oscillations during operation in any rotating shaft equipment or any shaft-mounted reducer assembly. Therefore it is important to secure the reducer in an axial direction onto the machine shaft, to prevent the reducer from shifting or walking out of place during operation.

Possible methods to secure the reducer axially to the machine shaft include:

- Using commercial set collars, retaining rings, or snap rings.
- Using the optional “NORD Fixing Element Kit” (see U10280).


The NORD Fixing Element Kit includes all of the necessary parts to secure the shaft by using a tapped hole in the end of the mating male shaft.

*Loctite® is a registered trademark of Loctite Corporation U.S.A. and Henkel.*

## 1. Shaft fixing kit - basic design

The NORD Fixing Kit provides a method for securing the reducer in an axial direction, after the keyed-hollow shaft reducer is mounted onto the machine shaft. The fixing kit prevents the reducer from shifting or walking out of place during operation. NORD offers a variety of standard fixing kits, based upon bore size, as shown on Page 2 of this manual.

Figure 1 – Fixing kit components

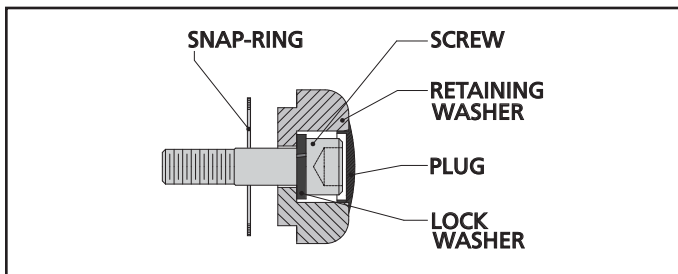

### IMPORTANT NOTE



For installation of the keyed-hollow bore reducer to the machine-shaft, see user manual U10270.


## 2. Assembly types

There are two types of assembly methods commonly used for securing the fixing kit.

Figure 2 – Fixing kit assembly methods


### Type 1

The machine-shaft is located against a fixed snap-ring located inside the bore of the reducer.

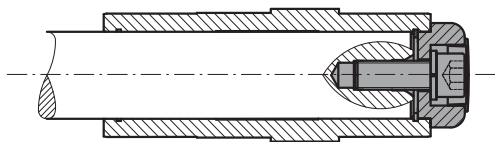

### Type 2

The machine shaft is shouldered and is pulled tight against the hollow-shaft; the snap-ring is no longer required.

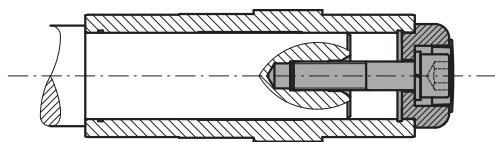

### HARMFUL SITUATION



The maximum edge break on the solid machine shaft must not exceed the values shown on Page 2 of this manual. Otherwise the load-bearing capacity of the snap-ring will be reduced and may result in failure.

## 3. Assembly

- If using a Type 1 assembly, secure the appropriate snap-ring into the bore of the reducer. With Type 2 assembly, no snap-ring is required.
- Draw the hollow bore gear reducer onto the machine shaft as instructed in U10270. Remember to apply a suitable assembly paste or anti-seize compound to the mating shafts.
- Install the retaining washer over the end of the hollow bore.
- Secure the appropriate cap-screw into the machine shaft and tighten the screw based upon the assembly type, as noted below. Then install the protective plug over the screw hole.

### Type 1 - Screw tightening

Tighten until lightly snug and secure the screw with a thread-locking compound to prevent the screw from backing out.



### HARMFUL SITUATION



Over tightening the retaining screw may cause the snap ring to be pulled out of its seating groove, causing damage to the hollow-bore or snap ring.


### Type 2 - Screw tightening

Follow the cap screw manufacturers guidelines and tighten the screw to the proper torque, based upon the bolt grade and material. For reference tightening torque values, also see manual U10060, Table 2.

## 4. Disassembly

When using Type 2 assembly, it is possible to design a simple disassembly tool to allow easier removal of the hollow-bore reducer. The solid shaft is shouldered to rest against the hollow-bore of the reducer. The machine shaft is supported in both of the hollow bore land areas, but the overall length is reduced compared to Type 1 assembly.

Figure 3 – Disassembly Tool

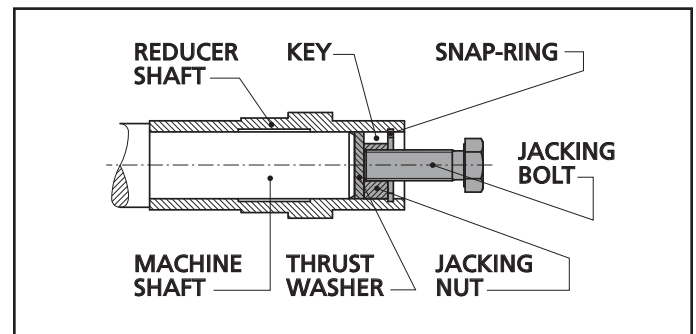

### IMPORTANT NOTE



For suggestions on how to construct a disassembly tool for a particular reducer and bore size, please consult NORD's application engineering department.

## 5. Standard fixing kit size offerings

NORD offers a variety of standard fixing kit sizes as shown by the following tables.

Table 1 - Standard fixing kit size offerings


Shaft Bore [in]	Bolt Size	Allowable Thrust		Max. Edge Break ④ in [mm]
		Groove ② lb [N]	Ring ③ lb [N]	
0.500	10-32	730 [3255]	520 [2300]	0.02 [0.5]
0.750	1/4-20	1800 [7905]	560 [2500]	0.04 [1]
1.000	3/8-16	2900 [13020]	1000 [4600]	0.04 [1]
1.188	7/16-14	5100 [22630]	1000 [4700]	0.04 [1]
1.250	7/16-14	5100 [22630]	1000 [4700]	0.04 [1]
1.375	5/8-11	6500 [29140]	1400 [6400]	0.06 [1.5]
1.438	5/8-11	6900 [30690]	1500 [6500]	0.06 [1.5]
1.500	5/8-11	7800 [34875]	1500 [6700]	0.06 [1.5]
1.625	5/8-11	9900 [44020]	1900 [8400]	0.08 [2]
1.688	5/8-11	10500 [46810]	1800 [8200]	0.08 [2]
1.938	5/8-11	11100 [49600]	1900 [8400]	0.08 [2]
2.000	5/8-11	14100 [62775]	2700 [12100]	0.08 [2]
2.063	5/8-11	14100 [62775]	2700 [12100]	0.08 [2]
2.188	5/8-11	16800 [74865]	2900 [13000]	0.08 [2]
2.375	3/4-10	17400 [77190]	2900 [13000]	0.08 [2]
2.438	3/4-10	17400 [77190]	2900 [13000]	0.08 [2]
2.750	3/4-10	19600 [87110]	4700 [21000]	0.10 [2.5]
2.938	3/4-10	20900 [93000]	4700 [21000]	0.10 [2.5]
3.188	3/4-10	27700 [123225]	7000 [31200]	0.12 [3]
3.438	3/4-10	29300 [130200]	7000 [31400]	0.12 [3]
3.625	3/4-10	30900 [137330]	7000 [31400]	0.12 [3]
3.938	7/8-9	32400 [144305]	6900 [30800]	0.12 [3]
4.000	7/8-9	39000 [173600]	16400 [73000]	0.12 [3]
4.063	7/8-9	39000 [173600]	16400 [73000]	0.12 [3]
4.375	7/8-9	41500 [184450]	16200 [72000]	0.12 [3]
4.438	7/8-9	41500 [184450]	16200 [72000]	0.12 [3]
4.750	7/8-9	44200 [196850]	15700 [70000]	0.12 [3]
4.938	7/8-9	48000 [213900]	15500 [69000]	0.12 [3]

Upon request, additional hollow-bore sizes & fixing kit sizes may be offered.

Shaft Bore	Bolt Size	Allowable Thrust		Max. Edge Break ④ mm [in]
		Groove ② N [lb]	Ring ③ N [lb]	
[mm]				
16	M5	Not applicable ①		
20	M6	8370 [1900]	5600 [1300]	1.0 [0.04]
25	M10	12400 [2800]	7300 [1600]	1.0 [0.04]
30	M10	17515 [3900]	7200 [1600]	1.0 [0.04]
35	M12	29140 [6500]	8700 [1900]	1.5 [0.06]
40	M16	41850 [9400]	10900 [2400]	2.0 [0.08]
45	M16	46810 [10500]	10700 [2400]	2.0 [0.08]
50	M16	62775 [14100]	19000 [4300]	2.0 [0.08]
60	M20	74865 [16800]	29200 [6600]	2.0 [0.08]
70	M20	87110 [19600]	30300 [6800]	2.5 [0.10]
80	M20	115630 [26000]	56000 [12600]	2.5 [0.10]
90	M24	130200 [29300]	56000 [12600]	3.0 [0.12]
100	M24	144305 [32400]	55000 [12400]	3.0 [0.12]
110	M24	181350 [40800]	71000 [16000]	3.0 [0.12]
120	M24	196850 [44300]	70000 [15700]	3.0 [0.12]

Upon request, additional hollow-bore sizes and fixing kit sizes may be offered.


- This fixing kit is not supplied with a snap-ring.  
A Type 2 machine shaft is required.
- Thrust load-bearing capacity of the groove is based upon using a hollow-shaft material with a yield-strength of at least 45,000 psi (310 N/mm<sup>2</sup>).
- Thrust load-bearing capacity of the snap-ring is based upon a typical snap-ring material with a yield-strength of at least 30,500 psi (210 N/mm<sup>2</sup>).
- On the solid machine shaft, observe the maximum edge break (radius or chamfer) shown. A larger edge break will result in reduced load-bearing capacity of the snap-ring.

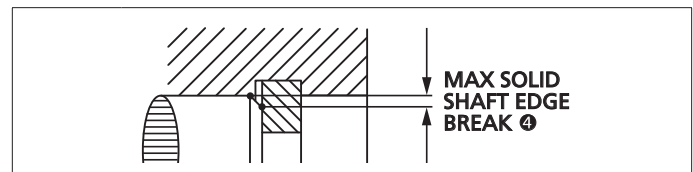

## 1. Shrink disc design concept

A shrink disc option is adaptable to many NORD hollow-bore reducers. The shrink disc applies a high-capacity, zero backlash, interference fit to the driven machine shaft. The double tapered inner ring converts most all of the screw clamping load into radial contact pressure, as the outer clamping discs are pulled together by proper tightening of the locking screws. As the inner ring is contracted, the clearance between the customer solid shaft and reducer shaft is absorbed.

- In their relaxed state, shrink discs provide a generous assembly clearance, thus eliminating the typical assembly and disassembly challenges of using interference fits.
- Shrink discs also reduce solid machine shaft stresses by eliminating the need for shaft keys and keyways.
- When properly applied, high shrink fits help eliminate shaft fretting corrosion and allow for easier shaft mounting and dismounting.

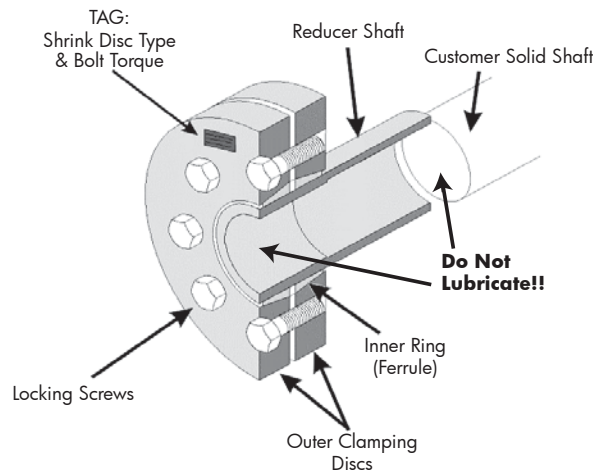

## 2. Solid (machine) shaft design guidelines

Always use a solid shaft material of adequate strength and apply proper shaft fits in order to establish adequate clamping force during assembly and assure proper shaft release during disassembly.

- Use solid shaft material with yield strength of at least 52,260 psi (360 N/mm<sup>2</sup>).
- The solid machine shaft should be machined according to ISO 286-2, Class h6 fit tolerances, with a shaft finish of 125 micro inches (3.2 µm) or smoother, per Table 1.
- The solid machine shaft must extend the full length of the reducer hollow shaft.

## 3. Safety

⚠	WARNING	⚠
<ul style="list-style-type: none"> <li>• The supporting solid shaft or driven machine shaft must be of adequate size and strength to withstand normal operating loads and peak loads without damage to itself or any of the system components.</li> <li>• The transmissible torque and the gripping capacity of the shrink disc may be reduced if shaft tolerances or clearances are larger than specified.</li> <li>• Excessive tightening torque can result in permanent deformation of the inner ring and the reducer hollow bore, making disassembly very difficult. Do not over tighten the shrink disc to compensate for excessive clearance between the machine shaft and reducer bore.</li> <li>• Observe the published ratings and safety factors for both the reducer and shrink disc. Overload conditions or excessively high torque can cause the shrink disc connection to slip. In extreme cases localized galling or welding of components may occur.</li> </ul>		

## 4. Shrink disc shaft tolerances

Recommended solid shaft tolerances and reducer bore tolerances are shown in the table below.

Table 1: Shrink disc shaft tolerances

Above & Including ø [in]	To & Including ø [in]	Solid Shaft Tolerance ø [in]	Reducer Bore Tolerance ø [in]	Max. Assembly Clearance [in]
0.7500	1.1250	+0.0000 / -0.0005	+0.0008 / -0.0000	0.0013
1.1250	1.9375	+0.0000 / -0.0006	+0.0009 / -0.0000	0.0015
2.0000	3.1250	+0.0000 / -0.0007	+0.0011 / -0.0000	0.0018
3.1875	4.6875	+0.0000 / -0.0008	+0.0013 / -0.0000	0.0021
4.7500	7.0625	+0.0000 / -0.0009	+0.0015 / -0.0000	0.0024
7.1250	7.5000	+0.0000 / -0.0011	+0.0018 / -0.0000	0.0029

Above ø [mm]	To & Including ø [mm]	Solid Shaft Tolerance ø [mm]	Reducer Bore Tolerance ø [mm]	Max. Assembly Clearance [mm]
18	30	+0.000 / -0.013	+0.021 / -0.000	0.034
30	50	+0.000 / -0.016	+0.025 / -0.000	0.041
50	80	+0.000 / -0.019	+0.030 / -0.000	0.049
80	120	+0.000 / -0.022	+0.035 / -0.000	0.057
120	180	+0.000 / -0.025	+0.040 / -0.000	0.065
180	190	+0.000 / -0.029	+0.046 / -0.000	0.075

Shaft/bore tolerances per ISO 282-6, Class h6/H7.

Solid shaft finish should be 125 micro inches (3.2 micro meters) or smoother.

STOP

**HARMFUL SITUATION**

STOP

Contact NORD when using a shrink disc in an application where the shrink disc connection must simultaneously transmit torque and thrust.





# HOLLOW SHAFT WITH SHRINK DISC



## 5. Installation

⚠
**WARNING**
⚠

Disconnect all power sources from the equipment before beginning this installation procedure. Handle the components with care and avoid all sharp machined edges to prevent personal injury.

STOP
**HARMFUL SITUATION**
STOP


Do not tighten any of the shrink disc locking screws prior to installing the reducer with shrink disc onto the machine shaft. The inner ring of the shrink disc can become permanently contracted or damaged at relatively low tightening torque.

- A. Inspect the gear unit received. Make sure the shrink disc and extended hollow shaft projection is on the side of the reducer where it was specified or ordered.
- B. Loosen the shrink disc locking screws but do not take the shrink disc completely apart. Remove and discard any packaging material or transportation spacers that come with the shrink disc.
- C. Remove all burrs, rust, corrosion, lubricants, and foreign matter from the surfaces of the solid shaft and hollow-bore.
- D. Make sure the shrink disc is positioned onto the hollow shaft until the outer clamping ring is flush with the edge of the hollow shaft.
- E. To aid in assembly, it is acceptable to lightly grease the solid shaft, only in the area that will come in contact with the bronze-bushing side of the reducer hollow-shaft. **The reducer hollow shaft must be completely de-greased and free of lubricant, especially in the area of the shrink disc.**
- F. Position the gear reducer onto the solid machine shaft and make certain the area under the shrink disc is completely supported by the solid shaft.
- G. After confirming the proper positioning of gear reducer and the shrink disc, hand tighten (3) or (4) equally spaced locking screws to make sure the outer collars of the shrink disc are drawn together in a parallel fashion. Then hand-tighten the remaining screws.
- H. Refer to Table 2 for the specified tightening torques for the shrink disc locking screws. Using a properly set torque wrench using approximately ¼ (90°) turns; tighten the locking screws, by working in a circular clockwise or counterclockwise sequence around the shrink disc.
- I. Continue the tightening sequence (Step H.) even if some locking screws initially require very low tightening torque to achieve ¼ turns; do this for several passes until ¼ turns can no longer be achieved.
- J. Reset the torque wrench to approximately 3-5% over-torque and tighten the locking screws for 1 or 2 more passes. This procedure will compensate for relaxation of the locking screws, since tightening of a given screw will always tend to relax the adjacent screw. Without a slight overtorquing of the screws, an infinite number of passes would be required to reach the desired tightening torque.

Table 2 - Shrink Disc Locking Screw Torque

Screw Size	Wrench Size [mm]	Tightening Torque		
		[Nm]	[lb-in]	[lb-ft]
M5	8	7	62	5.2
M6	10	12	106	8.9
M8	13	30	266	22
M10	17	59	522	44
M12	19	100	885	74
M16	24	250	2213	184
M20	30	490	4337	361
M24	36	840	7435	620
M30	46	1700	15050	1254

### BOLT TIGHTENING PATTERN

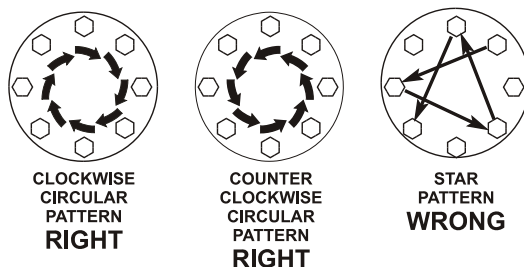

- K. Reset the torque wrench to the correct tightening torque as indicated in Table 2. Make sure each locking screw has been properly tightened until the screws are no longer turning at the specified torque wrench setting. If necessary repeat Steps G. & H.

## 6. Removal

- A. Loosen the shrink disc locking screws in a circular pattern by using ½ (180°) turns, until the shrink disc hub can be moved or until the shrink disc hub and reducer shaft will return to their original fits.

⚠
**WARNING**
⚠

Do not completely remove the locking screws before the outer clamping disks of the shrink disc are disengaged from the inner ring. A sudden release of the outer collars will create high separating forces and could result in injury or even death.

- B. Loosen the outer collars of the shrink disc from the tapered inner ring. This may require tapping the bolts with a **soft faced** hammer or prying lightly between the outer collars.
- C. Remove the gear reducer from the machine shaft.

## 7. Re-installation

- A. It may be possible to re-use the shrink disc. However the shrink disc should not be re-used if it becomes damaged during removal, or excessively rusty or corroded. Shrink discs must always be disassembled and thoroughly cleaned before re-using.
- B. After cleaning the shrink disc, lubricate between the taper of the outer clamping disks and the outside of the inner ring using MOLYKOTE® G-Rapid Plus Paste (product of Dow Corning) or equivalent. In addition, grease screw threads and head contact area with multi-purpose grease.


## 1. General information

The NORD GRIPMAXX™ keyless bushing system is adaptable to most all NORD shaft-mounted reducers. The bushing system offers interchangeable bushings to accommodate a large range of driven machine-shaft sizes.

The unique design of the NORD GRIPMAXX™ bushing system offers a number of distinct advantages as follows:

- The NORD GRIPMAXX™ allows the machine builder to utilize standard cold finished shaft stock, without the need for additional shaft machining or shaft keys.
- It uses a NORD shrink disc to apply a high-capacity, zero backlash, interference fit to the driven machine shaft, while eliminating the typical assembly and disassembly challenges of using interference fits.
- The built in clearance between the customer shaft and the bushing system helps to ensure easy installation and removal of the gearbox. To help ensure easy removal, the NORD GRIPMAXX™ bushings are prepared with a special low-wear, corrosion-resistant hardened surface treatment, that minimizes the formation of shaft corrosion and fretting.
- The NORD GRIPMAXX™ is ideal for start-stop operation and bi-directional loading because it does not depend on keys or keyways that transmit torque, which can also become loose or deform when subjected to these loading conditions.
- Unlike the typical conical or tapered bushing kits, the NORD GRIPMAXX™ design allows a tight fit against a shouldered machine shaft.
- The torque bushing and support bushing are the same part and are fully interchangeable with one another.

## 2. GRIPMAXX™ assembly detail

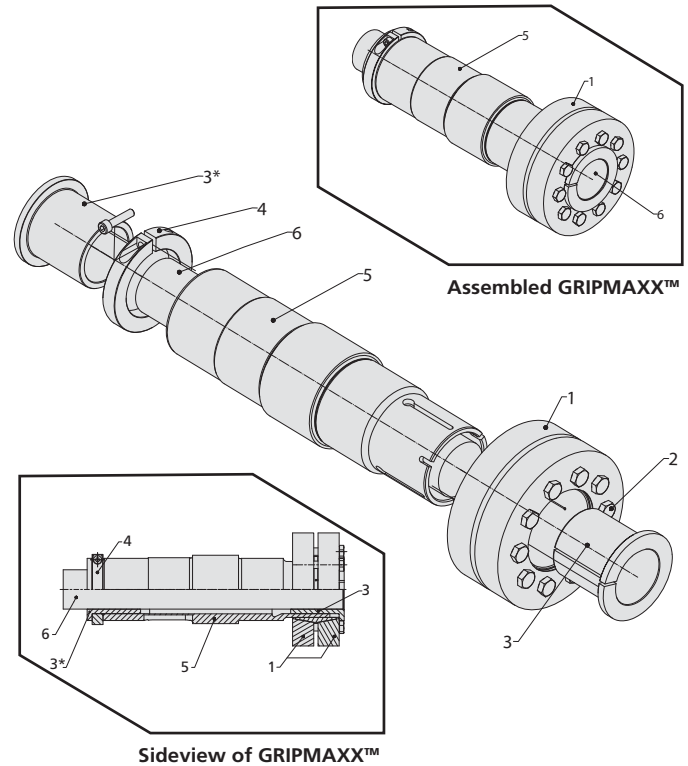

- [1] NORD Shrink Disc  
[2] Locking Screw  
[3] Bushing (Torque Side)  
[3\*] Bushing (Support Side)

- [4] Clamp Ring  
[5] Gear Reducer Hollow Shaft  
[6] Machine Shaft



### IMPORTANT NOTE



NORD recommends that the machine shaft have a yield strength of at least 52,260psi (360N/mm<sup>2</sup>)



### IMPORTANT NOTE



Observe the recommended machine shaft tolerances in table 1, page 2.



### WARNING



The supporting solid shaft or driven machine shaft must be of adequate size and strength to withstand normal operating loads and peak loads without damage to itself or any of the system components.

## 3. Installation

⚠
**WARNING**
⚠

Disconnect all power sources from the equipment before beginning this installation procedure. Handle the components with care and avoid all sharp or machined edges to prevent personal injury.

STOP
**HARMFUL SITUATION**
STOP

Do not tighten any of the shrink disc locking screws prior to installing the reducer with shrink disc onto the machine shaft. The inner ring of the shrink disc can become permanently contracted or damaged at a relatively low tightening torque.

**Table 1 - Required Machined Shaft Tolerance**

Inch Machine Shaft			Metric Machine Shaft		
From	To	ISO 286-2 Tolerance h11(-)	Over	Including	ISO 286-2 Tolerance h11(-)
ø [in]	ø [in]	[in]	ø [mm]	ø [mm]	[mm]
0.4375	0.6875	- 0.004	10	18	- 0.11
0.7500	1.0625	- 0.005	18	30	- 0.13
1.1250	1.9375	- 0.006	30	50	- 0.16
2.0000	3.1250	- 0.007	50	80	- 0.19
3.1875	4.6875	-0.008	80	120	-0.22
4.7500	4.7500	-0.009	120	125	-0.25


- Carefully inspect the machine shaft [6] and remove all burrs, rust, corrosion, lubricants, and foreign matter from the shaft surface. Verify that the diameter is within the dimensional tolerances shown in Table 1.
- Inspect the gear unit received to confirm the correct position of the shrink disc [1]. Make sure the hollow shaft [5] projection is on the side of the reducer where it was specified or ordered.
- In addition to cleaning the machine shaft [6], remove all dirt, grease or oils from the reducer hollow shaft [5], bushings [3], clamp ring [4], and shrink disc [1]. **Do not apply lubricants, corrosion preventatives, anti-sieze compounds or coatings to the mating surfaces of the shaft, bushings, clamp collars or shrink disc.**
- Position the clamp ring [4] and support bushing [3\*] over the machine shaft [6], making sure the support bushing is in its desired location. Then secure the support bushing [3\*] with the clamp ring [4] and tighten the clamp ring screw.
- Slide the gear reducer onto the machine shaft [6] until the gear reducer stops against the secured support bushing [3\*].

- Without taking the shrink disc [1] apart, loosen the shrink disc locking screws [2]. Slide the shrink disc over the reducer shaft [5] and slide the torque bushing [3] onto the machine shaft, making sure it is seated completely.
- Confirm the positioning of the shrink disc [1] and torque bushing [3]. **Do not tighten the shrink disc until the machine shaft and torque bushing are in proper position, or the reducer shaft will be damaged.** Hand-tighten 3 or 4 or locking screws [2] and make sure the outer collars of the shrink disc are drawn together in a parallel fashion and then hand-tighten the remaining screws.
- Refer to Table 2 for the specified tightening torques for the shrink disc locking screws. Using a properly set torque wrench using approximately ¼ (90°) turns; tighten the locking screws, by working in a circular clockwise or counterclockwise sequence around the shrink disc.
- Continue the tightening sequence (Step H.) even if some locking screws initially require very low tightening torque to achieve ¼ turns; do this for several passes until ¼ turns can no longer be achieved.
- Reset the torque wrench to approximately 3-5% over-torque and tighten the locking screws for 1 or 2 more passes. This procedure will compensate for relaxation of the locking screws, since tightening of a given screw will always tend to relax the adjacent screw. Without a slight overtorquing of the screws, an infinite number of passes would be required to reach the desired tightening torque.


**Table 2 - Shrink Disc Locking Screw Torque**

Screw Size	Wrench Size [mm]	Tightening Torque		
		[Nm]	[lb-in]	[ft-lb]
M5	8	7	62	5.2
M6	10	12	106	8.9
M8	13	30	266	22
M10	17	59	522	44
M12	19	100	885	74
M16	24	250	2213	184
M20	30	490	4337	361


### BOLT TIGHTENING PATTERN

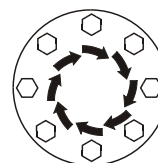

CLOCKWISE  
CIRCULAR  
PATTERN  
**RIGHT**

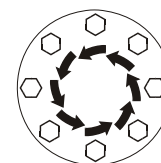

COUNTER  
CLOCKWISE  
CIRCULAR  
PATTERN  
**RIGHT**

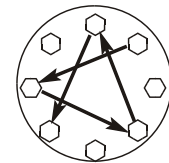

STAR  
PATTERN  
**WRONG**

- Reset the torque wrench to the correct tightening torque as indicated in Table 2. Make sure each locking screw has been properly tightened until the screws are no longer turning at the specified torque wrench setting. If necessary repeat Steps G. & H.



## 5. Bushing kit removal

- A. Loosen the shrink disc locking screws [2] in circular pattern by using  $\frac{1}{2}$  (180°) turns, until the shrink disc hub can be moved or until the shrink disc hub and reducer shaft will return to their original fits.



### WARNING




Do not completely remove the locking screws before the outer clamping disks of the shrink disc are disengaged from the inner ring. A sudden release of the outer collars will create high separating forces and could result in injury or even death.

- B. Loosen the outer collars of the shrink disc from the tapered inner ring. This may require tapping the bolts with a **soft faced** hammer or prying lightly between the outer collars.
- C. Remove the gear reducer from the machine shaft.


## 6. Re-installation

- A. It may be possible to re-use the bushings and shrink disc that are part of the NORD bushing system. However these components should not be re-used if they are damaged during removal, or excessively rusty or corroded.
- B. Never re-use any of the bushing kit components without prior cleaning. Shrink discs must always be disassembled and thoroughly cleaned before re-using.
- C. After cleaning the shrink disc, lubricate between the taper of the outer clamping disks and the outside of the inner ring using MOLYKOTE® G-Rapid Plus Paste (product of Dow Corning) or equivalent. In addition, grease screw threads and head contact area with multipurpose grease.

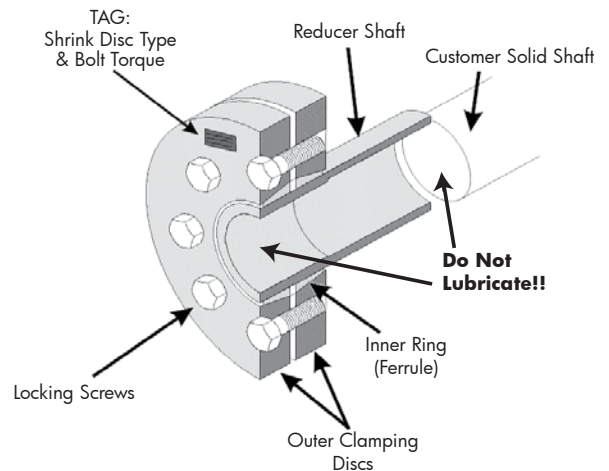

## 1. Foot-mounted reducers

When installing the foot-mounted gear unit, observe the flatness specifications and bolt tightening torque guidelines provided in U10060 and make sure the mating mounting surface and reducer feet are clean and free of debris. Use of shims under the feet of the gear unit may be required in order to align the output shaft to the driven equipment. Make sure that all feet are supported so that the housing will not distort when it is bolted down. Improper shimming will cause mis-alignment and may reduce the life of the gear unit or cause component failure. Dowel pins may be field-installed to help prevent misalignment and ensure proper realignment if removed for service.

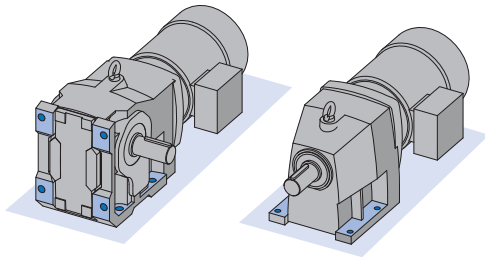

### IMPORTANT NOTE



Gear units may be subjected to radial loads or side pull, caused by external chain drives or belt drives. In these instances it is recommended that the mounting base be designed with a slide-plate adjustment to accommodate extra slack in the chain or the belt after the feet are loosened. When using an external chain or belt drive, make sure the reducer is sized so that the shaft and bearings have adequate capacity.

## 2. Flange-mounted reducers (with B5 flange)

When using the B5 flange to mount the gear unit, the bulk head plate must be engineered to minimize buckling distortions and support the cantilevered weight of the gear reducer or gearmotor. On the B5 mounting flange NORD provides a pilot register or and the flange pilot tolerance as listed per Table 1. When the mating hole is designed with the proper fit, the flange pilot tenon provides a means of accurately positioning the reducer while the hold-down bolts are properly secured; once the reducer is secured, the tenon helps prevent movement of the reducer and it helps locate the center of the reducer output shaft.

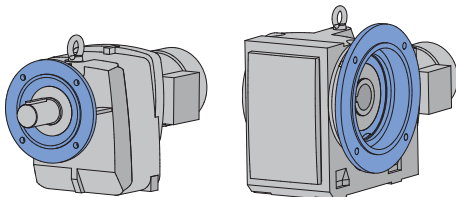


Table : Flange Pilot Tolerance

Above ø (in)	To & Including ø (in)	Tolerance (in)	ISO 286-2 Fit Class
1.969	3.150	+0.0005 / -0.0003	j6
3.150	4.724	+0.0005 / -0.0004	j6
4.724	7.087	+0.0006 / -0.0004	j6
7.087	9.055	+0.0000 / -0.0005	h6
9.055	9.843	+0.0000 / -0.0011	h6
9.843	12.402	+0.0000 / -0.0013	h6
12.402	15.748	+0.0000 / -0.0014	h6
15.748	19.685	+0.0000 / -0.0016	h6

Above ø (mm)	To & Including ø (mm)	Tolerance (mm)	ISO 286-2 Fit Class
50	80	+0.012 / -0.007	j6
80	120	+0.013 / -0.009	j6
120	180	+0.014 / -0.011	j6
180	230	+0.000 / -0.013	h6
230	250	+0.000 / -0.029	h6
250	315	+0.000 / -0.032	h6
315	400	+0.000 / -0.036	h6
400	500	+0.000 / -0.040	h6

When installing the flange mounted gear unit, observe the flatness specifications and bolt tightening torque guidelines provided in U10060. Make sure the mating mounting surface and reducer flange are clean and free of debris. Use a straight edge or parallel bar to check for high spots on the mating mounting surface and remove any raised material around the mounting holes.

Set the gear unit into place and tighten the bolts until they are snug. Before final bolt-tightening check for any material gaps between the mating surfaces and if shimming is required, use "U" shaped shims at least 2 times the width of the bolt. Avoid over shimming a very irregular surface as this will make it very difficult to achieve proper alignment.



### IMPORTANT NOTE



For heavy shock applications, it is advisable to field-install dowel pins through the mounting flange connection (in addition to the mounting bolts). This will help control flange movement or flange rotation and relieve the mounting bolts from this additional stress.



DRIVESYSTEMS


# REDUCER MOUNTING FOOTED & FLANGE MOUNT GEAR UNITS



U10500 - 2 of 2

## 3. Flange-mounted reducers (with B14 flange)

When using the B14 flange to mount the gear unit, the bulk head plate must be engineered to minimize buckling distortions and support the cantilevered weight of the gear reducer or gearmotor. When properly installed, the output flange of the reducer housing is designed to enable the permissible torques and radial forces to be reliably transmitted by the bolt connections.

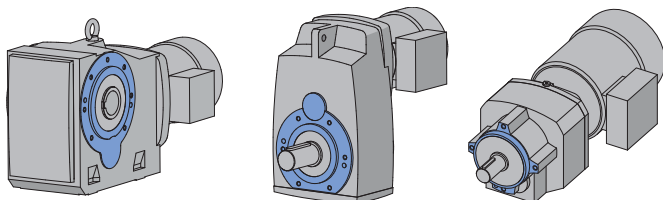

### IMPORTANT NOTE



When using the B14 flange-face for mounting, if dowel pin holes are provided in addition to the threaded holes, then it is advisable to also use the proper dowel pins, to help control flange movement or flange rotation and relieve the mounting bolts from this additional stress. This is especially important for heavy shock applications.

## 4. Foot & flange reducer housings




Some gear reducer housings are available with a foot and an output flange. Units with a foot and a B5 Flange are designated with the suffix XF after the primary model number and units with a B14 face-flange are designated with the suffix XZ after the primary model number. When a gear unit is provided with both a foot and a flange, the foot is considered the primary mounting surface. The flange is generally considered to be the secondary mounting option and it is intended that this surface be used for auxiliary add on elements that place minimal load stress on the reducer housing.



### HARMFUL SITUATION



To prevent overstress on the main gear unit housing, never tighten the reducer mounting feet and the mounting flange against one-another. Auxiliary add-on elements that are mounted to the reducer flange, must not transmit excessive force, torque or vibration to the main gear housing.

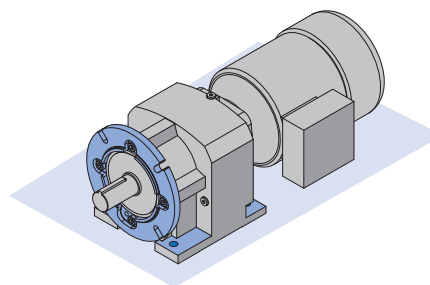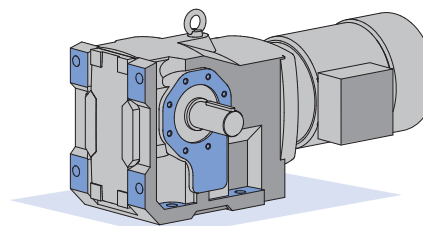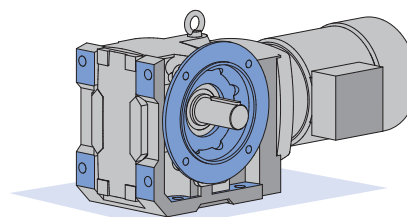




# CLINCHER™ SHAFT-MOUNT WITH RUBBER BUFFERS



## 1. Purpose of the built-in torque arm lug

The preferred method of installing a shaft-mounted Clincher™ reducer is to support the weight of the gear unit or gearmotor assembly from the driven solid machine shaft. In order to restrain the gearbox, react the torque, and keep the gear unit from spinning around the shaft, the Clincher™ gear units have a built-in torque arm lug or tab cast into the reducer housing. This torque tab is intended to be used in conjunction with the NORD Rubber Buffers.

Figure 1: Built-in torque lug

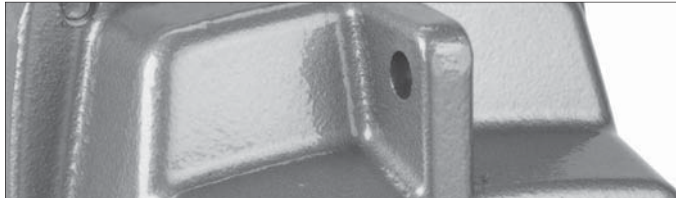

## 2. Rubber buffers

When specified, NORD provides two rubber buffers that are installed on either side of the gear unit's integral torque lug.

When properly used in tandem, on either side of the torque-arm lug, the rubber buffers help isolate and absorb the load forces present in the system and increase the reducer's service life by reducing cumulative torsional shock loads.

- The primary load force acts in the direction of driven shaft rotation, reacts the torque of the reducer, keeping the gearbox from spinning on the shaft.
- Additional forces present themselves in the direction opposite of the shaft rotation, due to the typical slight out-of-round condition present in the machine shaft. This condition is the reason most shaft mounted-reducers have a slight shaft-wobble, which is normal.

For further dampening it is possible to combine several rubber buffers in a row, on either side of the torque lug.

	<b>IMPORTANT NOTE</b>	
Please reference Table 1 on page 2 of this manual for dimensional information.		

	<b>HARMFUL SITUATION</b>	
Always mount at least one rubber buffer on either side of the reducer's torque-arm lug. When using rubber buffers in tandem, make sure equal numbers are used on both sides of the torque tab. Failure to do so will not properly cushion the reducer and can result in excessive binding, bearing stress, and damage to the reducer.		

## 3. Machine support

	<b>WARNING</b>	
It is the responsibility of the machine builder to design a support bracket of adequate strength and rigidity, and supply an appropriate tightening bolt assembly. Failure to do so may result in injury caused from a damaged or broken torque-reaction assembly.		

A single customer-supplied machine support bracket, of adequate strength and rigidity, can provide adequate restraint for both directions. This is because when the rubber buffer system is used, the applied load forces are always parallel to the retaining bolt and there are no twisting forces induced onto the bolt in either the clockwise or counter-clockwise direction. In some cases the customer may desire to supply a rigid support on either side of the rubber buffers. In these instances, longer assembly hardware is required.

## 4. Installation of the rubber buffers

- Install the Clincher™ hollow bore reducer onto the machine shaft. Line up the hole in the reducer's torque-arm lug with the hole in the machine's support bracket and temporarily hold the reducer in place.
- Properly secure the gear unit assembly to the driven shaft in an axial direction. If using the NORD Shaft Fixing Kit, follow the instructions in User Manual U10280.
- Install the rubber buffers on either side of the gear unit's torque-arm lug. Apply a thread locking compound to the end of the fixing bolt. Then place the fixing bolt through the rubber buffers, torque-arm lug and rigid machine support bracket and loosely secure the nut onto the end of the bolt.
- Tighten the fixing bolt and nut until lightly snug until all of the free play is eliminated from the rubber buffer assembly. Then snug the fixing bolt assembly by tightening an additional 1/4 to 1/2 turn.

	<b>WARNING</b>	
To help prevent damage to the rubber buffers, avoid over-tightening.		

	<b>IMPORTANT NOTE</b>	
<ul style="list-style-type: none"> <li>• A min. of (2) rubber buffers are required for each unit.</li> <li>• For larger size CLINCHER'S™, NORD offers the heavy-duty rubber buffer (Option VG).</li> <li>• A metric fixing bolt is preferred for rubber buffer assembly. NORD recommends a minimum ISO Grade 8.8 fixing bolt.</li> </ul>		



DRIVESYSTEMS

# CLINCHER™ SHAFT-MOUNT WITH RUBBER BUFFERS




RETAIN FOR FUTURE USE

U10580 - 2 of 2


Table 1: Rubber buffer assembly/typical dimensions

## Standard Rubber Buffer Assembly Option (G)

## Heavy Duty Rubber Buffer Assembly Option (VG)

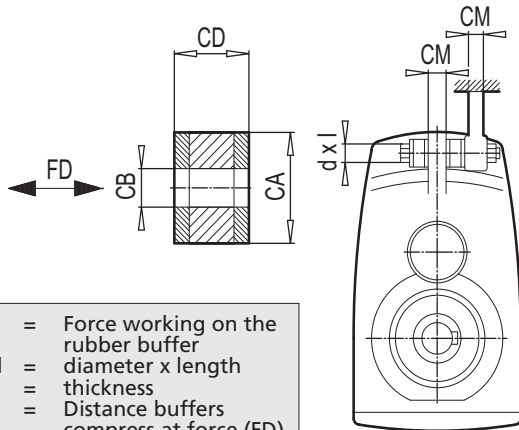

**FD** = Force working on the rubber buffer  
**d x l** = diameter x length  
**c** = thickness  
**S<sub>FD</sub>** = Distance buffers compress at force (FD)

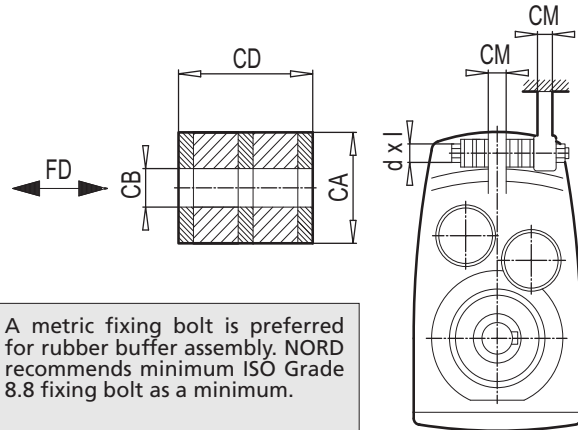

A metric fixing bolt is preferred for rubber buffer assembly. NORD recommends minimum ISO Grade 8.8 fixing bolt as a minimum.

Type	Rubber Buffer P/N	CB inch [mm]	CA inch [mm]	CD inch [mm]	CM inch [mm]	Bolt d x l [metric]	FD lb [kN]	SFD inch [mm]
SK0182NB..G	29603000	0.43 [11]	1.18 [30]	0.59 [15]	0.39 [10]	M10 x 70	217 [0.967]	0.06 [1.5]
SK0282NB..G	29603000	0.43 [11]	1.18 [30]	0.59 [15]	0.47 [12]	M10 x 70	234 [1.04]	0.07 [1.7]
SK1282..G	29603000	0.43 [11]	1.18 [30]	0.59 [15]	0.55 [14]	M10 x 80	504 [2.24]	0.14 [3.6]
SK1382NB..G	29603000	0.43 [11]	1.18 [30]	0.59 [15]	0.55 [14]	M10 x 80	402 [1.79]	0.11 [2.8]
SK2282..G	29604000	0.49 [12.5]	1.57 [40]	0.59 [15]	0.63 [16]	M12 x 90	600 [2.67]	0.07 [1.8]
SK2382..G								
SK3282..G	29604000	0.49 [12.5]	1.57 [40]	0.59 [15]	0.71 [18]	M12 x 90	935 [4.16]	0.11 [2.9]
SK3382..G								
SK4282..G	29606000	0.83 [21]	2.36 [60]	1.18 [30]	0.87 [22]	M20 x 150	1661 [7.39]	0.29 [7.3]
SK4382..G								
SK5282..G	29606000	0.83 [21]	2.36 [60]	1.18 [30]	1.1 [28]	M20 x 150	2133 [9.49]	0.37 [9.4]
SK5382..G								
SK6282..G	29608000	0.98 [25]	3.15 [80]	1.57 [40]	1.38 [35]	M24 x 190	3779 [16.81]	0.36 [9.2]
SK6382..G								
SK7282..G	29608000	0.98 [25]	3.15 [80]	1.57 [40]	1.57 [40]	M24 x 200	4676 [20.8]	0.45 [11.4]
SK7382..G								
SK8282..G	29610000	1.22 [31]	3.94 [100]	1.97 [50]	1.97 [50]	M30 x 260	6382 [28.39]	0.64 [16.3]
SK8382..G								
SK9282..G	29610000	1.22 [31]	3.94 [100]	1.97 [50]	2.17 [55]	M30 x 260	9777 [43.49]	0.98 [24.9]
SK9382..G								

Type	Rubber Buffer P/N	CB inch [mm]	CA inch [mm]	CD inch [mm]	CM inch [mm]	Bolt d x l [metric]	FD lb [kN]	SFD inch [mm]
SK7282.VG	29620850	0.98 [25]	3.35 [85]	2.36 [60]	1.57 [40]	M24 x 240	4676 [20.8]	0.48 [12.2]
SK7382.VG								
SK8282.VG	29621100	1.22 [31]	4.33 [110]	3.54 [90]	1.97 [50]	M30 x 340	6382 [28.39]	0.76 [19.3]
SK8382.VG								
SK9282.VG	29621400	1.22 [31]	5.51 [140]	4.33 [110]	2.17 [55]	M30 x 380	9777 [43.49]	0.83 [21.2]
SK9382.VG								
SK10282.VG	29621800	1.22 [31]	5.51 [140]	4.33 [110]	3.15 [80]	M30 x 430	12670 [56.36]	1.08 [27.4]
SK10382.VG								
SK11282.VG	29621800	1.93 [49]	7.09 [180]	5.91 [150]	3.54 [90]	M48 x 550	18185 [80.89]	1.52 [38.5]
SK11382.VG								
SK12382.VG	29621800	1.93 [49]	7.09 [180]	5.91 [150]	3.54 [90]	M48 x 550	23720 [105.51]	1.98 [50.2]

**NORD Gear Limited**  
Toll Free in Canada: 800.668.4378

**NORD Gear Corporation**  
Toll Free in the United States: 888.314.6673



# RIGHT-ANGLE SHAFT-MOUNT WITH TORQUE ARM (D)

RETAIN FOR FUTURE USE




U10600 - 1 of 2

## 1. Torque arm (D)

The preferred method of installing a shaft-mounted reducer is to support the weight of the gear unit or gearmotor assembly from the driven solid machine shaft. A torque arm is required in order to restrain the gearbox, react the load torque, and keep the gear unit from spinning around the shaft.

The Torque-Arm (D) bracket is mounted to either side of the right-angle gear unit using mounting screws that thread into the B14 flange-face of the reducer. The anchor hole of the torque-arm bracket is supplied with a resilient rubber bushing.

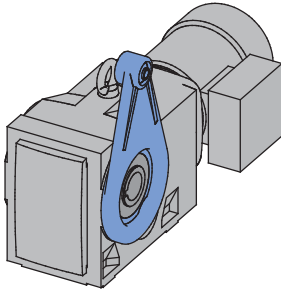

### IMPORTANT NOTE



The side of the reducer that the torque arm is mounted on, and the angular position can be specified at time of order. Consult the appropriate NORD catalog for specific Torque Arm (D) mounting options and ordering guidelines.

## 2. Purpose of the built-in resilient rubber bushing

The resilient rubber bushing installed into the anchor hole end of the torque-arm helps isolate and absorb all the load forces present in the system and increase the reducer's service life by reducing cumulative torsional shock loads.

- The primary load force acts in the direction of driven shaft rotation, reacts the load torque of the reducer, and prevents the gearbox from spinning on the shaft.
- Additional forces present themselves in the direction opposite of the shaft rotation, due to the typical slight out-of-round condition present in the machine shaft. This condition is the reason most shaft mounted-reducers have a slight shaft-wobble, which is normal.



### HARMFUL SITUATION



Always make sure that the Torque Arm (D) has the resilient rubber bushing installed into the anchor hole end of the torque arm. Failure to do so will not properly cushion the reducer and can result in excessive binding, bearing stress, and damage to the reducer.

## 3. Machine support

The user must supply a suitably strong and rigid mating machine support that provides load bearing capacity on both sides of the torque-arm bracket.



### WARNING



It is the responsibility of the machine builder to design a support bracket of adequate strength and rigidity, and supply an appropriate tightening bolt assembly. Failure to do so may result in injury caused from a damaged or broken torque-reaction assembly.

## 4. Installation of a right-angle reducer with torque arm

A. Make sure the Torque-Arm (D) is mounted in the correct position on the reducer. Assembled screw heads should always sit flush with the torque arm.

- To reposition the torque-arm, remove the mounting screws, relocate the torque-arm, and reassemble the mounting screws as noted above.
- If the torque-arm was shipped loose, position the torque-arm in the correct location on the gear unit, and secure the torque-arm as noted above.



### IMPORTANT NOTES



- Torque arm mounting screws should be secured with a thread locking product (ex. Loctite® 242 or Loxeal® 54-03) and tightened per the table on page 2.
- Assembled screw heads should always sit flush with the torque arm.
- The support bracket should provide support on both sides of the torque arm or be in the form of a U-shape.
- Do not force the torque-arm. The torque arm must remain at a right angle to the gear unit.
- If mounting holes do not align properly the machine support may need to be moved.

B. Install the right-angle hollow bore reducer onto the machine shaft. Then line up the hole in the reducer's torque-arm with the hole in the machine's support bracket, and temporarily hold the reducer in place.

C. Apply a thread locking compound such as Loctite® 242 or Loxeal® 54-03 to the end of the anchor bolt that is used to secure the torque arm in place.

D. Place the anchor bolt through the support bracket and the reducer torque-arm. Attach the mating nut to the bolt and tighten the assembly until snug. At least one bolt diameter should protrude from the nut after assembly.



### WARNING



Do not force misalignment of the torque-arm. The torque arm must remain at a right angle to the gear unit or excessive load may be placed on the reducer shaft and bearings.

E. Properly secure the gear unit assembly to the driven shaft in an axial direction.


# RIGHT-ANGLE SHAFT-MOUNT WITH TORQUE ARM (D)

RETAIN FOR FUTURE USE



U10600 - 2 of 2

Table 1 - Torque Arm (D) with rubber buffer

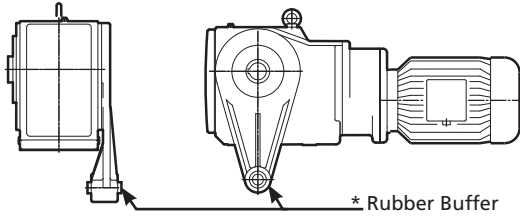


- For all 90.1 Series Helical-Bevel gear units, NORD also offers a bottom mount Torque Arm (K). See User Manual U10620.
- For the large 90.1 Series Helical-Bevel gear units sizes: SK9082.1, SK9086.1, SK9092.1, and SK9096.1, please use the Torque Arm (K).
- A metric fixing bolt is preferred for fastening the Torque-Arm(D) to the machine support bracket.

Gear Unit Series	Torque Arm				Torque Arm Mounting Screw					
	Type	Rubber Buffer P/N	Anchor Hole Size	Anchor Bolt Size	Qty	Size	Grade	Torque (Nm)	Torque (lb-ft)	Torque (lb-in)
92.1/93.1 Series Helical-Bevel	SK92072.1AD/SK93072.1AD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 25	8.8	27	20	35
	SK92172.1AD/SK93172.1AD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 25	8.8	27	20	35
	SK92372.1AD/SK93372.1AD	29602505	10.5 mm [0.41 in]	M10	4	M10 x 30	8.8	53	39	35
	SK92672.1AD/SK93672.1AD	29602505	10.5 mm [0.41 in]	M10	4	M10 x 30	8.8	53	39	35
	SK92772.1AD/SK93772.1AD	29603605	16.5 mm [0.65 in]	M16	4	M12 x 30	8.8	92	68	35
92 Series Helical-Bevel	SK92172AZD	29602505	10.5 mm [0.41 in]	M10	8	M6 x 16	8.8	11	8	71
	SK92372AZD	29602505	10.5 mm [0.41 in]	M10	8	M8 x 25	8.8	27	20	71
	SK92672AZD	29602505	10.5 mm [0.41 in]	M10	8	M8 x 25	8.8	27	20	71
	SK92772AZD	29603605	16.5 mm [0.65 in]	M16	8	M8 x 25	8.8	27	20	71
90.1 Series Helical-Bevel	SK9012.1AZD/SK9013.1AZD	29602505	10.5 mm [0.41 in]	M10	7	M8 x 20	8.8	27	20	62
	SK9016.1AZD/SK9017.1AZD	29602505	10.5 mm [0.41 in]	M10	7	M8 x 20	8.8	27	20	62
	SK9022.1AZD/SK9023.1AZD	29603605	16.5 mm [0.65 in]	M16	7	M8 x 25	8.8	27	20	62
	SK9032.1AZD/SK9033.1AZD	29603605	16.5 mm [0.65 in]	M16	7	M10 x 30	8.8	53	39	62
	SK9042.1AZD/SK9043.1AZD	29605205	25 mm [0.98 in]	M24	7	M12 x 35	8.8	92	68	62
	SK9052.1AZD/SK9053.1AZD	29605205	25 mm [0.98 in]	M24	7	M12 x 35	8.8	92	68	62
	SK9072.1AZD	29605205	25 mm [0.98 in]	M24	7	M16 x 45	8.8	230	170	62
Helical-Worm	SK02040AZD	29602505	10.5 mm [0.41 in]	M10	4	M6 x 20	8.8	11	8	35
	SK02050AZD/SK13050AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 20	8.8	27	20	35
	SK12063AZD/SK13063AZD	29602505	10.5 mm [0.41 in]	M10	7	M8 x 22	8.8	27	20	62
	SK12080AZD/SK13080AZD	29602505	10.5 mm [0.41 in]	M10	7	M10 x 25	8.8	53	39	62
	SK32100AZD/SK33100AZD	29603605	16.5 mm [0.65 in]	M16	7	M12 x 30	8.8	92	68	62
	SK42125AZD/SK43125AZD	29603605	16.5 mm [0.65 in]	M16	7	M12 x 30	8.8	92	68	62
MINICASE® SMI Series Worm	SK1SMI31AZD	29602505	10.5 mm [0.41 in]	M10	4	M6 x 16	8.8	11	8	35
	SK1SMI40AZD/SK2SMI40AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 22	8.8	27	20	35
	SK1SMI50AZD/SK2SMI50AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 22	8.8	27	20	35
	SK1SMI50AZD/SK2SMI50AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 22	8.8	27	20	35
	SK1SMI63AZD/SK2SMI63AZD	29602505	10.5 mm [0.41 in]	M10	4	M10 x 25	8.8	53	39	35
	SK1SMI75AZD	29602505	10.5 mm [0.41 in]	M10	4	M12 x 30	8.8	92	68	35
MINICASE® SM Series Worm	SK1SM31AZD	29602505	10.5 mm [0.41 in]	M10	4	M6 x 20	8.8	11	8	35
	SK1SM40AZD/SK2SM40AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 20	8.8	27	20	35
	SK1SM50AZD/SK2SM50AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 20	8.8	27	20	35
	SK1SM63AZD/SK2SM63AZD	29602505	10.5 mm [0.41 in]	M10	4	M8 x 20	8.8	27	20	35
"FLECBLOC™ SI Series Worm"	SK1SI31D	29602505	10.5 mm [0.41 in]	M10	4	M6 x 16	8.8	11	8	35
	SK1SI40D	29602505	10.5 mm [0.41 in]	M10	4	M8 x 22	8.8	27	20	35
	SK1SI50D	29602505	10.5 mm [0.41 in]	M10	4	M8 x 22	8.8	27	20	35
	SK1SI63D	29602505	10.5 mm [0.41 in]	M10	4	M10 x 25	8.8	53	39	35
	SK1SMI75D	29602505	10.5 mm [0.41 in]	M10	4	M12 x 30	8.8	92	68	35

## 1. Torque arm (K)

The preferred method of installing a shaft-mounted reducer is to support the weight of the gear unit or gearmotor assembly from the driven solid machine shaft. A torque arm is required in order to restrain the gearbox, react to the load torque, and keep the gear unit from spinning around the shaft.

Table 1 (Page 2) provides a list of Torque-Arm (K) part numbers available for the 90.1 Series Helical-Bevel gear units. The Torque Arm (K) is secured to the base of the reducer. On most sizes there is an integral resilient rubber bushing located at the fastening hole-end of the torque arm. On the larger sizes, rubber buffers are used in conjunction with the torque arm and when properly used they are applied in tandem, on either side of the torque arm lug.

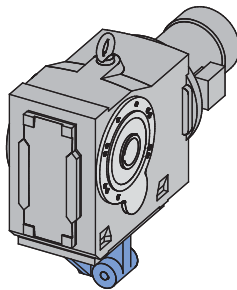

### IMPORTANT NOTE



When ordering the Torque Arm (K) one can specify which side of the reducer to mount the fastening hole that bolts to the machine support bracket. Consult the appropriate NORD catalog for specific Torque Arm (K) mounting options and ordering guidelines.

## 2. Purpose of the rubber bushing or rubber buffers

Regardless if the Torque Arm (K) is supplied with the integral rubber bushing or whether separate rubber buffers are required, the bushing/buffers help isolate and absorb all the load forces present in the system and increase the reducer's service life by reducing cumulative torsional shock loads.

- The primary load force acts in the direction of driven shaft rotation, reacts the load torque of the reducer, and prevents the gearbox from spinning on the shaft.
- Additional forces present themselves in the direction opposite of the shaft rotation, due to the typical slight out-of-round condition present in the machine shaft. This condition is the reason most shaft mounted-reducers have a slight shaft-wobble, which is normal.



### HARMFUL SITUATION



Always make sure that the Torque Arm (K) is used in conjunction with the required rubber bushing/s. Failure to do so will not properly cushion the reducer and can result in excessive binding, bearing stress, and damage to the reducer.

## 3. Machine support

The user must supply a suitably strong and rigid mating machine support that provides load bearing capacity on both sides of the machine support bracket.



### WARNING



It is the responsibility of the machine builder to design a support bracket of adequate strength and rigidity, and supply an appropriate tightening bolt assembly. Failure to do so may result in injury caused from a damaged or broken torque-reaction assembly.

## 4. Installation of the right-angle reducer with torque arm (K)

- Make sure the Torque-Arm (K) is mounted so that the machine fastening hole is on the correct side of the reducer.
  - The torque-arm can be repositioned on the as-received unit by removing the fixing screws, re-position the torque-arm in the correct location, and re-securing the fixing screws to the proper tightening torque, as indicated in Table 2 (Page 2).
  - If the torque-arm was shipped loose, position the torque-arm in the correct location on the gear unit, and secure the torque-arm with the proper fixing screws & tightening torque, as indicated in Table 2 (Page 2).
- Install the right-angle hollow bore reducer onto the machine shaft. Line up the hole in the reducer's torque-arm with the hole in the machine's support bracket, and temporarily hold the reducer in place
- Properly secure the gear unit assembly to the driven shaft in an axial direction.
- Apply thread locking compound to the end of the fixing bolt, then place the fastening bolt through the rigid machine support bracket and reducer torque-arm and loosely secure the nut onto the end of the bolt.
- If the torque arm has an integral rubber bushing follow step F and skip steps G-H. If the torque arm uses rubber buffers skip forward to steps G-H.
- Tighten the fixing bolt to the proper tightening torque as indicated in Table 2 (Page 2).
- Install the rubber buffers on either side of the gear unit's torque-arm lug and place the fixing bolt through the rubber buffers and torque-arm lug and into the rigid machine support bracket.
- Tighten the fixing bolt and nut lightly snug, until all the free-play is eliminated from the rubber buffer assembly. Then snug the fixing bolt assembly by tightening an additional  $\frac{1}{4}$  to  $\frac{1}{2}$  turn.



### WARNING



To prevent damage to the rubber buffers, avoid over-tightening.





# 90.1 HELICAL-BEVEL SHAFT-MOUNT WITH BOTTOM MOUNT TORQUE ARM (K)




DRIVESYSTEMS


RETAIN FOR FUTURE USE

U10620 - 2 of 2

Torque Arm (K) with integrated bushing

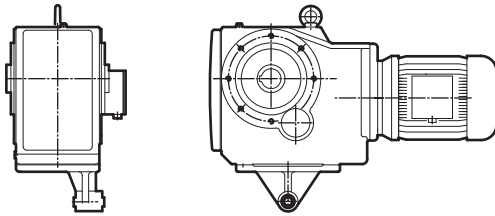

Torque Arm (K) with rubber buffer

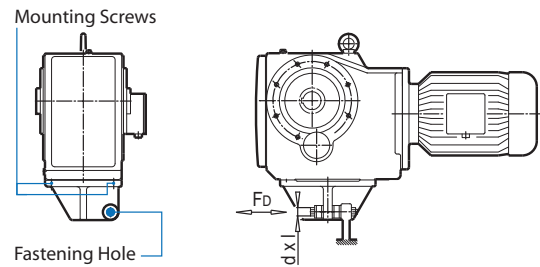

Available for Sizes SK9012.1 - SK9072.1

Available for Sizes SK9082.1 - SK90906.1

- For most all 90.1 series Helical-Bevel gear units, an optional tear-drop shaped side-mounted torque arm (D) is available. See user manual U10600.

- A metric fixing bolt is preferred for fastening the torque arm (K) to the machine support bracket.

Type	Torque Arm P/N	Reducer Hardware Hex Head Cap Screws + Lock Washer	Mounting Screw P/N	Lock Washer P/N	Rubber Buffer P/N	Fastening Hole In [mm]	Fastening Bolt Size	Bolt d x l [metric]	FD lb [N]	SFD inch [mm]
SK9012.1...K SK9013.1...K	68190600	M10 X 30 + A10 (Qty 3 Ea.)	22010300	28560106	N/A	0.41 [10.5]	M10	N/A	N/A	N/A
SK9016.1...K SK9017.1...K	68190600	M10 X 30 + A10 (Qty 3 Ea.)	22010300	28560106	N/A	0.41 [10.5]	M10	N/A	N/A	N/A
SK9022.1...K SK9023.1...K	68290610	M12 X 35 + A12 (Qty 3 Ea.)	22012350	28560126	N/A	0.65 [16.5]	M16	N/A	N/A	N/A
SK9032.1...K SK9033.1...K	68390610	M12 X 35 + A12 (Qty 3 Ea.)	22012350	28560126	N/A	0.65 [16.5]	M16	N/A	N/A	N/A
SK9042.1...K SK9043.1...K	68490610	M16 X 40 + A16 (Qty 3 Ea.)	22016400	28560166	N/A	0.98 [25]	M24	N/A	N/A	N/A
SK9052.1...K SK9053.1...K	68590620	M16 X 40 + A16 (Qty 3 Ea.)	22016450	28560166	N/A	0.98 [25]	M24	N/A	N/A	N/A
SK9072.1...K	68690620	M24 X 60 + A24 (Qty 4 Ea.)	22024060	28560246	N/A	0.98 [25]	M24	N/A	N/A	N/A
SK9082.1...K SK9082.1...SHK	68819010	M24 x 65 + A24 (Qty 4 Ea.)	22024650	22024650	29610000	1.22 [31]	M30	M30 x 260	5300 [23.64]	0.53 [13.5]
SK9086.1...K SK9086.1...SHK	68819010	M24 x 65 + A24 (Qty 4 Ea.)	22024650	22024650	29610000	1.22 [31]	M30	M30 x 260	6900 [30.77]	0.69 [17.6]
SK9092.1...SHK	68919010	M36 x 90 + A36 (Qty 4 Ea.)	22036900	28560366	29610000	1.22 [31]	M30	M30 x 260	10300 [45.71]	1.03 [26.2]
SK9096.1...SHK	69019000	M42 x 120 + A42 (Qty 4 Ea.)	22042120	28560426	29621800	1.93 [49]	M48	M48 x 550	12,500 [55.56]	1.06 [27.0]



# HELICAL & BEVEL REDUCER LUBRICATION



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10750 - 1 of 2

## 1. Importance of proper lubrication

Proper gearbox lubrication is essential in order to reduce friction, heat, and component wear. Lubricants reduce heat and wear by inserting a protective “fluid boundary” between mating parts and preventing direct metal to metal contact. Lubricants also help prevent corrosion and oxidation, minimize foam, improve heat transfer, optimize reducer efficiency, absorb shock loads and reduce noise.

Most NORD reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position.

## 2. Standard oil type

The following tables indicate the standard oil fill type used. Please see user manual U11000 for more specific information and for optional helical and bevel gear lubricants:

Serviceable Gear Units	
Helical In-line	Standard Oil Fill: ISO VG 220, Mineral Oil
Clincher Parallel-Shaft	
Right-Angle Bevel	
NORDBLOC® Series In-line	
NORDBLOC®.1 Series In-line	
Standard Series In-line	



### IMPORTANT NOTE



For shipping purposes, the following large Clincher™ gear units are supplied without oil:

- Clincher™ Sizes SK11282, SK11382 and SK12382

Maintenance-free / Lubricated For Life Gear Units	
Clincher™ sizes SK0182NB, SK0282NB & SK1382NB	Standard Oil Fill: ISO VG220 SHC/PAO Synthetic Oil
NORDBLOC® Sizes SK172, SK272, SK371F, SK372, SK373, SK320	



### IMPORTANT NOTE



Maintenance-free units are supplied as sealed units with no vent-plug. Consult NORD prior to ordering if interested in ordering any of the above sizes as serviceable gear units.



### IMPORTANT NOTE



Consult the sticker adjacent to the fill plug to determine the type of lubricant installed at the factory. Some units have special lubricants designed to operate in certain environments or intended to extend the service life or service temperature range of the lubricant. If in doubt about which lubricant is needed for a certain application, please contact NORD Gear.

## 3. Lubrication replacement

If the gear unit is filled with mineral oil, the lubricant should be replaced at least after every 10,000 operating hours or after every two years. If the gear unit is filled with synthetic oil, the lubricant should be replaced at least after every 20,000 operating hours or after every four years. Often gear reducers are exposed to extreme ambient conditions, hostile environments, wet conditions, or dirty and dusty operating areas. Especially in these situations, it is important to establish a condition-based oil service interval.

## 4. Oil viscosity

Viscosity, or the oil's resistance to shear under load, is often considered the single most important property of any gear oil.

- Often one will consider making a viscosity correction to the oil to improve the performance when operating the gear unit at low temperature or high temperature.
- In cases of extreme load conditions, gear pairs and antifriction bearings may be more susceptible to sliding or scuffing wear. In these operating conditions, it may also be beneficial to consider an increased lubrication viscosity and/or a lubrication with improved antiwear additive packages.



### IMPORTANT NOTE



The user should consult with their primary lubrication supplier before considering changes in oil type or viscosity.

## 5. Maximum oil sump temperature limit

To prevent reducer overheating, the reducer's maximum oil sump temperature limit must not be exceeded for prolonged periods of operation (up to 3 hours continuous operation depending upon reducer size).

Oil Type	Maximum Oil Temperature Limit	
	NORD	AGMA 9005-D94
Mineral	80-85°C (176-185°F)	95°C (203°F)
Synthetic	105°C (220°F)	107°C (225°F)



### IMPORTANT NOTE



**Use caution when specifying gear reducers for high temperature service.** If there is concern about exceeding the allowable safe operating temperatures, please consult NORD to discuss alternatives.

## 6. The importance of routine oil analysis

Routine oil analysis, sound lubrication practices, and good tracking of oil performance trends will help establish proper lubrication maintenance and change-out intervals. To maximize equipment reliability, NORD Gear generally recommends a condition-based lubrication maintenance program. One may take exceptions to this general recommendation on sealed-for-life or maintenance-free gear units or smaller and less costly gear units. In these instances, the replacement cost of the gear unit is often small compared to the costs associated with this type of oil analysis program.

STOP	HARMFUL SITUATION	STOP
<p>NORD suggests replacing the gear oil if oil analysis indicates any of the following:</p> <ul style="list-style-type: none"> <li>Viscosity has changed by approximately 10% or more.</li> <li>Debris particles (silicon, dust, dirt or sand) exceed 25 ppm.</li> <li>Iron content exceeds 150-200 ppm.</li> <li>Water content is greater than 0.05% (500 ppm).</li> <li>The total acid number (TAN) tests indicate a significant level of oxidative break-down of the oil, and a critical reduction in performance; If the TAN number measured changes by more than 5% over the new oil, then an oil change would be recommended.</li> </ul>		

## 7. Mounting position and oil fill quantity

All NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. **For additional information, please see the separate mounting position diagrams and the corresponding oil fill quantity tables for the specified gear unit.**

The gearbox nametag will indicate the mounting position that was provided. **For mounting orientations other than shown in the mounting position charts, please consult NORD Gear.**


STOP	HARMFUL SITUATION	STOP
<p>Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil-level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.</p>		

## 8. Oil plug locations

All gear units are assembled with the oil fill-level, oil-drain and vent plugs installed in their proper locations, according to the specified mounting position. All standard plugs are metric and utilize sealing gaskets between the head of the plug and the reducer housing.

## 9. Drain and fill-level plugs

All reducer drain plugs are metric socket head cap screws. For easier identification, it is NORD's standard practice to provide a hex-head screw for the fill-level plug. For ease of draining the used oil from the gear reducer, use the socket head screw located at the lowest part of the gearbox.

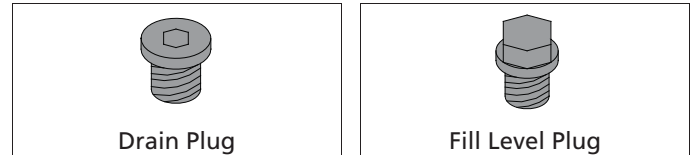


## 10. Vent plug locations

Reducer venting allows for air pressure differences that occur during operation, between the inner space of the reducer and the atmosphere, while ensuring leak-free operation. The AUTOVENT™ is standard for all vented gear units, unless otherwise noted.


**AUTOVENT™** - The AUTOVENT™ helps prevent bearing and gear damage by behaving like a check valve to block the entry of foreign material (water, dust, corrosives, etc.). The breather opens at approximately 2-3 psi during operation and closes tightly as the gearbox cools. This option is perfect for humid conditions and wash-down environments, helping to maintain proper oil cleanliness, and reducing foaming and oxidation. NORD may choose to offer one of two style options as shown in Figure 1. The Type 2 AUTOVENT™ comes closed upon delivery with a transportation sealing plug (see Warning).

Figure 1 AUTOVENT™ Types

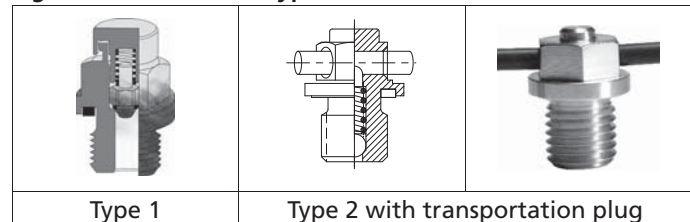

**Open Vent** - An optional open vent can be supplied by NORD. The open vent comes closed upon delivery with a transportation sealing plug (see Warning).


⚠	WARNING	⚠
<p>To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start up.</p>		

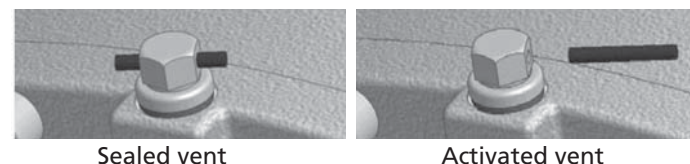

**Filtered Vent** - NORD may offer an optional filtered vent, which allows gases to permeate, but does not allow dust and debris to pass through the vent.

## 1. VL2 – Spread Bearing Design

NORD offers reinforced output shaft bearings with increased bearing distance. The lower bearing is a oversized, double row spherical bearing, which absorbs high overhung and thrust loads while providing a longer bearing service life. The spherical roller bearing is especially useful in compensating for alignment errors in long agitator shafts. The VL2 spread bearing design is commonly used for shredders, mixers, overhead conveyors or applications requiring increased bearing load carrying capacities. Included with the VL2 design is a grease fitting for the lower bearing and a removable plug to allow excess grease to purge from the bearing cavity.

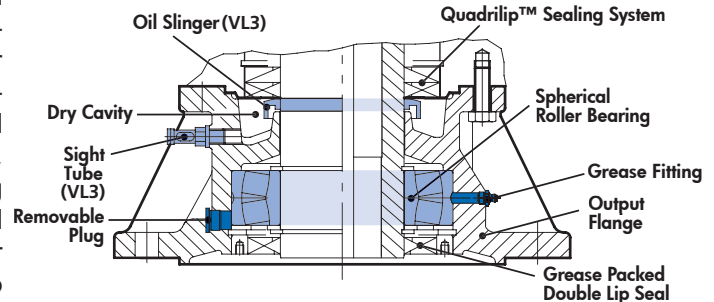

## 2. VL3 – Spread Bearing Design with Oil Safe Dry Cavity

The VL3 dry cavity design adds additional oil leak protective measures to the VL2 spread bearing design. NORD's Quadralip™ sealing system prevents oil from leaking from the gearbox into the VL2 flange. If in any case oil does leak past the Quadralip™ seals, it would flow down to the oil slinger mounted onto the shaft. As the shaft rotates, the oil will sling off into the dry cavity. A sight tube is provided for dry cavity inspection. At the bottom of the spread bearing flange is greased packed, double lip seal.

## 3. Service Guidelines for the Extended Bearing Flange

The spherical roller bearing on the extended bearing housing should be re-greased with 0.75 to 1.0 ounces (20-25 grams) of grease after every 2,500 hours of service or at least every 6 months. Prior to re-greasing the screw plug located opposite to the grease nipple should be unscrewed. After re-greasing the screw plug must be reinstalled and tightened. The extended bearing is factory assembled with the proper amount and type of grease. The type of grease supplied depends upon the type of oil specified at time of order.

### Bearing Grease Options

Reducer Oil Type	Grease Type	Thickener Type	NLGI Grade	Ambient Temperature Range	Manufacture Brand / Type
Mineral	Standard	Li-Complex	NLGI 2	-30 to 60 °C (-22 to 140 °F)	Mobil Grease XHP222
Synthetic	High-Temperature	Polyurea	NLGI 2	-25 to 80 °C (-13 to 176 °F)	Mobil / Polyrex EP 2
Food-Grade	Food-Grade	Al-Complex	NLGI 2	-25 to 40 °C (-13 to 104 °F)	Mobil / FM222

STOP

### HARMFUL SITUATION

STOP

Grease compatibility depends upon the type of thickener or soap complex used, the base oil type suspended within the thickener, and the type of additives used. The user should check with the lubrication supplier before making substitutions in brand and type in order to assure compatibility and to avoid causing possible damage to the extended bearing.



# HELICAL-WORM REDUCER LUBRICATION



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10770 - 1 of 2

## 1. Importance of proper lubrication

Proper gearbox lubrication is essential in order to reduce friction, heat, and component wear. Lubricants reduce heat and wear by inserting a protective “fluid boundary” between mating parts and preventing direct metal to metal contact. Lubricants also help prevent corrosion and oxidation, minimize foam, improve heat transfer, optimize reducer efficiency, absorb shock loads and reduce noise.

NORD helical-worm reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position.

## 2. Standard oil type

NORD helical worm gear reducers are filled with ISO VG 680 synthetic-hydrocarbon/polyalphaolefin (SHC/PAO) worm gear oil.

- SHC/PAO worm gear oils have good high and low temperature stability, are compatible with most paint and seal types, and are miscible with mineral oils.
- SHC/PAO worm gear oils also contain a small amount of organic ester and other antiwear (AW) packages to offer improved lubrication conditions, especially in the worm mesh, where a sideways sliding motion prevails.

Please see user manual U11020 for more specific information and for optional helical worm lubricants.



## HARMFUL SITUATION



In worm gears avoid using extreme pressure (EP) gear oils containing sulfur-phosphorous chemistries; these additives can react adversely with bronze worm gears, and accelerate wear.



## IMPORTANT NOTE



Consult the sticker adjacent to the fill plug to determine the type of lubricant installed at the factory. Some units have special lubricants designed to operate in certain environments or intended to extend the service life or service temperature range of the lubricant. If in doubt about which lubricant is needed for a certain application, please contact NORD Gear.

## 3. Lubrication replacement

The helical-worm gear oil should be replaced at least after every 20,000 operating hours or after every four years. Often gear reducers are exposed to extreme ambient conditions, hostile environments, wet conditions, or dirty and dusty operating areas. Especially in these situations, it is important to establish a condition-based oil service interval.

## 4. Efficiency

Helical worm gears reach efficiencies up to 92% and are generally much more efficient than worm-only gear units. However, it is important to consider the following, when using worm gears.

- Worm gears reach their peak rated efficiency, after they undergo a natural run-in process (up to 25 hours operating time at maximum rated load). Catalog published power and torque figures are based upon the rated efficiency after the run-in is complete.
- Worm gears have naturally lower startup efficiencies compared to operating efficiencies. As input speed increases the enhanced hydrodynamic effects of the oil result in less tooth friction and increased worm gear efficiency.



## IMPORTANT NOTE



**Worm gear reducers applied in cold temperature service,** may require increased motor power for the following reasons:

- Lower operating temperatures, cause lubrication viscosity to increase in both the gearbox and in the moving areas of the driven machine.
- Worm-gears have naturally lower start-up efficiencies compared to operating efficiencies.
- In extreme cases, one might need to consider increasing the motor power and lowering the oil viscosity

## 5. Oil Viscosity

Viscosity, or the oil's resistance to shear under load, is often considered the single most important property of any gear oil.

- Often one will consider making a viscosity correction to the oil to improve the performance when operating the gear unit at low temperature or high temperature.
- In cases of extreme load conditions, gear pairs and antifriction bearings may be more susceptible to sliding or scuffing wear. In these operating conditions, it may also be beneficial to consider an increased lubrication viscosity and/or a lubrication with improved antiwear additive packages.



## IMPORTANT NOTE



The user should consult with their primary lubrication supplier before considering changes in oil type or viscosity.

## 6. Maximum oil sump temperature limit

To prevent reducer overheating, the reducer's maximum oil sump temperature limit must not be exceeded for prolonged periods of operation (up to 3 hours continuous operation depending upon reducer size).

Oil Type	Maximum Oil Temperature Limit	
	NORD	AGMA 9005-D94
Synthetic	105°C (220°F)	107°C (225°F)



## IMPORTANT NOTE



**Use caution when specifying gear reducers for high temperature service.** If there is concern about exceeding the allowable safe operating temperatures, please consult NORD to discuss alternatives.



## 7. The importance of routine oil analysis

Routine oil analysis, sound lubrication practices, and good tracking of oil performance trends will help establish proper lubrication maintenance and change-out intervals. To maximize equipment reliability, NORD Gear generally recommends a condition-based lubrication maintenance program. One may take exceptions to this general recommendation on sealed-for-life or maintenance-free gear units or smaller and less costly gear units. In these instances, the replacement cost of the gear unit is often small compared to the costs associated with this type of oil analysis program.

STOP	HARMFUL SITUATION	STOP
<p>NORD suggests replacing the gear oil if oil analysis indicates any of the following:</p> <ul style="list-style-type: none"> <li>Viscosity has changed by approximately 10% or more.</li> <li>Debris particles (silicon, dust, dirt or sand) exceed 25 ppm.</li> <li>Iron content exceeds 150-200 ppm.</li> <li>Water content is greater than 0.05% (500 ppm).</li> <li>The total acid number (TAN) tests indicate a significant level of oxidative break-down of the oil, and a critical reduction in performance; If the TAN number measured changes by more than 5% over the new oil, then an oil change would be recommended.</li> </ul>		

## 8. Mounting position and oil fill quantity

All NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. **For additional information, please see the separate mounting position diagrams and the corresponding oil fill quantity tables for the specified gear unit.**

The gearbox nametag will indicate the mounting position that was provided. **For mounting orientations other than shown in the mounting position charts, please consult NORD Gear.**


STOP	HARMFUL SITUATION	STOP
<p>Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil-level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.</p>		

## 9. Oil plug locations

All gear units are assembled with the oil fill-level, oil-drain and vent plugs installed in their proper locations, according to the specified mounting position. All standard plugs are metric and utilize sealing gaskets between the head of the plug and the reducer housing.

## 10. Drain and fill-level plugs

All reducer drain plugs are metric socket head cap screws. For easier identification, it is NORD's standard practice to provide a hex-head screw for the fill-level plug. For ease of draining the used oil from the gear reducer, use the socket head screw located at the lowest part of the gearbox.

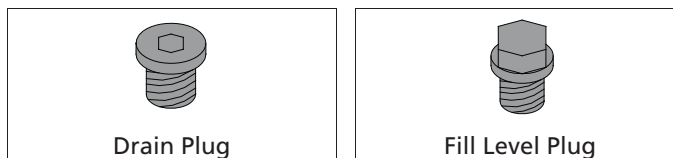


## 11. Vent plug locations

Reducer venting allows for air pressure differences that occur during operation, between the inner space of the reducer and the atmosphere, while ensuring leak-free operation. The AUTOVENT™ is standard for all vented gear units, unless otherwise noted.


**AUTOVENT™** - The AUTOVENT™ helps prevent bearing and gear damage by behaving like a check valve to block the entry of foreign material (water, dust, corrosives, etc.). The breather opens at approximately 2-3 psi during operation and closes tightly as the gearbox cools. This option is perfect for humid conditions and wash-down environments, helping to maintain proper oil cleanliness, and reducing foaming and oxidation. NORD may choose to offer one of two style options as shown in Figure 1. The Type 2 AUTOVENT™ comes closed upon delivery with a transportation sealing plug (see Warning).

Figure 1 AUTOVENT™ Types

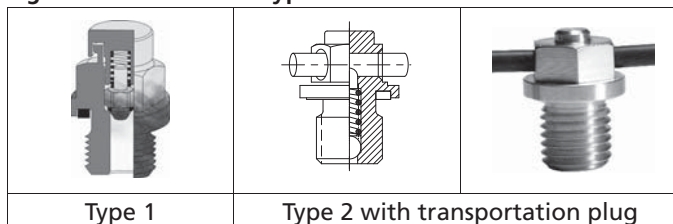

**Open Vent** - An optional open vent can be supplied by NORD. The open vent comes closed upon delivery with a transportation sealing plug (see Warning).

⚠	WARNING	⚠
<p>To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start up.</p>		

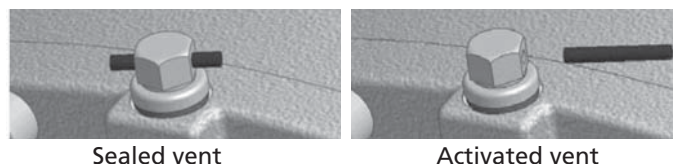

**Filtered Vent** - NORD may offer an optional filtered vent, which allows gases to permeate, but does not allow dust and debris to pass through the vent.



# MINICASE® (SM SERIES) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10790 - 1 of 2

## 1. Importance of proper gearbox lubrication

Proper gearbox lubrication is essential in order to reduce friction, heat, and component wear. Lubricants reduce heat and wear by inserting a protective “fluid boundary” between mating parts and preventing direct metal to metal contact. Lubricants also help prevent corrosion and oxidation, minimize foam, improve heat transfer, optimize reducer efficiency, absorb shock loads and reduce noise.

## 2. Maintenance free design

MINICASE® (SM series) worm gear reducers are designed to be maintenance-free and are supplied completely sealed. They are factory oil-filled with a pre-determined oil fill amount in accordance to the specified reducer size and mounting position. The synthetic lubrication used is suitable for the life of the product so the MINICASE™ is inherently maintenance free.

## 3. Standard oil type

The standard factory oil fill for MINICASE® (SM) worm gear reducers is ISO viscosity VG synthetic hydrocarbon/polyalphaolefin (SHC/PAO oil) food grade oil suitable for NSF-H1 incidental contact and is a factory stocked lubricant. Food grade oil suitable for NSF-H1 incidental contact is a factory stocked option.

See user manual U11040 for specific information and for optional MINICASE® (SM) worm lubrication types and options.



## HARMFUL SITUATION



In worm gears avoid using extreme pressure (EP) gear oils containing sulfur-phosphorous chemistries; these additives can react adversely with bronze worm gears, and accelerate wear.

## 4. Efficiency

It is important to consider the following, when using worm gears.

- Worm gears reach their peak rated efficiency, after they undergo a natural run-in process (up to 25 hours operating time at maximum rated load). Catalog published power and torque figures are based upon the rated efficiency after the run-in is complete.
- Worm gears have naturally lower startup efficiencies compared to operating efficiencies. As input speed increases the enhanced hydrodynamic effects of the oil result in less tooth friction and increased worm gear efficiency.



## IMPORTANT NOTE



**Worm gear reducers applied in cold temperature service**, may require increased motor power for the following reasons:

- Lower operating temperatures, cause lubrication viscosity to increase in both the gearbox and in the moving areas of the driven machine.
- Worm-gears have naturally lower start-up efficiencies compared to operating efficiencies.
- In extreme cases, one might need to consider increasing the motor power and/or lowering the oil viscosity.

## 5. Maximum oil sump temperature limit

To prevent reducer overheating, the reducer's maximum oil sump temperature limit must not be exceeded for prolonged periods of operation (up to 3 hours continuous operation depending upon reducer size).

Oil Type	Maximum Oil Temperature Limit	
	NORD	AGMA 9005-D94
Synthetic	105°C (220°F)	107°C (225°F)



## IMPORTANT NOTE



**Use caution when specifying gear reducers for high temperature service.** If there is concern about exceeding the allowable safe operating temperatures, please consult NORD to discuss alternatives.



# MINICASE® (SM SERIES) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10790 - 2 of 2

## 6. Oil Viscosity

The viscosity rating determines the operating oil's resistance to shear under load conditions. Some important viscosity considerations include the following:

- Lightly loaded gears require lower viscosity oils than highly loaded gears.
- Lower viscosity will provide thin oil film, lower friction, higher mechanical efficiency, and better heat removal conditions.
- Higher viscosity will provide thicker oil film, and better resistance to sliding wear, scuffing wear, and galling at high pressure.
- Higher operating temperatures will cause a reduction in viscosity and lower operating temperatures, cause an increase in viscosity or a thickening of the oil.

The standard oil-fill is considered acceptable for most applications. In certain situations an oil viscosity change may be beneficial.

- If the gear unit is exposed to frequent high load conditions. A higher viscosity oil will have a higher film thickness offering better overall resistance to oil shear, sliding wear and scuffing wear in gears and roller element bearings.
- An oil viscosity correction or lubrication change may improve the overall performance when operating the gear unit at very low or high ambient temperature conditions.



### IMPORTANT NOTE



The user should consult with their primary lubrication supplier before considering changes in oil type or viscosity.

## 7. Viscosity Index

Viscosity index helps quantify the rate of oil viscosity change with respect to temperature changes. Oils with a reasonably high viscosity index tend to be more stable in a changing temperature environment. The ability of an oil to maintain a small viscosity differential over the operating range of the gearbox provides a more consistent lubricating film and better wear performance.

Synthetic oils typically have a higher viscosity index than mineral oils and polyglycol oils tend to have an exceptionally high viscosity index compared to other synthetic oils like polyalphaolefin or ester based products.





# MINICASE® (SMI/SMID) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10800 - 1 of 2

## 1. Importance of proper gearbox lubrication

Proper gearbox lubrication is essential in order to reduce friction, heat, and component wear. Lubricants reduce heat and wear by inserting a protective “fluid boundary” between mating parts and preventing direct metal to metal contact. Lubricants also help prevent corrosion and oxidation, minimize foam, improve heat transfer, optimize reducer efficiency, absorb shock loads and reduce noise.

## 2. Factory Oil-Filled / Maintenance-Free

NORD modular worm gear units are inherently maintenance-free, factory oil filled, and supplied with a high-quality, long-life, synthetic oil which is intended to be suitable for the life of the gear unit.

MINICASE® (SMI/SMID) worm gear units are assembled at the factory from stocked component parts. They are filled at time of assembly in accordance to the specified reducer mounting position. See user manuals U13150 and U13250 for more info.

## 3. Standard Oil Types

MINICASE® (SMI/SMID) worm gear units are factory filled with synthetic poly glycol oil. Food-grade polyglycol oil is optional. The specific oil type and viscosity grade are displayed on the reducer nameplate. See user manual 11050 for specific MINICASE® (SMI/SMID) worm lubrication types and options.



### HARMFUL SITUATION



In worm gears avoid using extreme pressure (EP) gear oils containing sulfur-phosphorous chemistries; these additives can react adversely with bronze worm gears, and accelerate wear.

## 4. Efficiency

It is important to consider the following, when ordering worm gears.

- Worm gears reach their peak rated efficiency, after they undergo a natural run-in process (up to 25 hours operating time at maximum rated load). Catalog published power and torque figures are based upon the rated efficiency after the run-in is complete.
- Worm gears have naturally lower startup efficiencies compared to operating efficiencies. As input speed increases the enhanced hydrodynamic effects of the oil result in less tooth friction and increased worm gear efficiency.



### IMPORTANT NOTE



**Worm gear reducers applied in cold temperature service**, may require increased motor power for the following reasons:

- Lower operating temperatures, cause lubrication viscosity to increase in both the gearbox and in the moving areas of the driven machine.
- Worm-gears have naturally lower start-up efficiencies compared to operating efficiencies.
- In extreme cases, one might need to consider increasing the motor power and lowering the oil viscosity



## 5. Optional Vent Kits

MINICASE® (SMI/SMID) worm gear units are designed to operate sealed or vented. As a standard the modular worm gear units are factory oil filled and supplied with oil plugs in the housing, making vent plugs optional. See user manual U14750.

NORD can supply an AUTOVENT™ or an open vent with each gear unit size. If a vent is desired the type must be specified at the time of order. Reducer vents are sealed with a transportation plug that must be removed prior to gear unit start-up.

Type	Transportation Seal	Installation	Part Number
AUTOVENT™	Included	Factory or Field site	66093510
Open Vent	None	Field Only	60693500
Open Vent	Included	Factory or Field site	22008004 (vent) 25308120 (gasket)

Unless noted by a separate part number, vent kits include the housing gasket

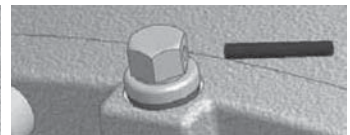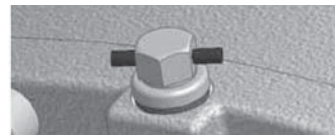

### WARNING



To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start-up.

## 6. AUTOVENT™

The AUTOVENT™ helps prevent bearing and gear damage by behaving like a check valve to block the entry of foreign material (water, dust, corrosives, etc.). The breather opens at approximately 2-3 psi during operation and closes tightly as the gearbox cools. This option is perfect for humid conditions and wash-down environments, helping to maintain proper oil cleanliness, while reducing foaming and oxidation.

## 7. Open Vent

A typical gearbox industry open vent option can also be supplied by NORD. This option allows free exchange of air and does not build-up any back pressure inside the gear unit. This option is ideal for many operating conditions where the geared product is used in relatively clean and moisture-free environment.



# MINICASE® (SMI/SMID) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10800 - 2 of 2

## 8. When to Use a Sealed or a Vented Unit

There are many conditions that should be considered when deciding whether to use a sealed or vented unit.

1. If the duty cycle is intermittent, the run times are short, and any build-up of internal pressure or temperature is relatively low, the sealed unit option may be used.
2. If running continuous and under moderate to high load conditions, worm gears can generate higher operating temperatures and a build-up of internal pressure. In these instances a vent is strongly recommended. Consult NORD if operation at high load conditions is required.
3. If running continuous at 4-pole electric motor speeds (1800 rpm at 60 Hz) or higher, then a vent option is usually recommended. Consult NORD if operation at higher speeds is required.
4. Radial shaft seals produce a hydrodynamic pumping action to help push lubricant back into the gear unit, causing a small amount of ingested air and a small pressure increase (1-2 psi) that does not normally require a reducer vent; however when combined with continuous operation under high load (Condition 2), additional operating pressures will result and a vent should be used.
5. When the environment is contaminated with water, dirt, or other objects that may be ingested into the breather, increased wear of bearings, gearing, and lubrication breakdown can result. In these instances the sealed option or an AUTOVENT™ should be considered.

## 9. Maximum Oil Sump Temperature Limit

To prevent reducer overheating, the reducer's maximum oil-ump temperature limit must not be exceeded for prolonged periods of operation.

Oil Type	Maximum Oil Temperature Limit	
	NORD	AGMA 9005-D94
Synthetic	105°C (220°F)	107°C (225°F)



### IMPORTANT NOTE



Use caution when specifying gear reducers for high temperature service. If there is concern about exceeding the safe operating temperature limit, please consult NORD to discuss alternatives.

## 10. Oil Viscosity

The viscosity rating determines the operating oil's resistance to shear under load conditions. Some important viscosity considerations include the following:

- Lightly loaded gears require lower viscosity oils than highly loaded gears.
- Lower viscosity will provide thin oil film, lower friction, higher mechanical efficiency, and better heat removal conditions.
- Higher viscosity will provide thicker oil film, and a better resistance to sliding wear, scuffing wear, and galling at high pressure.
- Higher operating temperatures will cause a reduction in viscosity and lower operating temperatures, cause an increase in viscosity or a thickening of the oil.

The standard oil-fill is considered acceptable for most applications. In certain situations an oil viscosity change may be beneficial.

- If the gear unit is exposed to frequent high load conditions. A higher viscosity oil will have a higher film thickness offering better overall resistance to oil shear, sliding wear and scuffing wear in gears and roller element bearings.
- An oil viscosity correction or lubrication change may improve the overall performance when operating the gear unit at very low or high ambient temperature conditions.



### IMPORTANT NOTE



The user should consult with their primary lubrication supplier before considering changes in oil type or viscosity.

## 11. Viscosity Index

Viscosity index helps quantify the rate of oil viscosity change with respect to temperature changes. Oils with a reasonably high viscosity index tend to be more stable in a changing temperature environment. The ability of an oil to maintain a small viscosity differential over the operating range of the gearbox provides a more consistent lubricating film and better wear performance.

Synthetic oils typically have a higher viscosity index than mineral oils and polyglycol oils tend to have an exceptionally high viscosity index compared to other synthetic oils like polyalpha-olefin or ester based products.



# FLEXBLOC™ (SI/SID SERIES) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10810 - 1 of 2

## 1. Importance of Proper Lubrication

Proper gearbox lubrication is essential in order to reduce friction, heat, and component wear. Lubricants reduce heat and wear by inserting a protective "fluid boundary" between mating parts and preventing direct metal to metal contact. Lubricants also help prevent corrosion and oxidation, minimize foam, improve heat transfer, optimize reducer efficiency, absorb shock loads and reduce noise.

## 2. Factory Oil-Filled / Maintenance-Free

NORD modular worm gear units are inherently maintenance-free, factory oil filled, and supplied with a high-quality, long-life, synthetic oil which is intended to be suitable for the life of the gear unit.

FLEXBLOC™ SI worm gear units are filled at time of assembly to a universal oil fill, allowing for many mounting position possibilities. See user manual U13300.

## 3. Standard oil type

FLEXBLOC™ (SI/SID) worm gear units are factory filled with synthetic poly glycol oil. Food-grade polyglycol oil is optional. The specific oil type and viscosity grade are displayed on the reducer nameplate. See user manual 11060 for specific FLEXBLOC™ (SI/SID) worm lubrication types and options.

**HARMFUL SITUATION**

In worm gears avoid using extreme pressure (EP) gear oils containing sulfur-phosphorous chemistries; these additives can react adversely with bronze worm gears, and accelerate wear.

## 4. Efficiency

It is important to consider the following, when ordering worm gears.

- Worm gears reach their peak rated efficiency, after they undergo a natural run-in process (up to 25 hours operating time at maximum rated load). Catalog published power and torque figures are based upon the rated efficiency after the run-in is complete.
- Worm gears have naturally lower startup efficiencies compared to operating efficiencies. As input speed increases the enhanced hydrodynamic effects of the oil result in less tooth friction and increased worm gear efficiency.

**IMPORTANT NOTE**

**Worm gear reducers applied in cold temperature service**, may require increased motor power for the following reasons:

- Lower operating temperatures, cause lubrication viscosity to increase in both the gearbox and in the moving areas of the driven machine.
- Worm-gears have naturally lower start-up efficiencies compared to operating efficiencies.
- In extreme cases, one might need to consider increasing the motor power and lowering the oil viscosity


## 5. Optional Vent Kits

FLEXBLOC™ (SI) worm gear units are designed to operate sealed or vented. As a standard the modular worm gear units are factory oil filled and supplied with oil plugs in the housing, making vent plugs optional. See user manual U14800 for vent locations.

NORD can supply an AUTOVENT™ or an open vent with each gear unit size. If a vent is desired the type must be specified at the time of order. Reducer vents are sealed with a transportation plug that must be removed prior to gear unit start-up.

Type	Transportation Seal	Installation	Part Number
AUTOVENT™	Included	Factory or Field site	66093510
Open Vent	None	Field Only	60693500
Open Vent	Included	Factory or Field site	22008004 (vent) 25308120 (gasket)

Unless noted by a separate part number, vent kits include the housing gasket

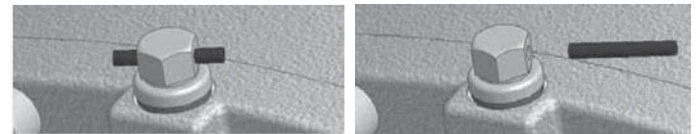

**WARNING**

To prevent build-up of excessive pressure, sealed vents must be activated as shown prior to gear unit start-up.

## 6. AUTOVENT™

The AUTOVENT™ helps prevent bearing and gear damage by behaving like a check valve to block the entry of foreign material (water, dust, corrosives, etc.). The breather opens at approximately 2-3 psi during operation and closes tightly as the gearbox cools. This option is perfect for humid conditions and wash-down environments, helping to maintain proper oil cleanliness, while reducing foaming and oxidation.

## 7. Open Vent

A typical gearbox industry open vent option can also be supplied by NORD. This option allows free exchange of air and does not build-up any back pressure inside the gear unit. This option is ideal for many operating conditions where the geared product is used in relatively clean and moisture-free environment.



# FLEXBLOC™ (SI/SID SERIES) WORM GEAR LUBRICATION GUIDELINES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U10810 - 2 of 2

## 8. When to Use a Sealed or a Vented Unit

There are many conditions that should be considered when deciding whether to use a sealed or vented unit.

1. If the duty cycle is intermittent, the run times are short, and any build-up of internal pressure or temperature is relatively low, the sealed unit option may be used.
2. If running continuous and under moderate to high load conditions, worm gears can generate higher operating temperatures and a build-up of internal pressure. In these instances a vent is strongly recommended. Consult NORD if operation at high load conditions is required.
3. If running continuous at 4-pole electric motor speeds (1800 rpm at 60 Hz) or higher, then a vent option is usually recommended. Consult NORD if operation at higher speeds is required.
4. Radial shaft seals produce a hydrodynamic pumping action to help push lubricant back into the gear unit, causing a small amount of ingested air and a small pressure increase (1-2 psi) that does not normally require a reducer vent; however when combined with continuous operation under high load (Condition 2), additional operating pressures will result and a vent should be used.
5. When the environment is contaminated with water, dirt, or other objects that may be ingested into the breather, increased wear of bearings, gearing, and lubrication breakdown can result. In these instances the sealed option or an AUTOVENT™ should be considered.

## 9. Maximum Oil Sump Temperature Limit

To prevent reducer overheating, the reducer's maximum oil-ump temperature limit must not be exceeded for prolonged periods of operation.

Oil Type	Maximum Oil Temperature Limit	
	NORD	AGMA 9005-D94
Synthetic	105°C (220°F)	107°C (225°F)



### IMPORTANT NOTE



Use caution when specifying gear reducers for high temperature service. If there is concern about exceeding the allowable safe operating temperatures, please consult NORD to discuss alternatives.

## 10. Oil Viscosity

The viscosity rating determines the operating oil's resistance to shear under load conditions. Some important viscosity considerations include the following:

- Lightly loaded gears require lower viscosity oils than highly loaded gears.
- Lower viscosity will provide thin oil film, lower friction, higher mechanical efficiency, and better heat removal conditions.
- Higher viscosity will provide thicker oil film, and better resistance to sliding wear, scuffing wear, and galling at high pressure.
- Higher operating temperatures will cause a reduction in viscosity and lower operating temperatures, cause an increase in viscosity or a thickening of the oil.

The standard oil-fill is considered acceptable for most applications. In certain situations an oil viscosity change may be beneficial.

- If the gear unit is exposed to frequent high load conditions. A higher viscosity oil will have a higher film thickness offering better overall resistance to oil shear, sliding wear and scuffing wear in gears and roller element bearings.
- An oil viscosity correction or lubrication change may improve the overall performance when operating the gear unit at very low or high ambient temperature conditions.



### IMPORTANT NOTE



The user should consult with their primary lubrication supplier before considering changes in oil type or viscosity.

## 11. Viscosity Index


Viscosity index helps quantify the rate of oil viscosity change with respect to temperature changes. Oils with a reasonably high viscosity index tend to be more stable in a changing temperature environment. The ability of an oil to maintain a small viscosity differential over the operating range of the gearbox provides a more consistent lubricating film and better wear performance.

Synthetic oils typically have a higher viscosity index than mineral oils and polyglycol oils tend to have an exceptionally high viscosity index compared to other synthetic oils like polyalphaolefin or ester based products.




## Installation Instructions

Sometimes NORD requires the use of an oil expansion chamber when the motor or reducer input is mounted vertically. Consult your NORD catalog for additional information and application considerations.

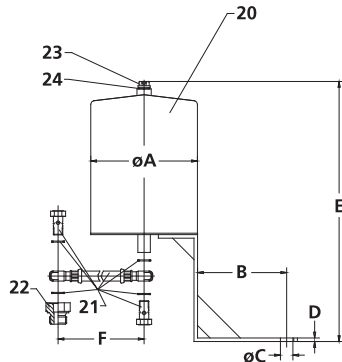

1. Secure the gear reducer in the proper mounting position for the application and remove the vent plug from the gear reducer. The hose assembly kit (21) will be fitted to the reducer using the housing port provided.
2. When using the larger 2.7 and 5.4 liter chambers, screw the adapter fitting (22) into the reducer housing port. Use all sealing gaskets provided.
3. Mount the overflow tank (20) at the highest location from the reducer, as permitted by the hose assembly kit (21). Typical mounting configurations are represented below. Use one of the input cover's mounting bolts, to mount the chamber support leg to the reducer.

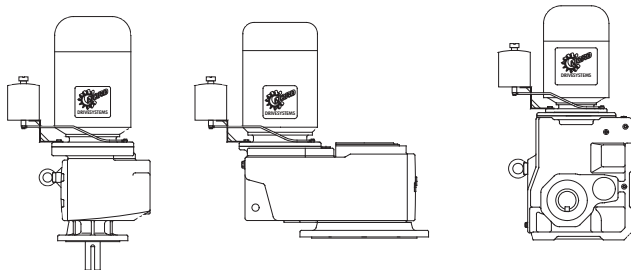

4. Be sure to use the proper fittings. Assemble one end of the vent-hose assembly (21) to bottom of the chamber and one-end to the reducer.
5. Secure the vent-plug (23) and gasket (24) that is supplied with the kit to the top of the expansion chamber.

## Expansion Chamber Kit Dimensions & Parts List

Kit Part Number: 28390390 - 0.7 Liter Oil Expansion Chamber

Kit P/N	Ø A	B	Ø C	D	E	F	Units
28390390 (0.7 Liter)	3.94 100	1.97 50	0.53 13.5	0.20 5	8.50 216	19.69 500	inch mm

Item	Part Number	Description
20	28300390	Overflow Tank - 0.7 Liter
21	28310020	Flexible Vent Hose Assembly - Includes: Hose, metal gaskets & 2 Hollow Bolts (1 Bolt. - M12 X 1.5 and 1 Pc. - G1/4)
22	None	Adapter Fitting
23	22012004	Normal Style Vent Plug (M12 X 1.5, DIN 910)
24	25312150	Vent Plug Gasket (12 X 15.5 X 1.5)

Kit Part Number: 28390400 - 2.7 Liter Oil Expansion Chamber

Kit P/N	Ø A	B	Ø C	D	E	F	Units
28390400 (2.7 Liter)	5.91 150	4.92 125	0.69 17.5	0.20 5	15.22 386.5	27.56 700	inch mm

Item	Part Number	Description
20	28300400	Overflow Tank - 2.7 Liter
21	28310030	Flexible Vent Hose Assy - Includes: Hose, metal gaskets & 2 Hollow Bolts (2 Pcs. - G1/4)
22	22024030	Adapter Fitting (M24 X 1.5 to G1/4)
23	22012004	Normal Style Vent Plug (M12 X 1.5, DIN 910)
24	25312150	Vent Plug Gasket (12 X 15.5 X 1.5)

Kit Part Number: 28390410 - 5.4 Liter Oil Expansion Chamber

Kit P/N	Ø A	B	Ø C	D	E	F	Units
28390410 (5.4 Liter)	7.09 180	3.54 90	0.69 17.5	0.20 5	15.18 385.5	31.50 800	inch mm

Item	Part Number	Description
20	28300410	Overflow Tank - 5.4 Liter
21	28310040	Flexible Vent Hose Assy - Includes: Hose, metal gaskets & 2 Hollow Bolts (2 Pcs. - G1/4)
22	22030030	Adapter Fitting (M30 X 1.5 to G1/4)
23	22012004	Normal Style Vent Plug (M12 X 1.5, DIN 910)
24	25312150	Vent Plug Gasket (12 X 15.5 X 1.5)

Please see page 2 for gearbox compatibility



## HARMFUL SITUATION







Remove the protective "rubber element" from the supplied vent prior to use so that an open-vent is formed on top of the overflow tank. Avoid using a pressurized AUTOVENT™ breather on the overflow tank since this may create an undesired pressure-vacuum in the overflow tank.

## Expansion Chamber Compatibility Chart


Helical In-line	NORDBLOC™	NORDBLOC.1™	Clincher™	Helical-Bevel	Part Number	[lb]
SK 42/43 SK 52/53 SK 63	SK472/473 SK572/573 SK672/673 SK772/773 SK872/873 SK972/973	SK572.1/573.1* SK672.1/673.1*	SK 4282/4382 SK 5282/5382 SK 6382	SK 9042.1/9043.1 SK 9052.1/9053.1	28390390	11.0
SK 62 SK 72/73			SK 6282 SK 7282/7382	SK 9072.1 SK 9082.1	28390400	13.2
SK 82/83 SK 92/93 SK 102/103			SK 8282/8382	SK 9086.1 SK 9092.1 SK 9096.1	28390410	15.4

\* Need to additionally order part #28390380 which is sub-assembly shown below.


## Sub-Assembly P/N 28390380 for NORDBLOC®.1 gear units with M10x1 air vent.

 <b>1</b> 1x DIN 7643 M10x1 283 00380	 <b>2</b> 1x DIN 7603A Cu 10x16x1 253 10166	 <b>3</b> 1x Ring 10x14x5 283 00370	 <b>4</b> 1xDIN 9021 ø8,4 227 10840
---	--	---	--

## Assembly of the expansion unit at the gear unit. Types SK 572.1/573.1, SK 672.1/673.1

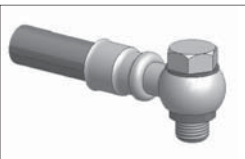


Vent Hose Sub-Assembly

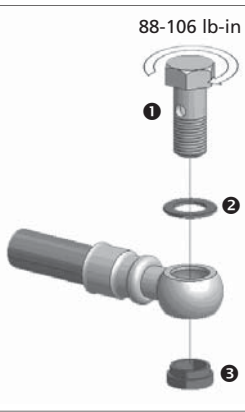


88-106 lb-in

**4** For motor sizes 63, 71, 80, 90, 100 & 112


- Motor attachment bolt

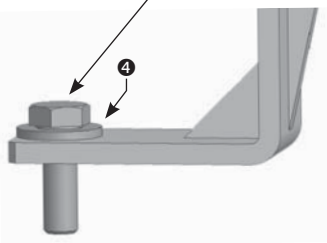

Motor Sizes 63, 71 & 80:  
Assembly vent-hose to port as shown.

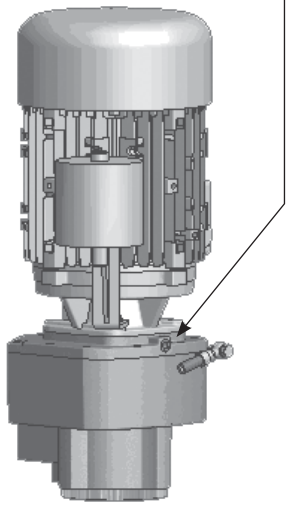

Motor Sizes 90, 100 & 112:  
Assembly vent-hose to port as shown.

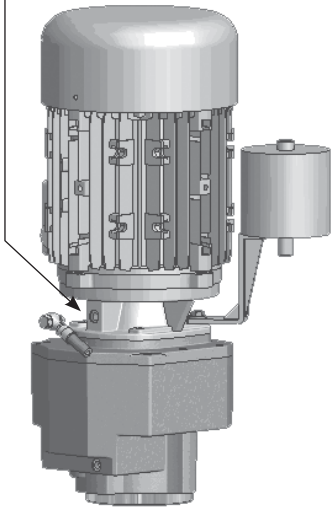



# HELICAL & BEVEL REDUCER LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11000 - 1 of 2

## Lubrication Tables – Helical and Bevel Gear Units

### Standard Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG220	MIN-EP	0 to 40°C (32 to 104°F)	Mobilgear 600XP220	①②
	PAO	-35 to 60°C (-31 to 140°F)	Mobil SHC630	②
	FG	-5 to 40°C (23 to 104°F)	Fuchs FM220	②

### Optional Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG460	PAO	-35 to 80°C (-31 to 176°F)	Mobil SHC 634	-
	FG-PAO	-35 to 80°C (-31 to 176°F)	Mobil SHC Cibus 460	-
VG220	FG-PAO	-35 to 60°C (-31 to 140°F)	Mobil SHC Cibus 220	-
VG150	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC629	-

### Grease Options (applied to greased bearings and seal cavities)

NLGI Grade	Grease Type/Thickener	Ambient Temperature Range	Manufacturer Brand/Type	Notes
NLGI 2	Standard (Li-Complex)	-30 to 60°C (-22 to 140°F)	Mobil Grease XHP222	①②
	High Temp (Polyurea)	-40 to 80°C (-40 to 176°F)	Mobil / Polyrex EP 2	②
	Food-Grade (Polyurea)	-30 to 40°C (-22 to 104°F)	Mobil SHC Polyrex 222	②

② Stocked Lubricants

① Standard product on serviceable gear units

② Standard product on maintenance free gear units



## IMPORTANT NOTES



- The “Ambient Temperature” is intended to be an operation guideline based upon the typical properties of all the lubricant. The viscosity and other properties of the lubricant change based upon load, speed, ambient conditions, and reducer operating temperatures. The user should consult with their lubrication supplier & NORD gear before considering changes in oil type or viscosity.
- To prevent reducer overheating, observe the maximum operating oil temperature limits:  
Mineral Oil: 80-85 °C (176 – 180 °F).  
Synthetic Oil: 105 °C (225 °F).
- In the following instances, please consult NORD for specific recommendations:
  - ✓ Gear units will operate in high ambient temperature conditions exceeding 40 °C (104 °F).
  - ✓ Gear units will operate in cold ambient temperature conditions approaching 0 °C (32 °F) or lower.
  - ✓ Lower than an ISO VG100 viscosity oil is being considered for a cold-temperature service.
  - ✓ Fluid grease is required for lubricating the gear unit.
- Observe the general lubrication guidelines outlined in user manual U10750.

### Oil Formulation Codes

MIN-EP	-	Mineral Oil with EP Additive
PAO-EP	-	Synthetic Polyalphaolefin Oil with EP Additive
PAO	-	Synthetic Polyalphaolefin Oil
PG	-	Synthetic Polyglycol Oil
FG	-	Food-Grade Oil
FG-PAO	-	Food-Grade, Synthetic Polyalphaolefin Oil
FG-PG	-	Food-Grade, Synthetic Polyglycol Oil

### Lubrication Notes

- Avoid using (EP) gear oils in worm gears that contain sulfur-phosphorous chemistries, as these additives can react adversely with bronze worm gears and accelerate wear.
- Food grade lubricants must be in compliance with FDA 212 CFR 178.3570 and qualify as a NSF-H1 lubricant. Please consult with lubrication manufacturer for more information.
- When making a lubrication change, check with the lubrication supplier to assure compatibility and to obtain recommended cleaning or flushing procedures.
- Do not to mix different oils with different additive packages or different base oil formulation types. Polyglycol (PG) oils are not miscible with other oil types and should never be mixed with mineral oil or polyalphaolefin (PAO) synthetic oil.

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

05.08.13

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673

www.nord.com/doc



# HELICAL & BEVEL REDUCER LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11000 - 2 of 2

Oil Cross-reference Chart

ISO Viscosity	Oil Type	Ambient Temperature Range	Mobil	Shell	Castrol	FUCHS	KLÜBER LUBRICATION
VG150	MIN-EP	0 to 25°C (32 to 77°F)	Mobilgear 600XP150	Omala 150	Alpha SP150	Renolin EP150	Klüberoil GEM 1-150N
	PAO-EP	-30 to 25 °C (-22 to 77 °F)	Mobilgear SHC150	Omala HD 150	Alphasyn EP150	Gearmaster SYN150/NA	Klübersynth EG 4-150
	PAO	-30 to 25°C (-22 to 77°F)	Mobil SHC629	Omala RL 150	Alphasyn T150	N/A	Klübersynth GEM 4-150N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	Tivela S150	Alphasyn PG150	Renolin PG150	Klübersynth GH 6-150
	FG	0 to 25°C (32 to 77°F)	Mobil DTE FM 150	N/A	N/A	N/A	N/A
	FG-PAO	-15 to 25°C (5 to 77°F)	Mobil SHC Cibus 150	N/A	N/A	Cassida GL150	Klüberoil 4 UH 1-150N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	N/A	N/A	N/A	Klübersynth UH1 6-150
VG220	MIN-EP	0 to 40°C (32 to 104°F)	Mobilgear 600XP220	Omala 220	Alpha SP220	Renolin EP220	Klüberoil GEM 1-220N
	PAO-EP	-30 to 60 °C (-22 to 140 °F)	Mobilgear SHC220	Omala HD220	Alphasyn EP220	Gearmaster SYN220/NA	Klübersynth EG 4-220
	PAO	-30 to 60°C (-22 to 140°F)	Mobil SHC630	Omala RL220	Alphasyn T220	N/A	Klübersynth GEM 4-220N
	PG	-25 to 60°C (-13 to 140°F)	Mobil Glygoyle 220	Tivela S220	Alphasyn PG220	Renolin PG220	Klübersynth GH 6-220
	FG	0 to 40°C (32 to 104°F)	Mobil DTE FM 220	N/A	N/A	Fuchs FM220	N/A
	FG-PAO	-25 to 60°C (-13 to 140°F)	Mobil SHC Cibus 220	N/A	N/A	Cassida GL220	Klüberoil 4 UH 1-220N
	FG-PG	-25 to 60°C (-13 to 140°F)	Mobil Glygoyle 220	N/A	N/A	Cassida WG220	Klübersynth UH1 6-220
VG460	MIN-EP	0 to 40°C (32 to 104°F)	Mobilgear 600XP460	Omala 460	Alpha SP460	Renolin EP460	Klüberoil GEM 1-460N
	PAO-EP	-20 to 80°C (-4 to 176°F)	Mobilgear SHC460	Omala HD460	Alphasyn EP460	Gearmaster SYN460/NA	Klübersynth EG 4-460
	PAO	-20 to 80°C (-4 to 176°F)	Mobil SHC 634	Omala RL460	Alphasyn T460	N/A	Klübersynth GEM 4-460N
	PG	-20 to 80°C (-4 to 176°F)	Mobil Glygoyle 460	Tivela S460	Alphasyn PG460	N/A	Klübersynth GH 6-460
	FG	0 to 40°C (32 to 104°F)	Mobil DTE FM460	N/A	N/A	Fuchs FM460	N/A
	FG-PAO	-20 to 80°C (-4 to 176°F)	Mobil SHC Cibus 460	N/A	N/A	Cassida GL460	Klüberoil 4 UH 1-460N
	FG-PG	-20 to 80°C (-4 to 176°F)	Mobil Glygoyle 460	N/A	N/A	Cassida WG460	Klübersynth UH1 6-460

Low-end service temperature limit may vary for a specific lubricant; Please also see the important notes on Page 1.





# HELICAL-WORM REDUCER LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11020 - 1 of 2

## Lubrication Tables – Helical Worm Gear Units

### Standard Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	PAO	0 to 60°C (32 to 140°F)	Mobil SHC636	⬇

### Optional Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG460	PAO	0 to 50°C (32 to 122°F)	Mobil SHC 634	-
	FG-PAO	0 to 50°C (32 to 122°F)	Mobil SHC Cibus 460	-

### Grease Options (applied to greased bearings and seal cavities)

NLGI Grade	Grease Type/Thickener	Ambient Temperature Range	Manufacturer Brand/Type	Notes
NLGI 2	Standard (Li-Complex)	-30 to 60°C (-22 to 140°F)	Mobil Grease XHP222	⬇
	High Temp (Polyurea)	-40 to 80°C (-40 to 176°F)	Mobil / Polyrex EP 2	⬇
	Food-Grade (Polyurea)	-30 to 40°C (-22 to 104°F)	Mobil SHC Polyrex 222	⬇

### ⬇ Stocked Lubricants



## IMPORTANT NOTES



- The “Ambient Temperature” is intended to be an operation guideline based upon the typical properties of all the lubricant. The viscosity and other properties of the lubricant change based upon load, speed, ambient conditions, and reducer operating temperatures. The user should consult with their lubrication supplier & NORD Gear before considering changes in oil type or viscosity.
- To prevent reducer overheating, observe the maximum operating oil temperature limits:  
Synthetic Oil: 105 °C (225 °F).
- In the following instances, please consult NORD for specific recommendations:
  - ✓ Gear units will operate in high ambient temperature conditions exceeding 40 °C (104 °F).
  - ✓ Gear units will operate in cold ambient temperature conditions approaching 0 °C (32 °F) or lower.
  - ✓ Lower than an ISO VG100 viscosity oil is being considered for a cold-temperature service.
  - ✓ Fluid grease is required for lubricating the gear unit.
- Observe the general lubrication guidelines outlined in user manual U10770.

### Oil Formulation Codes

PAO	-	Synthetic Polyalphaolefin Oil
PG	-	Synthetic Polyglycol Oil
FG-PAO	-	Food-Grade, Synthetic Polyalphaolefin Oil
FG-PG	-	Food-Grade, Synthetic Polyglycol Oil

### Lubrication Notes

- Avoid using (EP) gear oils in worm gears that contain sulfur-phosphorous chemistries, as these additives can react adversely with bronze worm gears and accelerate wear.
- Food grade lubricants must be in compliance with FDA 212 CFR 178.3570 and qualify as a NSF-H1 lubricant. Please consult with lubrication manufacturer for more information.
- When making a lubrication change, check with the lubrication supplier to assure compatibility and to obtain recommended cleaning or flushing procedures.
- Do not mix different oils with different additive packages or different base oil formulation types. Polyglycol (PG) oils are not miscible with other oil types and should never be mixed with mineral oil or polyalphaolefin (PAO) synthetic oil.

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673



DRIVESYSTEMS

# HELICAL-WORM REDUCER LUBRICATION TYPES



RETAIN FOR FUTURE USE

U11020 - 2 of 2

Oil Cross-reference Chart

ISO Viscosity	Oil Type	Ambient Temperature Range	Mobil	Shell	Castrol	FUCHS	KLÜBER LUBRICATION
VG 100	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC627	N/A	N/A	N/A	Klübersynth GEM 4-100N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth GH 6-100
	FG-PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC Cibus 100	N/A	N/A	N/A	Klüberoil 4 UH 1-100N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth UH1 6-100
VG150	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC629	Omala RL 150	Alphasyn T150	N/A	Klübersynth GEM 4-150N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	Tivela S150	Alphasyn PG150	Renolin PG150	Klübersynth GH 6-150
	FG-PAO	-15 to 25°C (5 to 77°F)	Mobil SHC Cibus 150	N/A	N/A	Cassida GL150	Klüberoil 4 UH 1-150N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	N/A	N/A	N/A	Klübersynth UH1 6-150
VG220	PAO	-15 to 40°C (5 to 104°F)	Mobil SHC630	Omala RL220	Alphasyn T220	N/A	Klübersynth GEM 4-220N
	PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	Tivela S220	Alphasyn PG220	Renolin PG220	Klübersynth GH 6-220
	FG-PAO	-25 to 40°C (-13 to 104°F)	Mobil SHC Cibus 220	N/A	N/A	Cassida GL220	Klüberoil 4 UH 1-220N
	FG-PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	N/A	N/A	Cassida WG220	Klübersynth UH1 6-220
VG460	PAO	0 to 50°C (32 to 122°F)	Mobil SHC 634	Omala RL460	Alphasyn T460	N/A	Klübersynth GEM 4-460N
	PG	0 to 50°C (32 to 122°F)	Mobil Glygoyle 460	Tivela S460	Alphasyn PG460	N/A	Klübersynth GH 6-460
	FG-PAO	0 to 50°C (32 to 122°F)	Mobil SHC Cibus 460	N/A	N/A	Cassida GL460	Klüberoil 4 UH 1-460N
	FG-PG	0 to 50°C (32 to 122°F)	Mobil Glygoyle 460	N/A	N/A	Cassida WG460	Klübersynth UH1 6-460
VG680	PAO	0 to 60°C (32 to 140°F)	Mobil SHC636	Omala RL680	N/A	N/A	Klübersynth GEM 4-680N
	PG	0 to 60°C (32 to 140°F)	Mobil Glygoyle 680	Tivela S680	N/A	N/A	Klübersynth GH 6-680
	FG-PAO	0 to 60°C (32 to 140°F)	N/A	N/A	N/A	Cassida GL680	Klüberoil 4 UH1-680N
	FG-PG	0 to 60°C (32 to 140°F)	Mobil Glygoyle 680	N/A	N/A	Cassida WG680	Klübersynth UH1 6-680

Low-end service temperature limit may vary for a specific lubricant; Please also see the important notes on Page 1.



# MINICASE® (SM SERIES) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11040 - 1 of 2

## Lubrication Tables – MINICASE® (SM series) Worm Gear Units

### Standard Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	PG	-20 to 40°C (-4 to 104°F)	Klübersynth GH 6-680	⬮

### Optional Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	FG-PG	-25 to 80°C (-13 to 176°F)	Klübersynth UH1 6-680	⬮

### Grease Options (applied to greased bearings and seal cavities)

NLGI Grade	Grease Type/Thickener	Ambient Temperature Range	Manufacturer Brand/Type	Notes
NLGI 2	High Temp (Polyurea)	-25 to 80°C (-13 to 176°F)	Kluber / Petamo GHY133N	⬮
	Food-Grade (Aluminum Complex)	-25 to 40°C (-13 to 104°F)	Kluber / Klübersynth UH1 14-151	⬮

### ⬮ Stocked Lubricants



## IMPORTANT NOTES



- Observe the general lubrication guidelines in User Manual U17900.
- Ambient temperature range is a guideline only. The allowed operating temperature range for the gear unit is dependent upon assembly components used, their individual temperature limits, and the actual operating conditions.
- The selected oil type and viscosity is considered appropriate for most applications utilizing the specified NORD gear unit type. Different oil types or viscosity grades may be recommended if the gear unit is exposed to frequent high load conditions or operating under extreme low or high ambient temperature conditions.
- To prevent reducer overheating, observe the maximum operating oil temperature limits:  
Synthetic oil: 105 °C (225 °F).
- Consult NORD for recommendations in the following instances:
  - ✓ The gear unit is exposed to frequent high load conditions.
  - ✓ Ambient temperature conditions exceed 40 °C (104 °F) or approach 0 °C (32 °F) or lower.
  - ✓ Fluid grease is being considered or specified for lubricating the gear unit.
  - ✓ Lower than an ISO VG100 viscosity oil is being considered for a cold-temperature service.

### Oil Formulation Codes

PAO	-	Synthetic Polyalphaolefin Oil
PG	-	Synthetic Polyglycol Oil
FG-PAO	-	Food-Grade, Synthetic Polyalphaolefin Oil
FG-PG	-	Food-Grade, Synthetic Polyglycol Oil



## WARNING



- Avoid using (EP) gear oils in worm gears that contain sulfur-phosphorous chemistries, as these additives can react adversely with bronze worm gears and accelerate wear.
- Food grade lubricants must be in compliance with FDA 212 CFR 178.3570 and qualify as a NSF-H1 lubricant. Please consult with lubrication manufacturer for more information.
- When making a lubrication change, check with the lubrication supplier to assure compatibility and to obtain recommended cleaning or flushing procedures.
- Do not mix different oils with different additive packages or different base oil formulation types. Polyglycol (PG) oils are not miscible with other oil types and should never be mixed with mineral or polyalphaolefin (PAO) oils.

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673



# MINICASE® (SM SERIES) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11040 - 2 of 2

Oil Cross-reference Chart

ISO Viscosity	Oil Type	Ambient Temperature Range	Mobil	Shell	Castrol	FUCHS	KLÜBER LUBRICATION
VG 100	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC627	N/A	N/A	N/A	Klübersynth GEM 4-100N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth GH 6-100
	FG-PAO	-30 to 25°C (-22 to 77°F)	Mobil SHC Cibus 100	N/A	N/A	N/A	Klüberoil 4 UH 1-100N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth UH1 6-100
VG150	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC629	Omala RL 150	Alphasyn T150	N/A	Klübersynth GEM 4-150N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	Tivela S150	Alphasyn PG150	Renolin PG150	Klübersynth GH 6-150
	FG-PAO	-15 to 25°C (5 to 77°F)	Mobil SHC Cibus 150	N/A	N/A	Cassida GL150	Klüberoil 4 UH 1-150N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	N/A	N/A	N/A	Klübersynth UH1 6-150
VG220	PAO	-35 to 40°C (-31 to 104°F)	Mobil SHC630	Omala RL220	Alphasyn T220	N/A	Klübersynth GEM 4-220N
	PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	Tivela S220	Alphasyn PG220	Renolin PG220	Klübersynth GH 6-220
	FG-PAO	-25 to 40°C (-13 to 104°F)	Mobil SHC Cibus 220	N/A	N/A	Cassida GL220	Klüberoil 4 UH 1-220N
	FG-PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	N/A	N/A	Cassida WG220	Klübersynth UH1 6-220
VG460	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC 634	Omala RL460	Alphasyn T460	N/A	Klübersynth GEM 4-460N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 460	Tivela S460	Alphasyn PG460	N/A	Klübersynth GH 6-460
	FG-PAO	-5 to 40°C (23 to 104°F)	Mobil SHC Cibus 460	N/A	N/A	Cassida GL460	Klüberoil 4 UH 1-460N
	FG-PG	-5 to 40°C (23 to 104°F)	Mobil Glygoyle 460	N/A	N/A	Cassida WG460	Klübersynth UH1 6-460
VG680	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC636	Omala RL680	N/A	N/A	Klübersynth GEM 4-680N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 680	Tivela S680	N/A	N/A	Klübersynth GH 6-680
	FG-PAO	-5 to 40°C (23 to 104°F)	N/A	N/A	N/A	Cassida GL680	Klüberoil 4 UH1-680N
	FG-PG	-25 to 80°C (-13 to 176°F)	Mobil Glygoyle 680	N/A	N/A	Cassida WG680	Klübersynth UH1 6-680

Low-end service temperature limit may vary for a specific lubricant; Please also see the important notes on Page 1.



# MINICASE® (SMI/SMID) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11050 - 1 of 2

## Lubrication Tables – MINICASE® (SMI/SMID series) Worm Gear Units

### Standard Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	PG	-20 to 40°C (-4 to 104°F)	Klübersynth GH 6-680	⬇

### Optional Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	FG-PG	-25 to 80°C (-13 to 176°F)	Klübersynth UH1 14-151	⬇

### Grease Options (applied to greased bearings and seal cavities)

NLGI Grade	Grease Type/Thickener	Ambient Temperature Range	Manufacturer Brand/Type	Notes
NLGI 2	High Temp (Polyurea)	-25 to 80°C (-13 to 176°F)	Kluber / Petamo GHY133N	⬇
	Food-Grade (Aluminum Complex)	-25 to 40°C (-13 to 104°F)	Kluber / Klübersynth UH1 14-151	⬇

### ⬇ Stocked Lubricants



## IMPORTANT NOTES



- Observe the general lubrication guidelines in User Manual U10800.
- Ambient temperature range is a guideline only. The allowed operating temperature range for the gear unit is dependent upon assembly components used, their individual temperature limits, and the actual operating conditions.
- The selected oil type and viscosity is considered appropriate for most applications utilizing the specified NORD gear unit type. Different oil types or viscosity grades may be recommended if the gear unit is exposed to frequent high load conditions or operating under extreme low or high ambient temperature conditions.
- To prevent reducer overheating, observe the maximum operating oil temperature limits:  
Synthetic oil: 105 °C (225 °F).
- Consult NORD for recommendations in the following instances:
  - ✓ The gear unit is exposed to frequent high load conditions.
  - ✓ Ambient temperature conditions exceed 40 °C (104 °F) or approach 0 °C (32 °F) or lower.
  - ✓ Fluid grease is being considered or specified for lubricating the gear unit.
  - ✓ Lower than an ISO VG100 viscosity oil is being considered for a cold-temperature service.

### Oil Formulation Codes

PAO	-	Synthetic Polyalphaolefin Oil
PG	-	Synthetic Polyglycol Oil
FG-PAO	-	Food-Grade, Synthetic Polyalphaolefin Oil
FG-PG	-	Food-Grade, Synthetic Polyglycol Oil



## WARNING



- Avoid using (EP) gear oils in worm gears that contain sulfur-phosphorous chemistries, as these additives can react adversely with bronze worm gears and accelerate wear.
- Food grade lubricants must be in compliance with FDA 212 CFR 178.3570 and qualify as a NSF-H1 lubricant. Please consult with lubrication manufacturer for more information.
- When making a lubrication change, check with the lubrication supplier to assure compatibility and to obtain recommended cleaning or flushing procedures.
- Do not mix different oils with different additive packages or different base oil formulation types. Polyglycol (PG) oils are not miscible with other oil types and should never be mixed with mineral or polyalphaolefin (PAO) oils.



# MINICASE® (SMI/SMID) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11050 - 2 of 2

Oil Cross-reference Chart

ISO Viscosity	Oil Type	Ambient Temperature Range	Mobil	Shell	Castrol	FUCHS	KLÜBER LUBRICATION
VG 100	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC627	N/A	N/A	N/A	Klübersynth GEM 4-100N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth GH 6-100
	FG-PAO	-30 to 25°C (-22 to 77°F)	Mobil SHC Cibus 100	N/A	N/A	N/A	Klüberoil 4 UH 1-100N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth UH1 6-100
VG150	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC629	Omala RL 150	Alphasyn T150	N/A	Klübersynth GEM 4-150N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	Tivela S150	Alphasyn PG150	Renolin PG150	Klübersynth GH 6-150
	FG-PAO	-15 to 25°C (5 to 77°F)	Mobil SHC Cibus 150	N/A	N/A	Cassida GL150	Klüberoil 4 UH 1-150N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	N/A	N/A	N/A	Klübersynth UH1 6-150
VG220	PAO	-35 to 40°C (-31 to 104°F)	Mobil SHC630	Omala RL220	Alphasyn T220	N/A	Klübersynth GEM 4-220N
	PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	Tivela S220	Alphasyn PG220	Renolin PG220	Klübersynth GH 6-220
	FG-PAO	-25 to 40°C (-13 to 104°F)	Mobil SHC Cibus 220	N/A	N/A	Cassida GL220	Klüberoil 4 UH 1-220N
	FG-PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	N/A	N/A	Cassida WG220	Klübersynth UH1 6-220
VG460	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC 634	Omala RL460	Alphasyn T460	N/A	Klübersynth GEM 4-460N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 460	Tivela S460	Alphasyn PG460	N/A	Klübersynth GH 6-460
	FG-PAO	-5 to 40°C (23 to 104°F)	Mobil SHC Cibus 460	N/A	N/A	Cassida GL460	Klüberoil 4 UH 1-460N
	FG-PG	-5 to 40°C (23 to 104°F)	Mobil Glygoyle 460	N/A	N/A	Cassida WG460	Klübersynth UH1 6-460
VG680	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC636	Omala RL680	N/A	N/A	Klübersynth GEM 4-680N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 680	Tivela S680	N/A	N/A	Klübersynth GH 6-680
	FG-PAO	-5 to 40°C (23 to 104°F)	N/A	N/A	N/A	Cassida GL680	Klüberoil 4 UH1-680N
	FG-PG	-25 to 80°C (-13 to 176°F)	Mobil Glygoyle 680	N/A	N/A	Cassida WG680	Klübersynth UH1 14-151

Low-end service temperature limit may vary for a specific lubricant; Please also see the important notes on Page 1.





# FLEXBLOC™ (SI/SID SERIES) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11060 - 1 of 2

## Lubrication Tables – FLEXBLOC™ (SI/SID Series) Worm Gear Units

### Standard Oil Lubricants

NORD uses a semi automated assembly process to produce the FLEXBLOC™ gear unit assemblies. During this process the gear units are factory filled in accordance with the following table.

#### Standard Oil Lubricants

ISO Viscosity	Oil Type	Ambient Temperature Range	Manufacturer Brand/Type	Notes
VG680	FG-PG	-25 to 80°C (-13 to 176°F)	Klübersynth UH1 6-680	Inch
	PG	-20 to 40°C (-4 to 104°F)	Klübersynth GH 6-680	Metric
VG220	FG-PG	-25 to 40°C (-13 to 104°F)	Klübersynth UH1 6-220	Inch
	PG	-25 to 40°C (-13 to 104°F)	Klübersynth GH 6-220	Metric

#### Grease Options (applied to greased bearings and seal cavities)

NLGI Grade	Grease Type/Thickener	Ambient Temperature Range	Manufacturer Brand/Type	Notes
NLGI 2	High Temp (Polyurea)	-25 to 80°C (-13 to 176°F)	Kluber / Petamo GHY133N	⬆
	Food-Grade (Aluminum Complex)	-25 to 40°C (-13 to 104°F)	Kluber / Klübersynth UH1 14-151	⬆

#### ⬆ Stocked Lubricants



### IMPORTANT NOTES



- Observe the general lubrication guidelines in User Manual U10800.
- Ambient temperature range is a guideline only. The allowed operating temperature range for the gear unit is dependent upon assembly components used, their individual temperature limits, and the actual operating conditions.
- The selected oil type and viscosity is considered appropriate for most applications utilizing the specified NORD gear unit type. Different oil types or viscosity grades may be recommended if the gear unit is exposed to frequent high load conditions or operating under extreme low or high ambient temperature conditions.
- To prevent reducer overheating, observe the maximum operating oil temperature limits:  
Synthetic oil: 105 °C (225 °F).
- Consult NORD for recommendations in the following instances:
  - ✓ The gear unit is exposed to frequent high load conditions.
  - ✓ Ambient temperature conditions exceed 40 °C (104 °F) or approach 0 °C (32 °F) or lower.
  - ✓ Fluid grease is being considered or specified for lubricating the gear unit.
  - ✓ Lower than an ISO VG100 viscosity oil is being considered for a cold-temperature service.

### Oil Formulation Codes

- PAO - Synthetic Polyalphaolefin Oil
- PG - Synthetic Polyglycol Oil
- FG-PAO - Food-Grade, Synthetic Polyalphaolefin Oil
- FG-PG - Food-Grade, Synthetic Polyglycol Oil



### WARNING



- Avoid using (EP) gear oils in worm gears that contain sulfur-phosphorous chemistries, as these additives can react adversely with bronze worm gears and accelerate wear.
- Food grade lubricants must be in compliance with FDA 212 CFR 178.3570 and qualify as a NSF-H1 lubricant. Please consult with lubrication manufacturer for more information.
- When making a lubrication change, check with the lubrication supplier to assure compatibility and to obtain recommended cleaning or flushing procedures.
- Do not mix different oils with different additive packages or different base oil formulation types. Polyglycol (PG) oils are not miscible with other oil types and should never be mixed with mineral or polyalphaolefin (PAO) oils.

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

02.03.15

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673

www.nord.com/docs



# FLEXBLOC™ (SI/SID SERIES) WORM GEAR LUBRICATION TYPES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U11060 - 2 of 2

Oil Cross-reference Chart

ISO Viscosity	Oil Type	Ambient Temperature Range	Mobil	Shell	Castrol	FUCHS	KLÜBER LUBRICATION
VG 100	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC627	N/A	N/A	N/A	Klübersynth GEM 4-100N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth GH 6-100
	FG-PAO	-30 to 25°C (-22 to 77°F)	Mobil SHC Cibus 100	N/A	N/A	N/A	Klüberoil 4 UH 1-100N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 100	N/A	N/A	N/A	Klübersynth UH1 6-100
VG150	PAO	-35 to 25°C (-31 to 77°F)	Mobil SHC629	Omala RL 150	Alphasyn T150	N/A	Klübersynth GEM 4-150N
	PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	Tivela S150	Alphasyn PG150	Renolin PG150	Klübersynth GH 6-150
	FG-PAO	-15 to 25°C (5 to 77°F)	Mobil SHC Cibus 150	N/A	N/A	Cassida GL150	Klüberoil 4 UH 1-150N
	FG-PG	-25 to 25°C (-13 to 77°F)	Mobil Glygoyle 150	N/A	N/A	N/A	Klübersynth UH1 6-150
VG220	PAO	-35 to 40°C (-31 to 104°F)	Mobil SHC630	Omala RL220	Alphasyn T220	N/A	Klübersynth GEM 4-220N
	PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	Tivela S220	Alphasyn PG220	Renolin PG220	Klübersynth GH 6-220
	FG-PAO	-25 to 40°C (-13 to 104°F)	Mobil SHC Cibus 220	N/A	N/A	Cassida GL220	Klüberoil 4 UH 1-220N
	FG-PG	-25 to 40°C (-13 to 104°F)	Mobil Glygoyle 220	N/A	N/A	Cassida WG220	Klübersynth UH1 6-220
VG460	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC 634	Omala RL460	Alphasyn T460	N/A	Klübersynth GEM 4-460N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 460	Tivela S460	Alphasyn PG460	N/A	Klübersynth GH 6-460
	FG-PAO	-5 to 40°C (23 to 104°F)	Mobil SHC Cibus 460	N/A	N/A	Cassida GL460	Klüberoil 4 UH 1-460N
	FG-PG	-5 to 40°C (23 to 104°F)	Mobil Glygoyle 460	N/A	N/A	Cassida WG460	Klübersynth UH1 6-460
VG680	PAO	-20 to 40°C (-4 to 104°F)	Mobil SHC636	Omala RL680	N/A	N/A	Klübersynth GEM 4-680N
	PG	-20 to 40°C (-4 to 104°F)	Mobil Glygoyle 680	Tivela S680	N/A	N/A	Klübersynth GH 6-680
	FG-PAO	-5 to 40°C (23 to 104°F)	N/A	N/A	N/A	Cassida GL680	Klüberoil 4 UH1-680N
	FG-PG	-25 to 80°C (-13 to 176°F)	Mobil Glygoyle 680	N/A	N/A	Cassida WG680	Klübersynth UH1 6-680

Low-end service temperature limit may vary for a specific lubricant; Please also see the important notes on Page 1.





DRIVESYSTEMS

# STANDARD IN-LINE FOOTED OIL FILL QUANTITIES



RETAIN FOR FUTURE USE

U11500 - 1 of 1

## Standard In-line footed lubrication


All Standard In-line reducers are shipped from NORD with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. When filling these gear units the oil must be measured and added until one establishes the proper fill quantity. For additional information please refer to the "Oil & vent plug locations" documentation for your specified gear unit



### HARMFUL SITUATION



For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

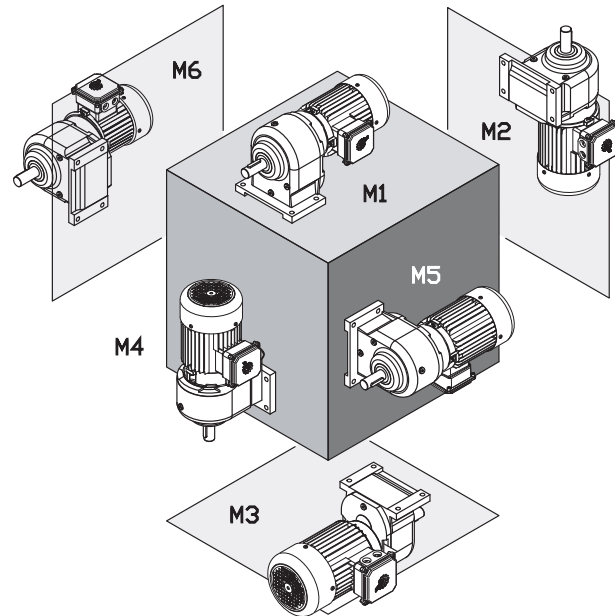

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK0 / SK05	0.14	0.13	0.23	0.22	0.14	0.13	0.23	0.22	0.14	0.13	0.14	0.13
SK000	0.25	0.24	0.42	0.40	0.25	0.24	0.42	0.40	0.25	0.24	0.25	0.24
SK01 / SK015	0.23	0.22	0.40	0.38	0.23	0.22	0.40	0.38	0.23	0.22	0.23	0.22
SK010 / SK0105	0.40	0.38	0.63	0.60	0.40	0.38	0.63	0.60	0.40	0.38	0.40	0.38
SK20 / SK205	0.58	0.55	1.06	1.00	0.58	0.55	1.06	1.00	0.58	0.55	0.58	0.55
SK200 / SK2005	0.85	0.80	1.37	1.30	0.85	0.80	1.37	1.30	0.85	0.80	0.85	0.80
SK25 / SK255	0.53	0.50	1.06	1.00	0.53	0.50	1.06	1.00	0.53	0.50	0.53	0.50
SK250 / SK2505	1.27	1.20	1.59	1.50	1.27	1.20	1.59	1.50	1.27	1.20	1.27	1.20
SK30 / SK305	0.95	0.90	1.37	1.30	0.95	0.90	1.37	1.30	0.95	0.90	0.95	0.90
SK300 / SK3005	1.27	1.20	2.11	2.00	1.27	1.20	2.11	2.00	1.27	1.20	1.27	1.20
SK33 / SK335	1.06	1.00	1.69	1.60	1.06	1.00	1.69	1.60	1.06	1.00	1.06	1.00
SK330 / SK3305	1.90	1.80	2.96	2.80	1.90	1.80	2.96	2.80	1.90	1.80	1.90	1.80



# STANDARD IN-LINE FLANGED OIL FILL QUANTITIES



## Standard In-line flanged lubrication


All Standard In-line reducers are shipped from NORD with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. When filling these gear units the oil must be measured and added until one establishes the proper fill quantity. For additional information please refer to the "Oil & vent plug locations" documentation for your specified gear unit



### HARMFUL SITUATION



For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

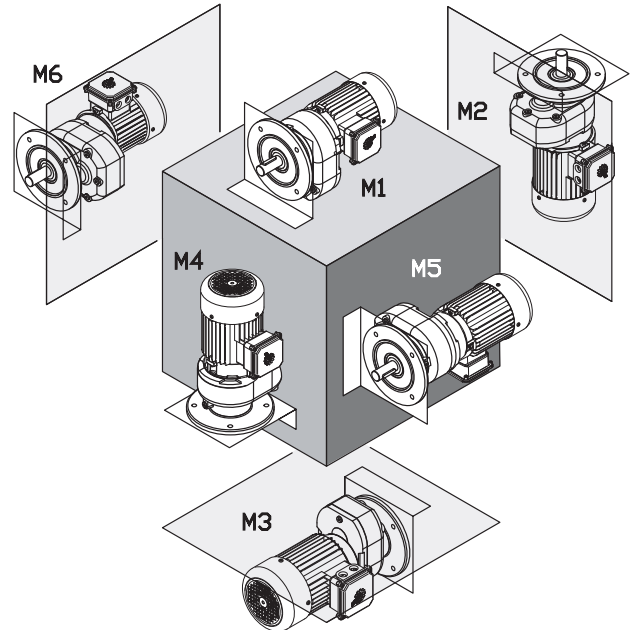

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK0 F / SK05 F	0.14	0.13	0.23	0.22	0.14	0.13	0.23	0.22	0.14	0.13	0.14	0.13
SK000 F	0.25	0.24	0.43	0.41	0.25	0.24	0.43	0.41	0.25	0.24	0.25	0.24
SK01 F	0.23	0.22	0.40	0.38	0.23	0.22	0.40	0.38	0.23	0.22	0.23	0.22
SK010 F / SK0105 F	0.37	0.35	0.69	0.65	0.37	0.35	0.78	0.74	0.37	0.35	0.37	0.35
SK20 F	0.37	0.35	0.63	0.60	0.37	0.35	0.63	0.60	0.37	0.35	0.37	0.35
SK200 F / SK2005 F	0.69	0.65	1.00	0.95	0.69	0.65	1.16	1.10	0.69	0.65	0.69	0.65
SK25 F	0.53	0.50	1.06	1.00	0.53	0.50	1.06	1.00	0.53	0.50	0.53	0.50
SK250 F / SK2505 F	0.95	0.90	1.48	1.40	0.95	0.90	1.69	1.60	0.95	0.90	0.95	0.90
SK30 F	0.74	0.70	1.16	1.10	0.74	0.70	1.16	1.10	0.74	0.70	0.74	0.70
SK300 F / SK3005 F	1.32	1.25	1.59	1.50	1.32	1.25	1.90	1.80	1.32	1.25	1.32	1.25
SK33 F / SK335F	1.06	1.00	1.59	1.50	1.06	1.00	1.59	1.50	1.06	1.00	1.06	1.00
SK330 F / SK3305 F	1.69	1.60	2.64	2.50	1.69	1.60	3.06	2.90	1.69	1.60	1.69	1.60



DRIVESYSTEMS

# HELICAL IN-LINE FOOTED OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U11700 - 1 of 1

## Helical In-line footed lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

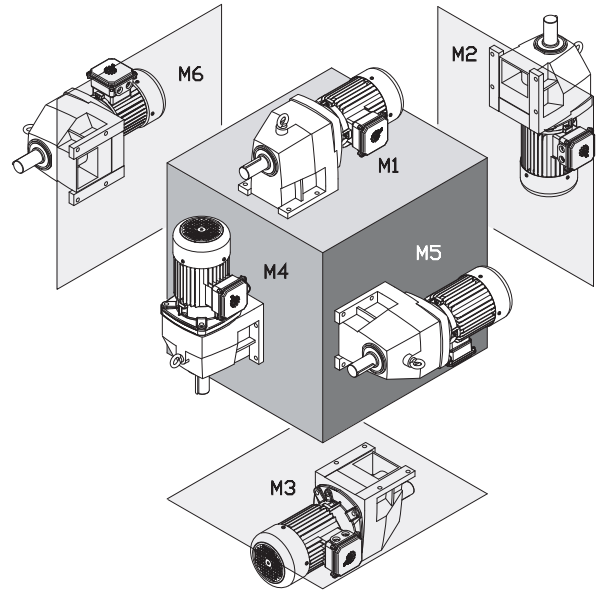

**STOP**
**HARMFUL SITUATION**
**STOP**

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK02	0.21	0.20	0.79	0.75	0.79	0.75	0.69	0.65	0.63	0.60	0.63	0.60
SK 03	0.37	0.35	1.27	1.20	0.85	0.80	1.06	1.00	0.74	0.70	0.74	0.70
SK11E	0.26	0.25	0.53	0.50	0.69	0.65	0.53	0.50	0.42	0.40	0.42	0.40
SK12	0.26	0.25	0.85	0.80	0.90	0.85	0.79	0.75	0.58	0.55	0.58	0.55
SK 13	0.79	0.75	1.37	1.30	1.37	1.30	1.27	1.20	0.79	0.75	0.79	0.75
SK21E	0.63	0.60	1.27	1.20	1.37	1.30	1.06	1.00	1.06	1.00	1.06	1.00
SK22	0.53	0.50	2.01	1.90	2.22	2.10	1.90	1.80	1.48	1.40	1.48	1.40
SK 23	1.27	1.20	2.11	2.00	2.01	1.90	2.54	2.40	1.69	1.60	1.69	1.60
SK31E	1.16	1.10	2.11	2.00	2.32	2.20	1.80	1.70	1.59	1.50	1.59	1.50
SK32	0.95	0.90	2.64	2.50	3.28	3.10	3.28	3.10	2.11	2.00	2.11	2.00
SK 33N	1.85	1.75	3.17	3.00	3.59	3.40	4.23	4.00	2.43	2.30	2.43	2.30
SK41E	1.69	1.60	2.75	2.60	3.49	3.30	2.96	2.80	2.43	2.30	2.43	2.30
SK42	1.48	1.40	4.76	4.50	4.76	4.50	4.54	4.30	3.38	3.20	3.38	3.20
SK 43	3.17	3.00	5.92	5.60	5.49	5.20	6.97	6.60	3.80	3.60	3.80	3.60
SK51E	1.90	1.80	3.70	3.50	4.33	4.10	4.23	4.00	4.02	3.80	4.02	3.80
SK52	2.64	2.50	7.40	7.00	7.19	6.80	7.19	6.80	5.39	5.10	5.39	5.10
SK 53	4.76	4.50	9.19	8.70	8.14	7.70	9.19	8.70	6.34	6.00	6.34	6.00
SK62	6.87	6.50	15.9	15.0	13.7	13.0	16.9	16.0	15.9	15.0	15.9	15.0
SK 63	13.7	13.0	15.3	14.5	15.3	14.5	16.9	16.0	13.7	13.0	13.7	13.0
SK72	10.6	10.0	24.3	23.0	19.0	18.0	27.5	26.0	24.3	23.0	24.3	23.0
SK 73	21.7	20.5	21.1	20.0	23.8	22.5	28.5	27.0	21.1	20.0	21.1	20.0
SK82	14.8	14.0	37.0	35.0	28.5	27.0	46.5	44.0	33.8	32.0	33.8	32.0
SK 83	31.7	30.0	32.8	31.0	35.9	34.0	39.1	37.0	34.9	33.0	34.9	33.0
SK92	26.4	25.0	77.0	73.0	49.7	47.0	80.0	76.0	55.0	52.0	55.0	52.0
SK 93	56.0	53.0	74.0	70.0	62.0	59.0	76.0	72.0	52.0	49.0	52.0	49.0
SK102	38.0	36.0	84.0	79.0	70.0	66.0	108	102	75.0	71.0	75.0	71.0
SK 103	78.0	74.0	75.0	71.0	78.0	74.0	102	97.0	71.0	67.0	71.0	67.0



DRIVESYSTEMS

# HELICAL IN-LINE FLANGED OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U11800 - 1 of 1

## Helical In-line flanged lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

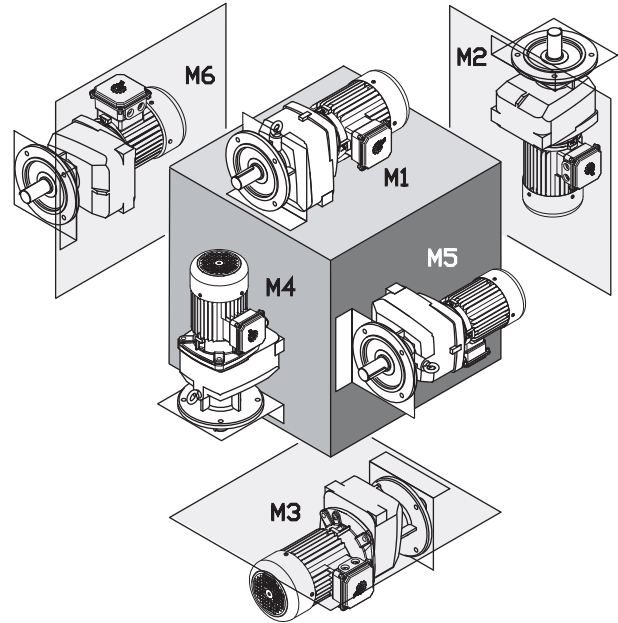

### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK02F	0.26	0.25	0.74	0.70	0.74	0.70	0.74	0.70	0.53	0.50	0.53	0.50
SK 03 F	0.58	0.55	1.00	0.95	0.95	0.90	1.27	1.20	0.95	0.90	0.95	0.90
SK11E F	0.32	0.30	0.53	0.50	0.53	0.50	0.48	0.45	0.42	0.40	0.42	0.40
SK12F	0.37	0.35	0.90	0.85	0.95	0.90	0.95	0.90	0.74	0.70	0.74	0.70
SK 13 F	1.06	1.00	1.37	1.30	1.37	1.30	1.27	1.20	1.06	1.00	1.06	1.00
SK21E F	0.53	0.50	1.27	1.20	1.37	1.30	0.63	0.60	0.95	0.90	0.95	0.90
SK22F	0.74	0.70	1.90	1.80	1.90	1.80	1.90	1.80	1.48	1.40	1.48	1.40
SK 23 F	1.48	1.40	2.75	2.60	2.43	2.30	2.96	2.80	2.96	2.80	2.96	2.80
SK31E F	0.95	0.90	1.90	1.80	1.74	1.65	1.37	1.30	1.32	1.25	1.32	1.25
SK32F	1.27	1.20	2.96	2.80	3.28	3.10	3.28	3.10	2.32	2.20	2.32	2.20
SK 33N F	2.32	2.20	3.17	3.00	3.59	3.40	4.44	4.20	2.43	2.30	2.43	2.30
SK41E F	1.27	1.20	2.43	2.30	2.85	2.70	2.11	2.00	2.01	1.90	2.01	1.90
SK42F	1.90	1.80	4.65	4.40	4.76	4.50	4.23	4.00	3.91	3.70	3.91	3.70
SK 43 F	3.70	3.50	6.02	5.70	5.28	5.00	6.45	6.10	4.33	4.10	4.33	4.10
SK51E F	1.90	1.80	3.70	3.50	4.33	4.10	3.17	3.00	4.02	3.80	4.02	3.80
SK52F	3.17	3.00	7.19	6.80	6.55	6.20	7.82	7.40	5.92	5.60	5.92	5.60
SK 53 F	5.49	5.20	8.88	8.40	7.40	7.00	9.40	8.90	7.08	6.70	7.08	6.70
SK 62 F	7.40	7.00	15.9	15.0	14.8	14.0	19.5	18.5	16.9	16.0	16.9	16.0
SK 63 F	14.3	13.5	14.8	14.0	16.4	15.5	19.0	18.0	14.8	14.0	14.8	14.0
SK 72 F	10.6	10.0	24.3	23.0	19.5	18.5	29.6	28.0	24.3	23.0	24.3	23.0
SK 73 F	23.2	22.0	23.8	22.5	24.3	23.0	29.1	27.5	21.1	20.0	21.1	20.0
SK 82 F	15.9	15.0	39.1	37.0	30.6	29.0	47.6	45.0	36.5	34.5	36.5	34.5
SK 83 F	32.8	31.0	35.9	34.0	37.0	35.0	42.3	40.0	35.9	34.0	35.9	34.0
SK 92 F	27.5	26.0	77.0	73.0	49.7	47.0	82.0	78.0	55.0	52.0	55.0	52.0
SK 93 F	56.0	53.0	74.0	70.0	62.0	59.0	78.0	74.0	52.0	49.0	52.0	49.0
SK 102 F	42.3	40.0	86.0	81.0	70.0	66.0	110	104	76.0	72.0	76.0	72.0
SK 103 F	73.0	69.0	82.0	78.0	82.0	78.0	105	99.0	71.0	67.0	71.0	67.0



DRIVESYSTEMS

# CLINCHER™ OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U11900 - 1 of 1

## CLINCHER™ Lubrication

Unless otherwise noted below, the following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

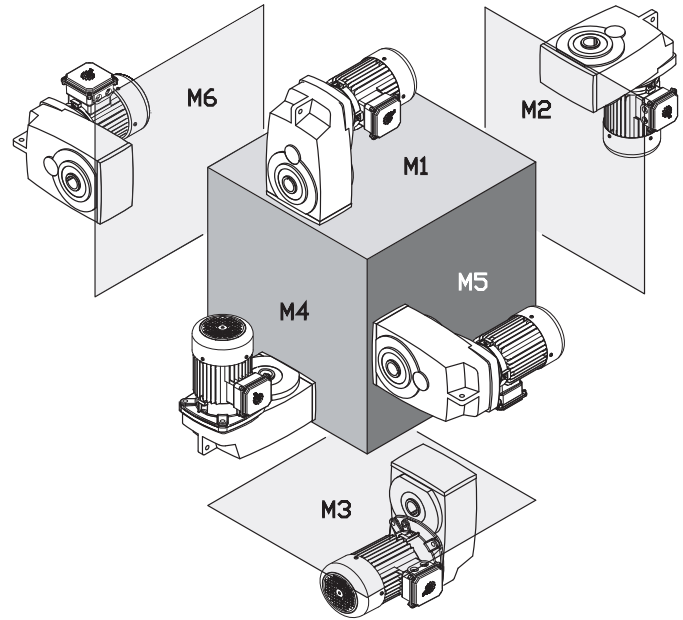

**STOP**
**HARMFUL SITUATION**
**STOP**

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 0182NB	0.42	0.40	0.58	0.55	0.58	0.55	0.42	0.40	0.42	0.40	0.42	0.40
SK 0282NB	0.74	0.70	1.16	1.10	0.85	0.80	1.16	1.10	0.95	0.90	0.95	0.90
SK 1282	1.00	0.95	1.37	1.30	0.95	0.90	1.37	1.30	1.06	1.00	1.06	1.00
SK 1382NB	1.48	1.40	2.43	2.30	2.32	2.20	2.32	2.20	2.11	2.00	2.11	2.00
SK 1382	1.53	1.45	1.69	1.60	1.22	1.15	1.80	1.70	1.16	1.10	1.16	1.10
SK 2282	1.80	1.70	2.43	2.30	1.80	1.70	2.32	2.20	2.01	1.90	2.01	1.90
SK 2382	2.43	2.30	2.85	2.70	2.22	2.10	3.38	3.20	2.11	2.00	2.11	2.00
SK 3282	2.96	2.80	4.23	4.00	3.49	3.30	4.02	3.80	3.17	3.00	3.17	3.00
SK 3382	4.02	3.80	4.54	4.30	3.17	3.00	5.81	5.50	3.17	3.00	3.17	3.00
SK 4282	4.44	4.20	5.71	5.40	4.65	4.40	5.28	5.00	4.44	4.20	4.44	4.20
SK 4382	6.45	6.10	7.29	6.90	5.18	4.90	8.88	8.40	5.28	5.00	5.28	5.00
SK 5282	7.93	7.50	9.30	8.80	7.93	7.50	9.30	8.80	7.61	7.20	7.61	7.20
SK 5382	13.2	12.5	12.7	12.0	7.08	6.70	14.8	14.0	8.77	8.30	8.77	8.30
SK 6282	18.0	17.0	16.4	15.5	13.2	12.5	18.5	17.5	11.6	11.0	14.8	14.0
SK 6382	16.9	16.0	13.7	13.0	10.6	10.0	19.0	18.0	14.8	14.0	13.2	12.5
SK 7282	26.9	25.5	22.2	21.0	21.7	20.5	28.5	27.0	16.9	16.0	22.2	21.0
SK 7382	23.2	22.0	22.2	21.0	16.9	16.0	26.4	25.0	24.3	23.0	23.2	22.0
SK 8282	39.6	37.5	34.9	33.0	32.2	30.5	46.5	44.0	32.8	31.0	32.8	31.0
SK 8382	36.5	34.5	34.3	32.5	26.4	25.0	40.2	38.0	37.0	35.0	31.7	30.0
SK 9282	79.0	75.0	74.0	70.0	59.0	56.0	85.0 †	80.0 †	69.0	65.0	62.0	59.0
SK 9382	78.0	74.0	74.0	70.0	45.4	43.0	79.0 †	75.0 †	69.0	65.0	63.0	60.0
SK 10282	95.0	90.0	95.0	90.0	42.3	40.0	95.0 †	90.0 †	63.0	60.0	87.0	82.0
SK 10382	90.0	85.0	95.0	90.0	77.0	73.0	106 †	100 †	85	80.0	85.0	80.0
SK 11282*	174	165	169	160	153	145	206 †	195 †	106	100	148	140
SK 11382*	169	160	164	155	148	140	222 †	210 †	164	155	143	135
SK 12382*	169	160	164	155	148	140	222 †	210 †	164	155	143	135

\* For shipping purposes the larger Clincher™ gear units are supplied without oil.

† Oil quantities shown are for the gearbox only. When the OT (oil tank) option is used, the oil must be filled to the level shown on the dipstick which is located inside of the oil tank. Even when the gear unit is filled by NORD, the user MUST add more oil until the oil is filled to the proper level.



DRIVESYSTEMS

# 90.1 HELICAL-BEVEL FOOTED OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U12000 - 1 of 1

## 90.1 Helical-bevel footed lubrication

Unless otherwise noted below, the following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

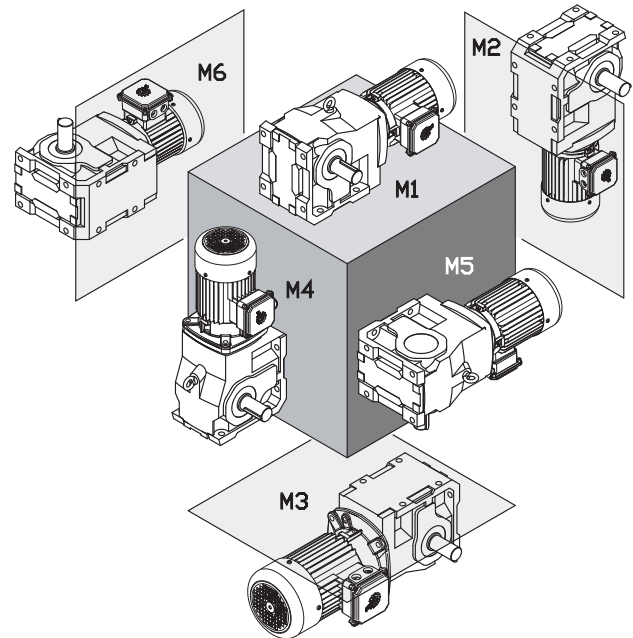

### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add addition oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 9012.1	0.74	0.70	1.80	1.70	2.01	1.90	2.22	2.10	1.16	1.10	1.59	1.50
SK 9013.1	1.43	1.35	2.22	2.10	2.27	2.15	2.91	2.75	1.06	1.00	1.90	1.80
SK 9016.1	0.74	0.70	1.80	1.70	2.01	1.90	2.22	2.10	1.16	1.10	1.59	1.50
SK 9017.1	1.37	1.30	2.11	2.00	2.22	2.10	2.85	2.70	1.06	1.00	1.80	1.70
SK 9022.1	1.37	1.30	3.06	2.90	3.49	3.30	4.02	3.80	1.80	1.70	2.96	2.80
SK 9023.1	2.32	2.20	3.38	3.20	3.80	3.60	4.97	4.70	2.32	2.20	3.06	2.90
SK 9032.1	1.90	1.80	5.71	5.40	6.45	6.10	7.19	6.80	3.17	3.00	4.86	4.60
SK 9033.1	3.28	3.10	6.02	5.70	6.66	6.30	8.45	8.00	3.59	3.40	5.07	4.80
SK 9042.1	2.85	2.70	9.51	9.00	10.6	10.0	11.3	10.7	5.49	5.20	8.14	7.70
SK 9043.1	5.28	5.00	10.7	10.1	11.6	11.0	14.1	13.3	6.02	5.70	8.56	8.10
SK 9052.1	6.87	6.50	16.9	16.0	20.1	19.0	22.7	21.5	11.6	11.0	16.4	15.5
SK 9053.1	10.6	10.0	18.0	17.0	21.1	20.0	25.9	24.5	12.2	11.5	17.4	16.5
SK 9062.1	10.6	10.0	29.1	27.5	33.8	32.0	38.0	36.0	19.0	18.0	25.4	24.0
SK 9072.1	10.6	10.0	29.1	27.5	33.8	32.0	38.0	36.0	19.0	18.0	25.4	24.0
SK 9082.1	18.0	17.0	54.0	52.0	66.0	63.0	76.0	72.0	34.9	33.0	49.1	46.5
SK 9086.1	30.6	29.0	77.0	73.0	90.0	85.0	108	102	51.0	48.0	66.0	62.0
SK 9092.1	43.3	41.0	166	157	180	170	182	172	85.0	80.0	95.0	90.0
SK 9096.1	74.0	70.0	198	187	205	194	268	254	115	109	161	152

Oil Levels shown apply to base models and gear units ending in LX, AX, & VX.





# 90.1 HELICAL-BEVEL FLANGED OIL FILL QUANTITIES




DRIVESYSTEMS

RETAIN FOR FUTURE USE

U12100 - 1 of 1

## 90.1 Helical-bevel flanged lubrication

Unless otherwise noted below, the following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

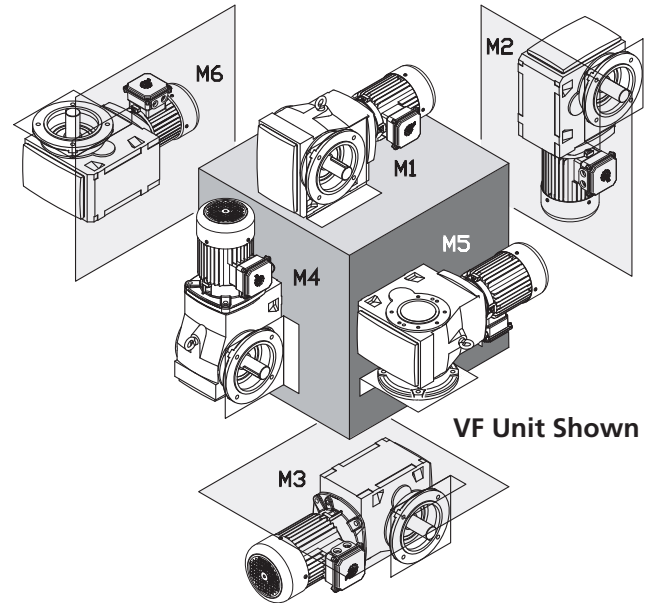

### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add addition oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 9012.1	1.06	1.00	2.01	1.90	2.01	1.90	2.32	2.20	1.27	1.20	1.80	1.70
SK 9013.1	1.53	1.45	2.43	2.30	2.22	2.10	2.96	2.80	1.11	1.05	1.90	1.80
SK 9016.1	1.06	1.00	2.01	1.90	2.01	1.90	2.32	2.20	1.27	1.20	1.80	1.70
SK 9017.1	1.53	1.45	2.43	2.30	2.22	2.10	2.96	2.80	1.11	1.05	1.90	1.80
SK 9022.1	1.69	1.60	3.70	3.50	3.70	3.50	4.44	4.20	2.43	2.30	2.96	2.80
SK 9023.1	2.43	2.30	3.70	3.50	4.02	3.80	5.60	5.30	2.32	2.20	3.59	3.40
SK 9032.1	2.22	2.10	5.07	4.80	6.76	6.40	7.50	7.10	3.49	3.30	5.39	5.10
SK 9033.1	3.91	3.70	6.02	5.70	7.08	6.70	9.09	8.60	3.80	3.60	5.60	5.30
SK 9042.1	4.76	4.50	10.6	10.0	10.6	10.0	12.2	11.5	6.87	6.50	8.66	8.20
SK 9043.1	6.87	6.50	11.1	10.5	12.6	11.9	15.5	14.7	7.08	6.70	9.83	9.30
SK 9052.1	7.93	7.50	17.4	16.5	21.1	20.0	24.8	23.5	12.2	11.5	19.0	18.0
SK 9053.1	13.7	13.0	19.0	18.0	22.7	21.5	28.0	26.5	13.7	13.0	18.0	17.0
SK 9062.1	12.7	12.0	29.1	27.5	34.9	33.0	40.7	38.5	20.1	19.0	27.5	26.0
SK 9072.1	12.7	12.0	29.1	27.5	34.9	33.0	40.7	38.5	20.1	19.0	27.5	26.0
SK 9082.1	22.2	21.0	57.0	54.0	70.0	66.0	85.0	80.0	40.2	38.0	55.0	52.0
SK 9086.1	38.0	36.0	82.0	78.0	96.0	91.0	113	107	56.0	53.0	80.0	76.0
SK 9092.1	42.3	40.0	137	130	163	154	185	175	87.0	82.0	96.0	91.0
SK 9096.1	85.0	80.0	198	187	204	193	272	257	119	113	165	156

Oil Levels shown apply to base models and gear units ending in AZ, AF, VZ, & VF.



# 92 SERIES HELICAL-BEVEL FOOTED OIL FILL QUANTITIES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U12200 - 1 of 1

## 92 Helical-bevel footed lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.




### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

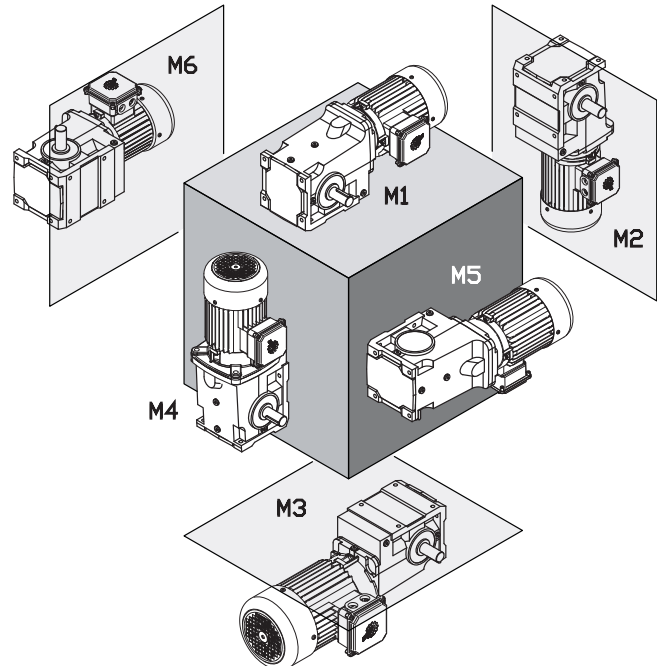

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 92072	0.42	0.40	0.63	0.60	0.53	0.50	0.58	0.55	0.42	0.40	0.42	0.40
SK 92172	0.63	0.60	0.95	0.90	1.06	1.00	1.16	1.10	1.16	1.10	0.85	0.80
SK 92372	0.95	0.90	1.69	1.60	1.59	1.50	2.01	1.90	1.59	1.50	0.95	0.90
SK 92672	1.90	1.80	3.70	3.50	3.80	3.60	3.59	3.40	2.75	2.60	2.75	2.60
SK 92772	2.43	2.30	4.76	4.50	4.86	4.60	5.60	5.30	4.33	4.10	4.33	4.10

Oil Levels shown apply to base models and gear units ending in LX, AX, & VX.





# 92.1/93.1 SERIES HELICAL-BEVEL OIL FILL QUANTITIES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U12205 - 1 of 1

## 92.1/93.1 Helical-bevel lubrication

All NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size & mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.




### HARMFUL SITUATION




Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

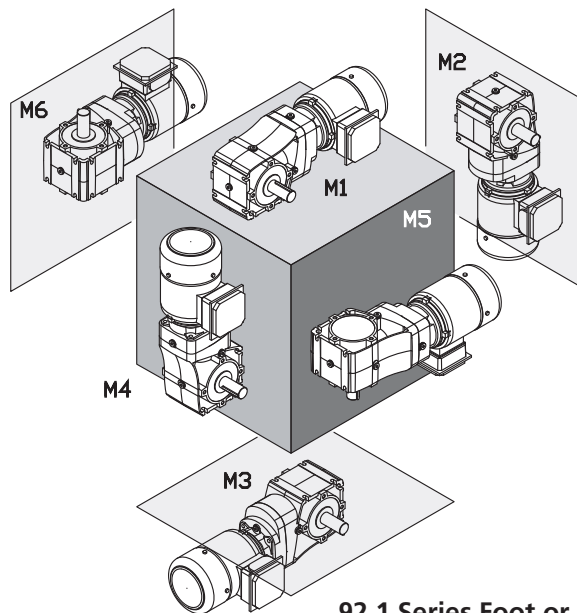

**92.1 Series Foot or  
Flange Mount**

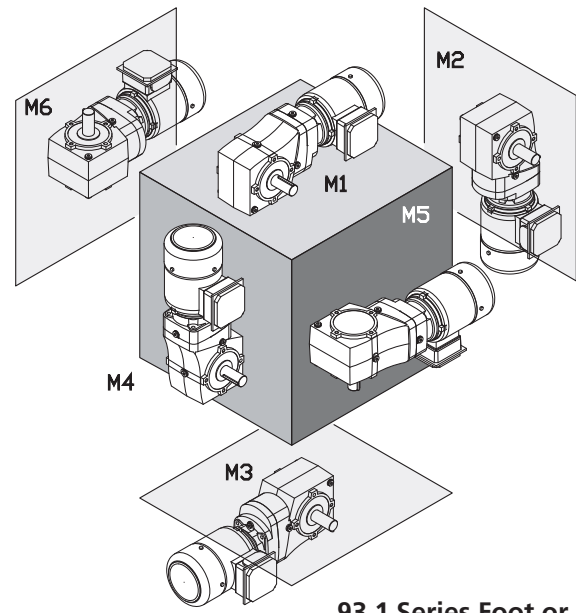

**93.1 Series Foot or  
Flange Mount**

### 92.1 Series Oil Fill

	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 92072.1	0.28	0.26	0.52	0.49	0.44	0.42	0.57	0.54	0.31	0.29	0.33	0.31
SK 92172.1	0.36	0.34	0.65	0.61	0.55	0.52	0.71	0.67	0.44	0.42	0.51	0.48
SK 92372.1	0.45	0.43	0.97	0.92	0.77	0.73	0.88	0.83	0.58	0.55	0.65	0.61
SK 92672.1	0.90	0.85	1.69	1.60	1.27	1.20	1.59	1.50	1.08	1.02	1.08	1.02
SK 92772.1	1.37	1.30	2.80	2.65	1.97	1.86	2.59	2.45	1.69	1.60	1.69	1.60

Oil levels shown apply to all foot & flange mounted units.

### 93.1 Series Oil Fill

	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 93072.1	0.41	0.39	0.98	0.93	0.84	0.79	1.08	1.02	0.52	0.49	0.66	0.62
SK 93172.1	0.63	0.60	1.24	1.17	0.99	0.94	1.29	1.22	0.69	0.65	0.90	0.85
SK 93372.1	1.06	1.00	2.08	1.97	1.74	1.65	2.26	2.14	1.18	1.12	1.42	1.34
SK 93672.1	1.90	1.80	3.41	3.23	2.86	2.71	4.44	4.20	2.13	2.02	2.59	2.45
SK 93772.1	2.87	2.72	4.89	4.63	3.91	3.70	5.71	5.40	3.10	2.93	3.43	3.25

Oil levels shown apply to all foot & flange mounted units.

**NORD Gear Limited**  
Toll Free in Canada: 800.668.4378

**NORD Gear Corporation**  
Toll Free in the United States: 888.314.6673



DRIVESYSTEMS

# 92 SERIES HELICAL-BEVEL FLANGED OIL FILL QUANTITIES



U12300 - 1 of 1

## 92 Helical-bevel flanged lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.




### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

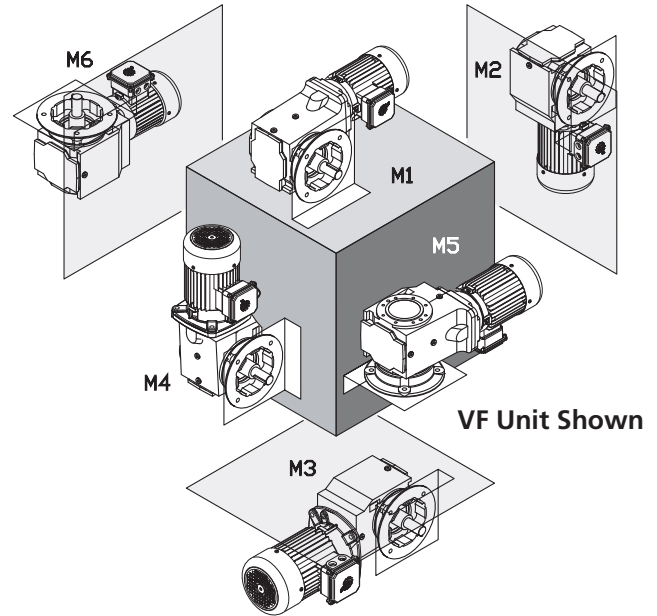

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 92072	0.42	0.40	0.63	0.60	0.58	0.55	0.58	0.55	0.42	0.40	0.42	0.40
SK 92172	0.53	0.50	1.06	1.00	0.95	0.90	1.11	1.05	0.95	0.90	0.63	0.60
SK 92372	1.27	1.20	1.69	1.60	1.59	1.50	2.01	1.90	1.37	1.30	1.37	1.30
SK 92672	1.69	1.60	2.96	2.80	2.64	2.50	3.49	3.30	2.54	2.40	2.54	2.40
SK 92772	2.96	2.80	4.65	4.40	4.76	4.50	5.81	5.50	3.70	3.50	3.70	3.50

Oil Levels shown apply to gear units ending in AZ, AF, VZ, & VF.



DRIVESYSTEMS

# HELICAL-WORM FOOTED OIL FILL QUANTITIES



U12400 - 1 of 1

RETAIN FOR FUTURE USE

## Helical-worm footed lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.




### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

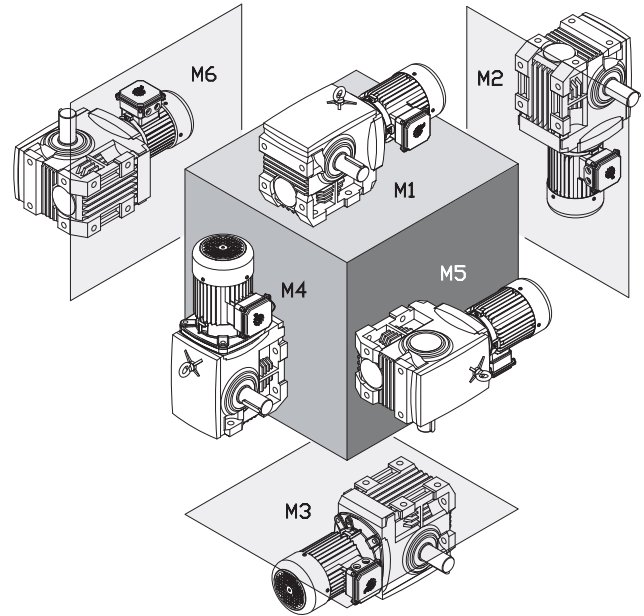

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 02040	0.42	0.40	0.85	0.80	0.79	0.75	0.69	0.65	0.53	0.50	0.53	0.50
SK 02050	0.42	0.40	1.48	1.40	1.16	1.10	1.37	1.30	0.74	0.70	0.74	0.70
SK 13050	0.79	0.75	1.85	1.75	1.37	1.30	1.85	1.75	0.79	0.75	0.79	0.75
SK 12063	0.63	0.60	1.90	1.80	1.27	1.20	1.69	1.60	1.06	1.00	1.06	1.00
SK 13063	1.06	1.00	2.43	2.30	1.59	1.50	2.32	2.20	1.16	1.10	1.16	1.10
SK 12080	0.95	0.90	3.28	3.10	2.54	2.40	3.17	3.00	1.90	1.80	1.90	1.80
SK 13080	1.80	1.70	3.70	3.50	3.70	3.50	3.70	3.50	2.11	2.00	2.11	2.00
SK 32100	1.59	1.50	6.66	6.30	5.92	5.60	5.81	5.50	3.80	3.60	3.80	3.60
SK 33100	2.54	2.40	6.76	6.40	5.71	5.40	6.87	6.50	3.59	3.40	3.59	3.40
SK 42125	2.96	2.80	12.5	11.8	10.8	10.2	10.6	10.0	6.55	6.20	6.55	6.20
SK 43125	4.49	4.25	13.7	13.0	11.1	10.5	14.3	13.5	7.61	7.20	7.61	7.20



# HELICAL-WORM SOLID SHAFT/FLANGED OIL FILL QUANTITIES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U12500 - 1 of 1

## Helical-worm solid shaft/flanged lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.




### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

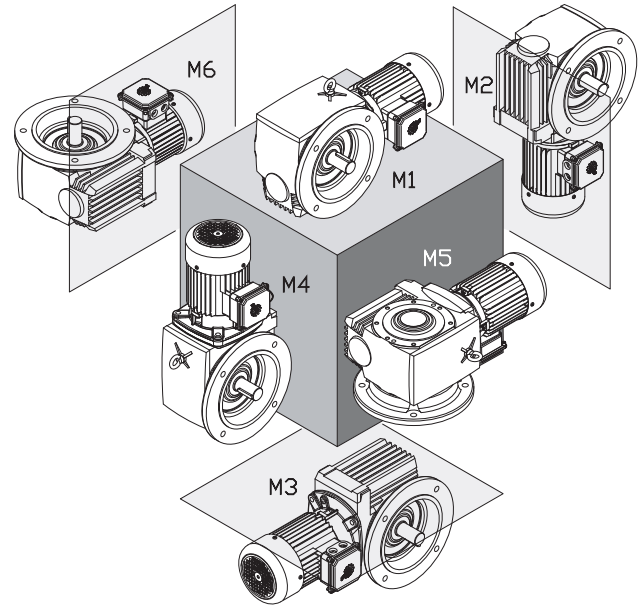

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 02040 VF	0.53	0.50	0.85	0.80	0.79	0.75	0.63	0.60	0.53	0.50	0.53	0.50
SK 02050 VF	0.42	0.40	1.59	1.50	1.32	1.25	1.27	1.20	0.95	0.90	0.79	0.75
SK 13050 VF	0.79	0.75	1.90	1.80	1.59	1.50	1.80	1.70	1.11	1.05	0.95	0.90
SK 12063 VF	0.53	0.50	2.06	1.95	1.80	1.70	1.85	1.75	1.27	1.20	1.00	0.95
SK 13063 VF	1.06	1.00	2.43	2.30	2.01	1.90	2.32	2.20	1.43	1.35	1.16	1.10
SK 12080 VF	0.95	0.90	3.91	3.70	3.38	3.20	3.59	3.40	2.64	2.50	2.43	2.30
SK 13080 VF	1.69	1.60	4.02	3.80	3.70	3.50	4.12	3.90	2.85	2.70	2.64	2.50
SK 32100 VF	1.48	1.40	6.66	6.30	6.45	6.10	6.45	6.10	4.23	4.00	3.80	3.60
SK 33100 VF	2.80	2.65	7.61	7.20	6.76	6.40	8.03	7.60	4.54	4.30	4.02	3.80
SK 42125 VF	3.17	3.00	12.2	11.5	12.2	11.5	11.6	11.0	8.88	8.40	7.71	7.30
SK 43125 VF	4.97	4.70	15.9	15.0	13.7	13.0	16.9	16.0	9.51	9.00	8.14	7.70



# HELICAL-WORM HOLLOW SHAFT OIL FILL QUANTITIES



DRIVESYSTEMS

RETAIN FOR FUTURE USE

U12600 - 1 of 1

## Helical-worm hollow shaft lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.


STOP

**HARMFUL SITUATION**

STOP

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

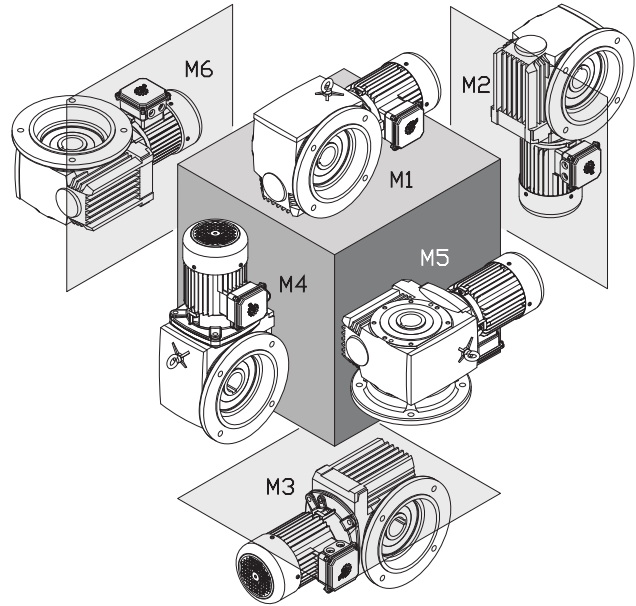

AF Unit Shown

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 02040	0.42	0.40	0.74	0.70	0.69	0.65	0.69	0.65	0.58	0.55	0.58	0.55
SK 02050	0.48	0.45	1.48	1.40	1.22	1.15	1.16	1.10	0.79	0.75	0.79	0.75
SK 13050	0.95	0.90	1.90	1.80	1.37	1.30	1.74	1.65	1.37	1.30	1.37	1.30
SK 12063	0.58	0.55	1.53	1.45	1.69	1.60	1.69	1.60	1.16	1.10	1.16	1.10
SK 13063	1.11	1.05	2.22	2.10	1.90	1.80	2.22	2.10	1.48	1.40	1.48	1.40
SK 12080	0.85	0.80	3.28	3.10	3.38	3.20	2.96	2.80	1.90	1.80	1.90	1.80
SK 13080	1.69	1.60	3.80	3.60	3.06	2.90	3.96	3.75	2.11	2.00	2.11	2.00
SK 32100	1.59	1.50	5.92	5.60	5.92	5.60	5.60	5.30	4.23	4.00	4.23	4.00
SK 33100	2.75	2.60	6.34	6.00	6.13	5.80	6.34	6.00	3.70	3.50	3.70	3.50
SK 42125	3.17	3.00	13.2	12.5	11.4	10.8	11.4	10.8	6.87	6.50	6.87	6.50
SK 43125	4.86	4.60	14.4	13.6	12.0	11.4	15.1	14.3	8.03	7.60	8.03	7.60

Oil Levels shown apply to gear units ending in AZ, AF.

**NORD Drivesystems**

Línea gratuita en México: 800.836.9192

**NORD Gear Corporation**

Línea gratuita en Estados Unidos: 888.314.6673

12.22.14

[www.nord.com/docs](http://www.nord.com/docs)



DRIVESYSTEMS


# NORDBLOC® FOOTED OIL FILL QUANTITIES



U12700 - 1 of 1

## NORDBLOC® footed lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

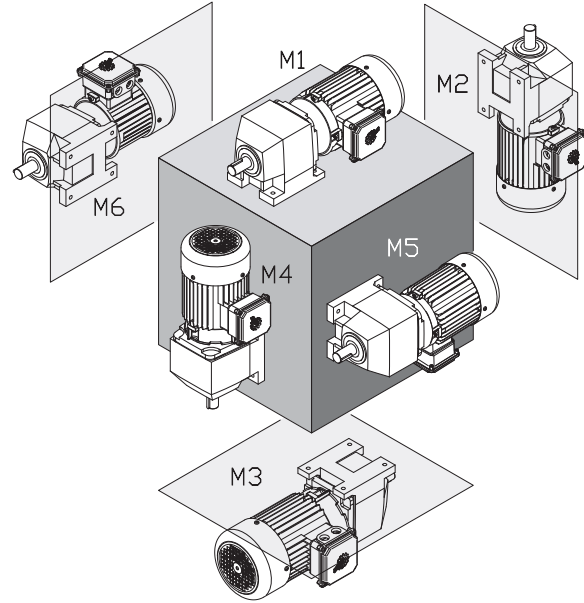

### HARMFUL SITUATION

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 172	0.37	0.35	0.53	0.50	0.53	0.50	0.53	0.50	0.53	0.50	0.53	0.50
SK 272	0.63	0.60	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00
SK 273	0.66	0.62	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10
SK 372	0.63	0.60	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00
SK 373	0.58	0.55	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10
SK 472	1.06	1.00	2.01	1.90	2.01	1.90	2.11	2.00	1.90	1.80	1.90	1.80
SK 473	1.37	1.30	2.64	2.50	2.22	2.10	2.54	2.40	2.22	2.10	2.22	2.10
SK 572	1.06	1.00	2.01	1.90	2.01	1.90	2.11	2.00	1.90	1.80	1.90	1.80
SK 573	1.37	1.30	2.64	2.50	2.22	2.10	2.54	2.40	2.22	2.10	2.22	2.10
SK 672	1.48	1.40	3.59	3.40	3.28	3.10	3.33	3.15	1.53	1.45	3.33	3.15
SK 673	1.90	1.80	4.02	3.80	3.38	3.20	3.59	3.40	3.06	2.90	3.17	3.00
SK 772	2.11	2.00	3.49	3.30	3.70	3.50	4.44	4.20	2.85	2.70	3.49	3.30
SK 773	2.64	2.50	4.76	4.50	3.91	3.70	4.86	4.60	3.49	3.30	3.49	3.30
SK 872	3.91	3.70	10.1	9.60	9.62	9.10	7.71	7.30	4.97	4.70	8.45	8.00
SK 873	6.55	6.20	8.88	8.40	7.93	7.50	9.62	9.10	7.93	7.50	7.93	7.50
SK 972	6.87	6.50	16.9	16.0	16.6	15.7	15.5	14.7	8.98	8.50	14.8	14.0
SK 973	11.6	11.0	16.7	15.8	13.7	13.0	16.9	16.0	14.1	13.3	13.7	13.0





DRIVESYSTEMS

# NORDBLOC® FLANGED OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U12800 - 1 of 1

## NORDBLOC® flanged lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

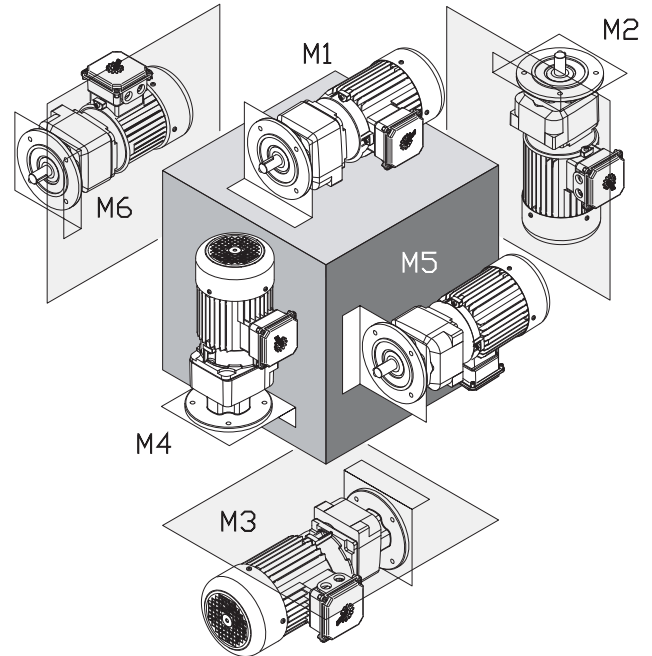

**HARMFUL SITUATION**

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Mounting Position	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK 172 F	0.37	0.35	0.53	0.50	0.53	0.50	0.53	0.50	0.53	0.50	0.53	0.50
SK 272 F	0.63	0.60	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00
SK 273 F	0.66	0.62	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10
SK 372 F	0.63	0.60	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00	1.06	1.00
SK 373 F	0.58	0.55	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10	1.16	1.10
SK 472 F	1.06	1.00	2.01	1.90	2.01	1.90	2.01	1.90	2.01	1.90	1.59	1.50
SK 473 F	1.32	1.25	2.54	2.40	2.22	2.10	2.64	2.50	2.22	2.10	2.22	2.10
SK 572 F	1.06	1.00	2.01	1.90	2.01	1.90	2.01	1.90	2.01	1.90	1.59	1.50
SK 573 F	1.32	1.25	2.54	2.40	2.22	2.10	2.64	2.50	2.22	2.10	2.22	2.10
SK 672 F	1.22	1.15	3.59	3.40	2.85	2.70	2.96	2.80	1.32	1.25	2.85	2.70
SK 673 F	1.80	1.70	4.02	3.80	3.17	3.00	3.38	3.20	3.17	3.00	3.17	3.00
SK 772 F	1.69	1.60	3.49	3.30	3.70	3.50	3.49	3.30	3.28	3.10	3.28	3.10
SK 773 F	2.43	2.30	5.28	5.00	3.80	3.60	4.76	4.50	4.12	3.90	4.12	3.90
SK 872 F	3.70	3.50	9.51	9.00	8.35	7.90	8.14	7.70	4.12	3.90	7.61	7.20
SK 873 F	5.28	5.00	9.30	8.80	8.03	7.60	8.45	8.00	8.45	8.00	8.45	8.00
SK 972 F	6.87	6.50	15.9	15.0	13.7	13.0	14.3	13.5	6.87	6.50	12.7	12.0
SK 973 F	10.9	10.3	17.4	16.5	13.7	13.0	16.9	16.0	14.8	14.0	14.8	14.0



DRIVESYSTEMS


# NORDBLOC®.1 FOOTED OIL FILL QUANTITIES



U12900 - 1 of 1

## NORDBLOC®.1 footed lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

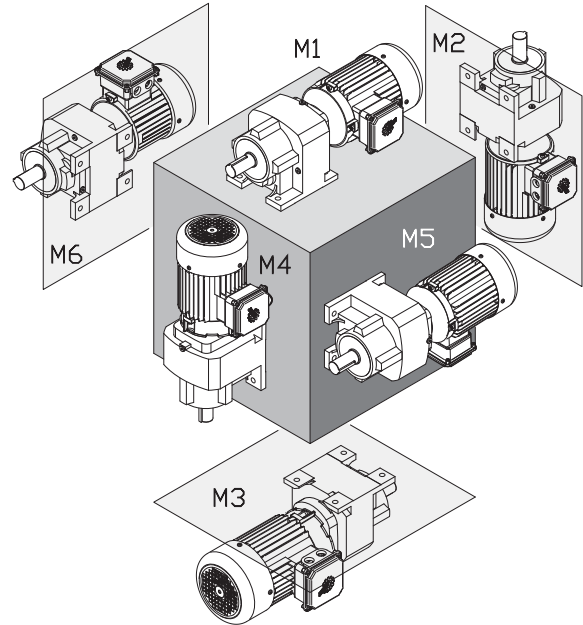

**HARMFUL SITUATION**

Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK072.1	0.17	0.16	0.34	0.32	0.22	0.21	0.24	0.23	0.19	0.18	0.21	0.20
SK172.1	0.29	0.27	0.62	0.59	0.44	0.42	0.48	0.45	0.34	0.32	0.41	0.39
SK372.1	0.48	0.45	1.11	1.05	0.79	0.75	1.06	1.00	0.63	0.60	0.69	0.65
SK373.1	0.48	0.45	1.11	1.05	0.79	0.75	1.06	1.00	0.63	0.60	0.69	0.65
SK572.1	0.79	0.75	2.01	1.90	1.59	1.50	2.11	2.00	1.16	1.10	1.22	1.15
SK573.1	0.79	0.75	2.01	1.90	1.59	1.50	2.11	2.00	1.16	1.10	1.22	1.15
SK672.1	1.16	1.10	2.75	2.60	2.27	2.15	2.85	2.70	1.64	1.55	1.74	1.65
SK673.1	1.16	1.10	2.75	2.60	2.27	2.15	2.85	2.70	1.64	1.55	1.74	1.65
SK772.1	1.37	1.30	4.02	3.80	2.54	2.40	3.38	3.20	1.69	1.60	2.64	2.50
SK773.1	2.43	2.30	4.02	3.80	3.49	3.30	3.38	3.20	2.54	2.40	3.28	3.10
SK872.1	3.06	2.90	8.24	7.80	4.86	4.60	6.76	6.40	2.64	2.50	4.23	4.00
SK873.1	4.44	4.20	8.24	7.80	6.23	5.90	6.76	6.40	4.33	4.10	6.23	5.90
SK972.1	4.76	4.50	12.7	12.0	7.93	7.50	12.2	11.5	4.44	4.20	7.93	7.50
SK973.1	7.93	7.50	12.7	12.0	11.1	10.5	12.2	11.5	7.93	7.50	11.1	10.5
SK772.1VL	2.11	2.00	4.02	3.80	2.54	2.40	3.38	3.20	1.69	1.60	2.64	2.50
SK773.1VL	2.43	2.30	4.02	3.80	3.49	3.30	3.38	3.20	2.54	2.40	3.28	3.10
SK872.1VL	5.28	5.00	8.24	7.80	4.86	4.60	6.76	6.40	2.64	2.50	4.23	4.00
SK873.1VL	4.44	4.20	8.24	7.80	6.23	5.90	6.76	6.40	4.33	4.10	6.23	5.90
SK972.1VL	8.98	8.50	12.7	12.0	7.93	7.50	12.2	11.5	4.44	4.20	7.93	7.50
SK973.1VL	7.93	7.50	12.7	12.0	11.1	10.5	12.2	11.5	7.93	7.50	11.1	10.5





DRIVESYSTEMS

# NORDBLOC®.1 FLANGED OIL FILL QUANTITIES




RETAIN FOR FUTURE USE

U13000 - 1 of 1

## NORDBLOC®.1 flanged lubrication

The following NORD Gear reducers are shipped from the factory with a pre-determined oil fill level in accordance to the specified reducer size and mounting position. For additional information, please refer to the "Oil Plug & Vent Locations" documentation for your gear unit.

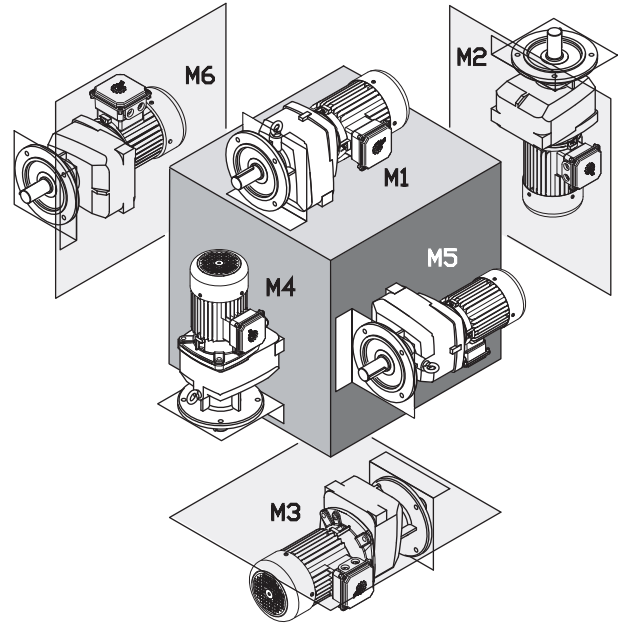

### HARMFUL SITUATION



Actual oil volume can vary slightly depending upon the gear case size, mounting and ratio. Prior to commissioning the reducer, check the oil-fill level using the reducer's oil level plug and drain or add additional oil as needed. The minimum acceptable oil level is 0.15 in (4mm) below the oil level hole.

For mounting orientations other than shown please consult NORD Gear. Reducer modifications may be required.

Type	M1		M2		M3		M4		M5		M6	
	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters	Quarts	Liters
SK072.1 F	0.17	0.16	0.34	0.32	0.22	0.21	0.24	0.23	0.19	0.18	0.21	0.20
SK172.1 F	0.29	0.27	0.62	0.59	0.44	0.42	0.48	0.45	0.34	0.32	0.41	0.39
SK372.1 F	0.48	0.45	1.11	1.05	0.79	0.75	1.06	1.00	0.63	0.60	0.69	0.65
SK373.1 F	0.48	0.45	1.11	1.05	0.79	0.75	1.06	1.00	0.63	0.60	0.69	0.65
SK572.1 F	0.79	0.75	2.01	1.90	1.59	1.50	2.11	2.00	1.16	1.10	1.22	1.15
SK573.1 F	0.79	0.75	2.01	1.90	1.59	1.50	2.11	2.00	1.16	1.10	1.22	1.15
SK672.1 F	1.16	1.10	2.75	2.60	2.27	2.15	2.85	2.70	1.64	1.55	1.74	1.65
SK673.1 F	1.16	1.10	2.75	2.60	2.27	2.15	2.85	2.70	1.64	1.55	1.74	1.65
SK772.1 F	1.37	1.30	4.02	3.80	2.54	2.40	3.49	3.30	1.80	1.70	2.54	2.40
SK773.1 F	2.11	2.00	3.70	3.50	3.38	3.20	3.06	2.90	2.43	2.30	3.17	3.00
SK872.1 F	3.06	2.90	7.93	7.50	5.39	5.10	7.08	6.70	2.75	2.60	4.54	4.30
SK873.1 F	4.33	4.10	8.03	7.60	7.29	6.90	6.97	6.60	5.28	5.00	6.97	6.60
SK973.1 F	7.82	7.40	12.9	12.2	11.7	11.1	12.3	11.6	8.45	8.00	11.5	10.9
SK972.1 F	4.76	4.50	13.2	12.5	8.45	8.00	13.2	12.5	4.76	4.50	8.14	7.70
SK772.1F VL	2.11	2.00	4.02	3.80	2.54	2.40	3.49	3.30	1.80	1.70	2.54	2.40
SK773.1F VL	2.11	2.00	3.70	3.50	3.38	3.20	3.06	2.90	2.43	2.30	3.17	3.00
SK872.1F VL	5.28	5.00	7.93	7.50	5.39	5.10	7.08	6.70	2.75	2.60	4.54	4.30
SK873.1F VL	4.33	4.10	8.03	7.60	7.29	6.90	6.97	6.60	5.28	5.00	6.97	6.60
SK972.1F VL	8.98	8.50	13.2	12.5	8.45	8.00	13.2	12.5	4.76	4.50	8.14	7.70
SK973.1F VL	7.82	7.40	12.9	12.2	11.7	11.1	12.3	11.6	8.45	8.00	11.5	10.9

**NORD Gear Limited**

Toll Free in Canada: 800.668.4378

**NORD Gear Corporation**

Toll Free in the United States: 888.314.6673

12.22.14

www.nord.com/doc152